



**XDG Dual-Channel Series
Arbitrary Waveform Generator
User Manual**

www.owon.com.cn

Mar. 2019 Edition V1.0.3

Copyright © LILLIPUT Company. All rights reserved.

The LILLIPUT's products are under the protection of the patent rights, including ones which have already obtained the patent rights and those which are applied for. The information in this manual will replace all materials published.

The information in this manual was correct at the time of printing. However, LILLIPUT will continue to improve products and reserves the rights to change specification at any time without notice.

owon[®] is the registered trademark of the LILLIPUT Company.

Fujian LILLIPUT Optoelectronics Technology Co., Ltd.

No. 19, Heming Road

Lantian Industrial Zone, Zhangzhou 363005 P.R. China

Tel: +86-596-2130430

Fax: +86-596-2109272

Web: www.owon.com.cn

E-mail: info@owon.com.cn

General Warranty

OWON warrants that the product will be free from defects in materials and workmanship for a period of 3 years from the date of purchase of the product by the original purchaser from the OWON Company. The warranty period for accessories such as probes, battery is 12 months. This warranty only applies to the original purchaser and is not transferable to a third party.

If the product proves defective during the warranty period, OWON will either repair the defective product without charge for parts and labour, or will provide a replacement in exchange for the defective product. Parts, modules and replacement products used by OWON for warranty work may be new or reconditioned like new. All replaced parts, modules and products become the property of OWON.

In order to obtain service under this warranty, the customer must notify OWON of the defect before the expiration of the warranty period. Customer shall be responsible for packaging and shipping the defective product to OWON's designated service centre, a copy of the customers proof of purchase is also required.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. OWON shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than OWON representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; c) to repair any damage or malfunction caused by the use of non-OWON supplies; or d) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

Please contact the nearest OWON's Sales and Service Offices for services or a complete copy of the warranty statement.

For better after-sales service, please visit www.owon.com.cn and register the purchased product online.

Excepting the after-sales services provided in this summary or the applicable warranty statements, OWON will not offer any guarantee for maintenance definitely declared or hinted, including but not limited to the implied guarantee for marketability and special-purpose acceptability. OWON should not take any responsibilities for any indirect, special or consequent damages.

Table of Contents

1. General Safety Requirement	1
2. Safety Terms and Symbols.....	2
3. Introduction	3
4. Quick start.....	4
Front panel.....	4
Rear Panel	6
Power On.....	7
User Interface.....	8
Use Build-in Help.....	9
5. Panel Operation	10
Channel Setting	10
Select the channel for configuration	10
Turn On/Off Channel Output.....	10
Channel Copy	10
Waveform Setting.....	10
Output Sine Wave	11
Set the frequency/period	11
Set the amplitude.....	12
Set the offset.....	12
Set the high level.....	12
Set the low level	12
Set the start phase	13
Output Square Wave	13
Output Ramp Wave.....	14
Set the symmetry	14
Output Pulse Wave.....	15
Set the pulse width/duty cycle.....	18
Set the rising/falling time	19
Output Noise Wave	19
Output Arbitrary Wave.....	20
Choose build-in waves.....	21
Output Harmonic Wave.....	26
Harmonic wave function overview	26
Select the harmonic type	26
Set the harmonic times	27
Set the harmonic number	27
Set the harmonic amplitude.....	27
Set the harmonic phase	27

Output the modulated waves	28
Amplitude Modulation(AM).....	28
Frequency Modulation (FM)	30
Phase Modulation (PM)	32
Pulse Width Modulation (PWM).....	33
Amplitude shift keying (ASK)	34
Phase Shift Keying (PSK)	36
Frequency Shift Keying (FSK).....	38
Hexadecimal frequency shift keying (3FSK).....	39
Quaternary frequency shift keying (4FSK).....	40
Binary phase shift keying (BPSK)	41
Oscillating keying (OSK).....	42
Output the sweep frequency (Sweep)	44
Output the burst (Burst).....	45
Set N cycle burst.....	46
Set the gated burst.....	47
Counter	48
Utility function setting	49
Display Setting.....	49
Brightness Control.....	49
Screen Saver	50
Separator.....	50
Date	50
CH1/2 Settings.....	50
Synchronize	50
Output Setting.....	51
Set the load	51
Interface Setting.....	52
System Setting.....	53
Select the language	53
Buzzer.....	53
Clock source	53
Clock Output.....	54
Firmware update.....	54
Restore to factory setting.....	54
Edit the Arbitrary Wave (Edit).....	58
File system (Store).....	59
Save Current Arbitrary Wave.....	60
Bring up arbitrary wave files in internal/external memory.....	60
Clear waveform from memory	61
Save/recall instrument settings (Preset).....	61
Use build-in help (Help)	62
6. Communicate with PC.....	63

Using USB Port.....	63
Using LAN Port	63
Connect Directly.....	63
Connect through a Router.....	64
7. Troubleshooting	66
8. Specification.....	67
9. Appendix.....	74
Appendix A: Accessories.....	74
Appendix B: Maintenance and cleaning.....	74

1. General Safety Requirement

Before use, please read the following safety precautions to avoid any possible bodily injury and to prevent this product or any other connected products from damage. In order to avoid any contingent danger, ensure this product is only used within the range specified.

Only the qualified technicians can implement the maintenance.

To avoid Fire or Personal Injury:

- **Use Proper Power Cord.** Use only the power cord supplied with the product and certified to use in your country.
- **Product Grounded.** This instrument is grounded through the power cord grounding conductor. To avoid electric shock, the grounding conductor must be grounded. The product must be grounded properly before any connection with its input or output terminal.
- **Check all Terminal Ratings.** To avoid fire or shock hazard, check all ratings and markers of this product. Refer to the user's manual for more information about ratings before connecting to the instrument.
- **Do not operate without covers.** Do not operate the instrument with covers or panels removed.
- **Use Proper Fuse.** Use only the specified type and rating fuse for this instrument.
- **Avoid exposed circuit.** Do not touch exposed junctions and components when the instrument is powered.
- **Do not operate if in any doubt.** If you suspect damage occurs to the instrument, have it inspected by qualified service personnel before further operations.
- **In well-ventilated area.** Make sure the instrument installed with proper ventilation, refer to the user manual for more details.
- **Do not operate in wet conditions.**
- **Do not operate in an explosive atmosphere.**
- **Keep product surfaces clean and dry.**

2. Safety Terms and Symbols

Safety Terms

Terms in this manual. The following terms may appear in this manual:



Warning: Warning indicates the conditions or practices that could result in injury or loss of life.



Caution : Caution indicates the conditions or practices that could result in damage to this product or other property.

Terms on the product. The following terms may appear on this product:

Danger: It indicates an injury or hazard may immediately happen.

Warning: It indicates an injury or hazard may be accessible potentially.

Caution: It indicates a potential damage to the instrument or other property might occur.

Safety Symbols

Symbols on the product. The following symbol may appear on the product:



Hazardous Voltage



Refer to Manual



Protective Earth Terminal



Chassis Ground



Test Ground

3. Introduction

This product is a dual-channel multi-function signal generator integrated with arbitrary waveform generator and function generator. The product uses DDS direct digital frequency synthesis technology to generate stable, accurate and pure output signals; user-friendly interface design and keyboard layout, bringing extraordinary experience to users; support U disk storage, providing users with multiple solutions.

Product Features:

- ◆ 8-inch (800 x 600) high resolution TFT LCD display;
- ◆ Advanced DDS technology with a maximum output frequency of 200 MHz;
- ◆ 1.25G Sa/s maximum sampling rate, 1 μ Hz frequency resolution;
- ◆ 14 bits vertical resolution, up to 10 M point waveform length;
- ◆ Rich waveform output: 6 basic waveforms, built-in exponential rise, exponential decay, $\sin(x)/x$, step wave, etc. More than 150 built-in waveforms and user-defined waveforms;
- ◆ Rich modulation functions and output linear/logarithmic sweep and burst waveforms;
- ◆ Interface: USB Host, USB Device (Type B), LAN.

4. Quick start

Front panel

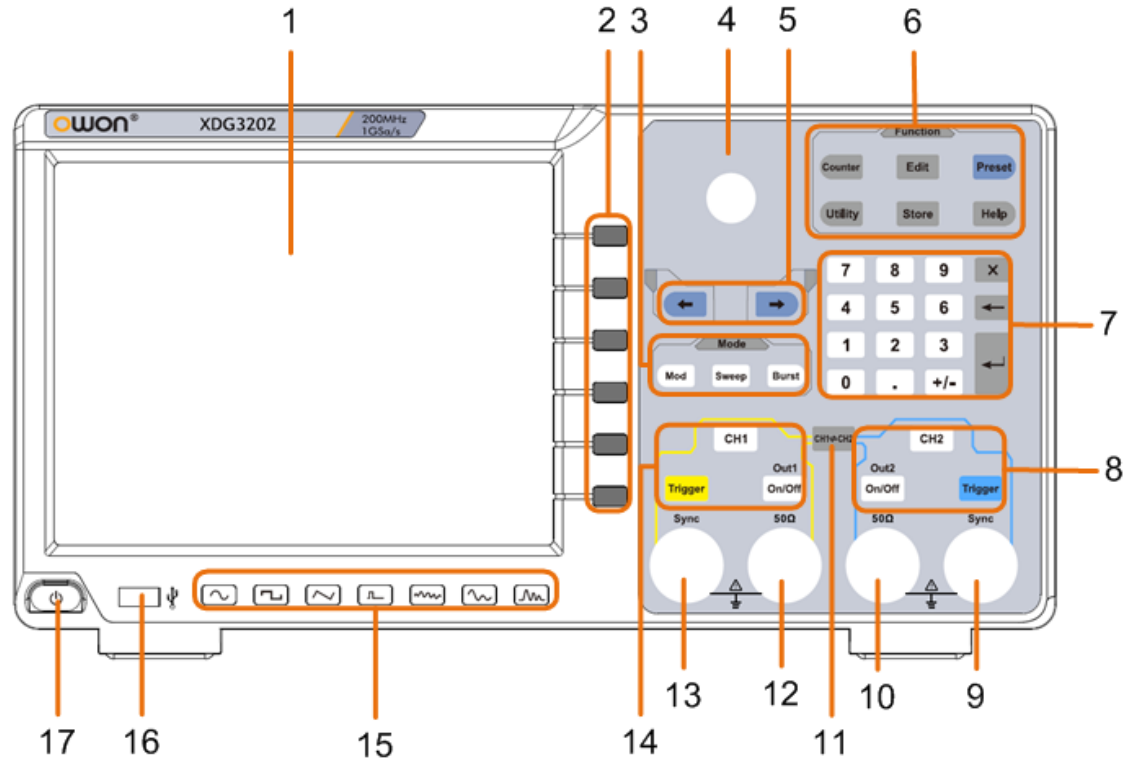






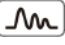


Figure 4-1 Front Panel overview

1	Display Area	Display user interface
2	Menu Selection Button	Includes 6 buttons to select the corresponding menu softkey
3	Mode Button Area	<p>Modulation (Mod): Output modulation waveform</p> <p>Sweep: Scan a sine wave, square wave, ramp wave or arbitrary wave</p> <p>Burst: A burst that produces a sine wave, square wave, ramp wave, pulse wave, or arbitrary wave.</p>
4	Knob	Change the currently selected value, also used to select the character in the soft keyboard when the file location or file name is entered.
5	Direction Button	Move the cursor of the selected parameter
6	Function Button Area	<p>Counter: Enter the frequency meter interface</p> <p>Wave Edit (Edit): enter the waveform editing interface</p> <p>Preset: Enter the preset menu, set the reset parameters or</p>

		power-on parameters; save or read the settings file.
		Utility: Set the auxiliary system function
		Store: Save/recall arbitrary waveform data
		Help: To get context help for any front panel button or menu softkey, press the button and then press the button for which you need help.
7	Numerical Keypad	Input the parameter
8	CH2 Button Area	<p>CH2 key: Enter the waveform interface and select the CH2 channel (the backlight of the button lights up). After selecting, the waveform and parameters of CH2 can be set.</p> <p>Blue Trigger button: CH2 manual trigger button. In sweep or burst mode, when the trigger source is selected as “Manual”, each press of this button will initiate a trigger.</p> <p>On/Off key: Turns the output of the CH2 channel on or off. When the output is turned on, the backlight of the button lights up.</p>
9	CH2 Sync Output Terminal	When Utility → CH1/2 Set → CH2 Sync turned on, this terminal outputs a sync signal that matches the current configuration of CH2.
10	CH2 Output Terminal	Output CH2 signal
11	CH1⇌CH2 Button	Display channel copy menu and menu of frequency synchronization, amplitude synchronization, phase alignment, etc.
12	CH1 Output Terminal	Output CH1 signal
13	CH1 Sync Output Terminal	When Utility → CH1/2 Set → CH1 Sync turned on, this terminal outputs a sync signal that matches the current configuration of CH1.
14	CH1 Button Area	<p>CH1 key: Enter the waveform interface and select the CH1 channel (the backlight of the button lights up). After selecting, the waveform and parameters of CH1 can be set.</p> <p>Yellow Trigger button: CH1 manual trigger button. In sweep or burst mode, when the trigger source is selected as “Manual”, each press of this button will initiate a trigger.</p> <p>On/Off key: Turns the output of the CH1 channel on or off. When the output is turned on, the backlight of the button</p>

lights up.

15 Waveform Selection Area	Including: sine  , square  , ramp  , pulse  , noise  , arbitrary wave  , harmonic waves  . When one waveform is selected, the corresponding backlight will be lit.
16 USB Interface	Connect to an external USB Host device, such as a USB flash drive.
17 Power Button	Turn on/off the waveform generator

Rear Panel

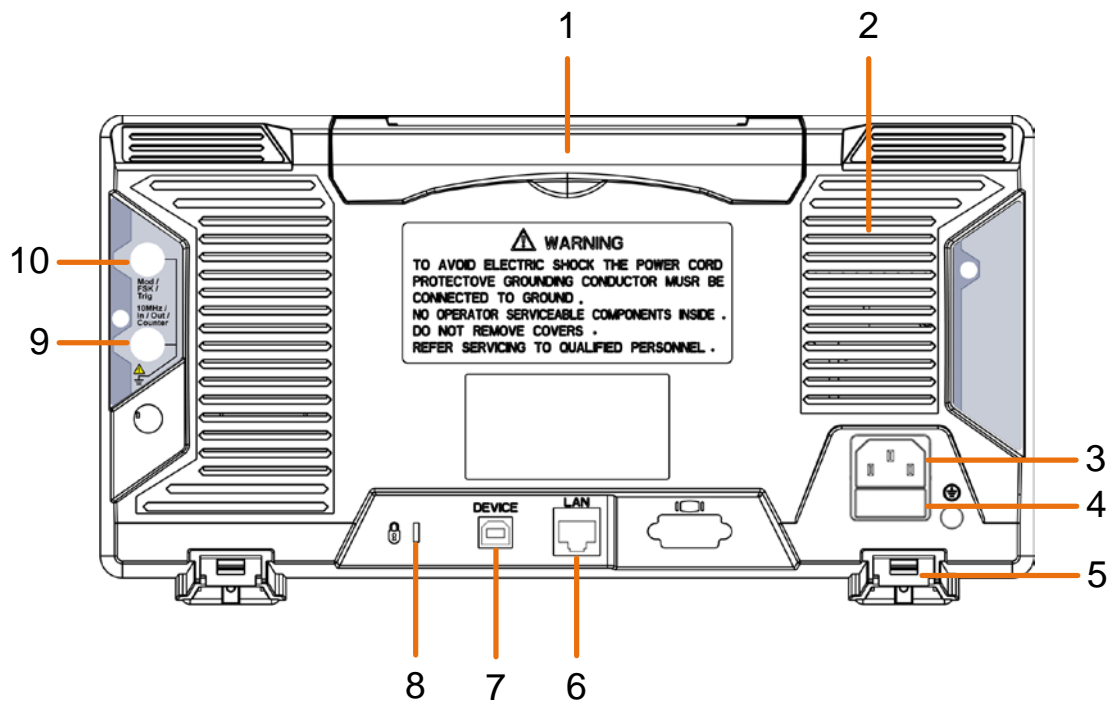


Figure 4-2 Rear Panel Overview

1 Retractable Handle	
2 Vents	
3 Power Input Socket	AC power input interface.
4 Fuse Box	The place to install the fuse.
5 Stool	Tilting the signal generator for easy operation.
6 LAN Interface	The signal generator is connected to the local area network through this interface for remote control.

7 USB Device Interface	Used to connect a USB type B controller. The PC can be connected to communicate with the signal generator through the host computer software.
8 Keyhole	A safety lock (please buy it yourself) can be used to lock the instrument in a fixed position to secure the instrument.
9 10MHz In/Out/Counter(Reference clock input / output / frequency meter input) connector	The default is to receive the frequency meter input signal. Used to receive a 10MHz clock signal when the instrument is set to an internal clock source and Utility → System → CLK output is On; it is used to receive an external 10MHz clock signal when the instrument is set to an external clock source.
10 Mod/FSK/Trig (modulation/trigger input) connector	When modulating the waveform, outputting the sweep frequency, and the burst, the signal accessed here can be used as an external source. Note: If one channel turns on AM, FM, PM, PWM or OSK, and the other channel turns on ASK, FSK, PSK, sweep or burst, and both channels are set to external trigger, then the channel that sets the trigger source can be set later. With an external trigger, the other channel automatically cancels the external trigger because of the different external modulation signal types.

Power On

- (1) Connect the instrument to an AC power source using the power cord supplied with the accessory



Warning:

To prevent electric shock, make sure the instrument is properly grounded.

- (2) Press the **power button** on the front panel and the screen will display the booting screen.

User Interface

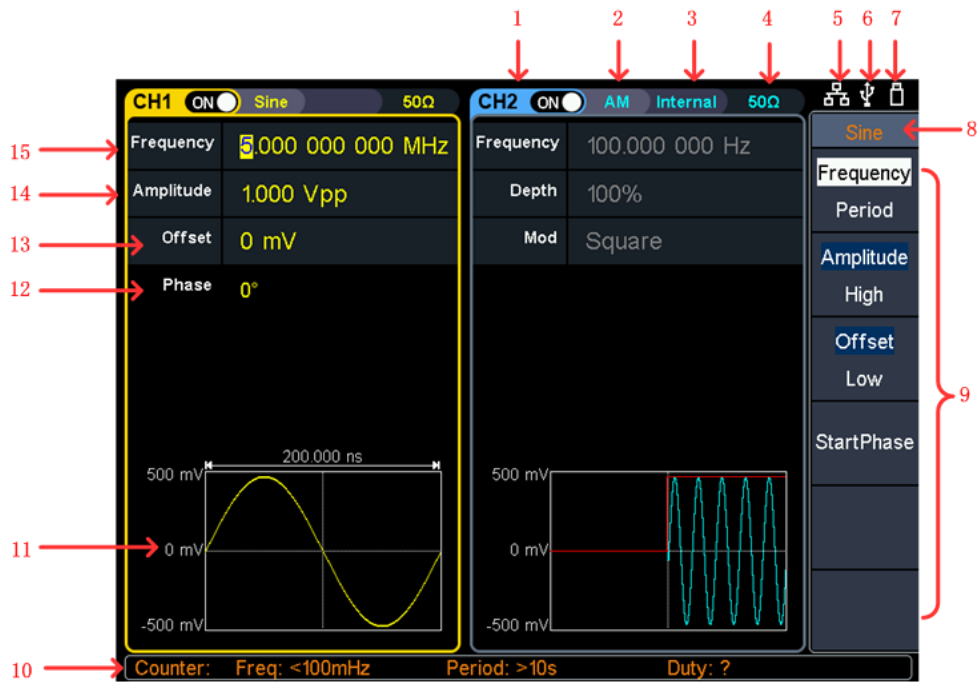


Figure 4-3 User Interface

- | | |
|----|--|
| 1 | Display channel name and channel status |
| 2 | Current waveform or current mode |
| 3 | Trigger source.
Internal: internal modulation or internal trigger source
External: external modulation or external trigger source
Manual: manual trigger source |
| 4 | Load, High Z indicates high resistance |
| 5 | This icon is lit when the network is connected through the LAN |
| 6 | This icon is lit when connected to the USB Host via the USB DEVICE interface. |
| 7 | When the instrument detects the USB flash drive, the icon lights. |
| 8 | Current menu name |
| 9 | Current waveform or mode setting menu |
| 10 | Frequency meter brief information, displays the frequency value, period and the duty value |
| 11 | Display a schematic of the current waveform |
| 12 | Display the current starting phase |
| 13 | Offset / low level, depending on the right highlighted menu item |
| 14 | Amplitude / high level, depending on the right highlighted menu item |

15 Frequency/cycle, depending on the right highlighted menu item

Use Build-in Help

- (1) To get help on any front panel button or menu softkey, press the front panel **Help** function button first, then press the button you need help.
- (2) Press the **Help** function key again to exit the help interface.

5. Panel Operation

Channel Setting

Select the channel for configuration

Before configuring waveform parameters, you must select the channel you want to configure. Press **CH1** or **CH2** to select the corresponding channel, and the corresponding channel area in the user interface will light up







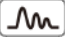
Turn On/Off Channel Output

Press the front panel CH1 **On/Off** or CH2 **On/Off** button to turn the output of the corresponding channel on/off. When the output is turned on, the backlight of the button lights up.

Channel Copy


- (1) Press **CH1⇌CH2** on front panel to display copy menu.
- (2) Select **CH2 to CH1** softkey or **CH1 to CH2** softkey to copy the channel.

Waveform Setting

Sine, square, ramp, pulse, noise, arbitrary or harmonic waves can be set and output. Press the waveform selection button on the instrument front panel: sine , square , ramp , pulse , noise , arbitrary wave , harmonic , and enter the corresponding waveform setting interface. The waveform is different and the parameters that can be set are different.

Note: The following setting waveform uses CH1 channel as an example. If you need to set CH2 channel, please refer to CH1 channel specific operation.

Output Sine Wave

Press , the screen displays the user interface of the sine wave. By operating the sine wave menu on the right side of the screen, you can set the output waveform parameters of the sine wave.

The sine wave menu includes: frequency/period, amplitude/high level, offset/low level, and start phase. The menu can be operated by the menu selection button on the right.

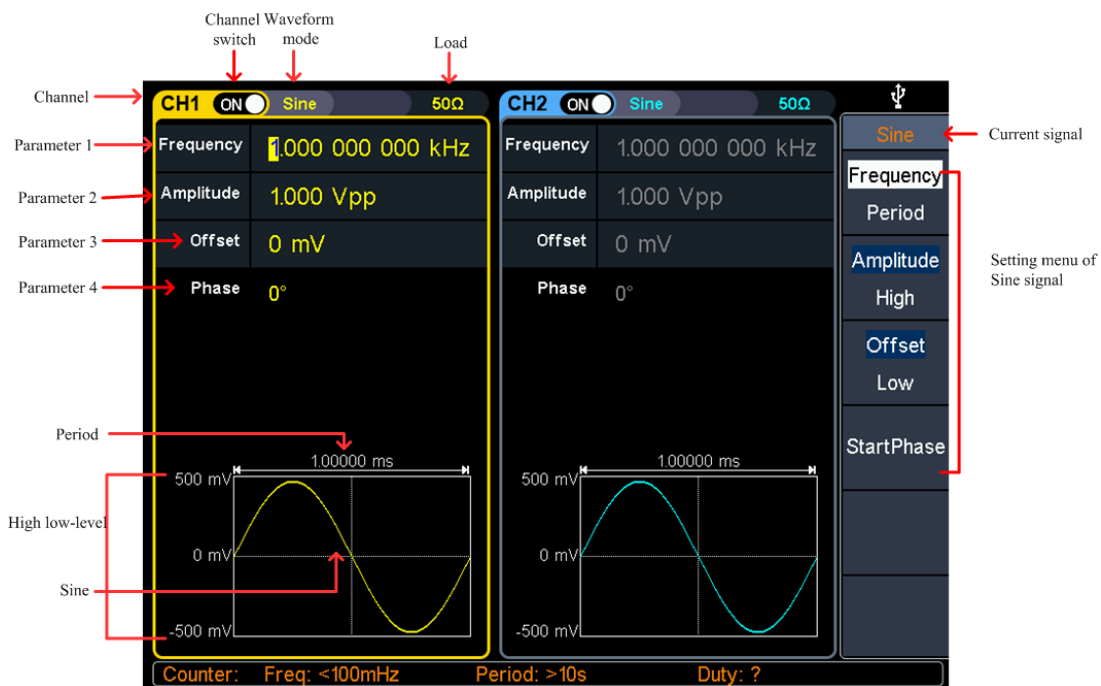





Figure 5-1: Sine wave user interface

Set the frequency/period

- Press **CH1**, all currently selected **CH1** menu items are highlighted
- Press the **Frequency/Period** soft key, the currently selected menu item is highlighted, and the corresponding parameter item is displayed in **parameter 1**. Press the **Frequency/Period** softkey again to switch the frequency and period.

There are two ways to change the selected parameter value:

- Turn the **knob** to increase or decrease the value at the cursor. Press the / arrow key to move the cursor left or right.
- Press a number key on the **numeric keypad** directly, the screen will pop out the data input box, input the desired value. Press the **X** soft key to delete the last digit, press the  soft key to cancel the input, and press the **Enter** soft key to indicate the default unit input. Press the **MHz, kHz, Hz, mHz, mHz** soft keys to

select the unit of the parameter. Press the **Cancel** softkey to cancel the current input parameter value.

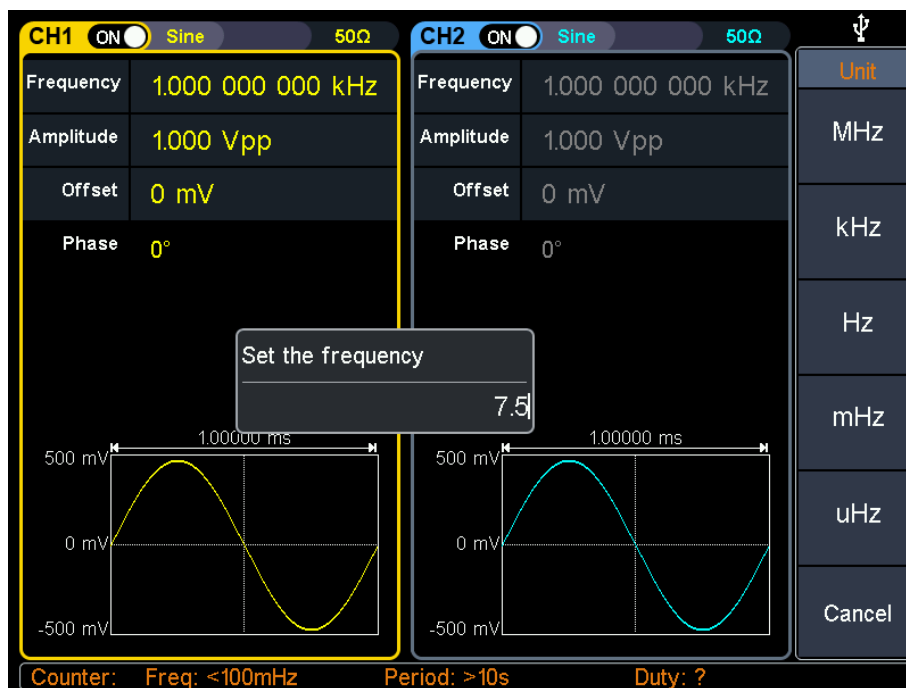


Figure 5-2: Use the numeric keypad to set the frequency

Set the amplitude

Press the **Amplitude/High Level** softkey to confirm whether the **Amplitude** menu item is highlighted; if not, press the **Ampl/High** button to switch to **Amplitude**. In **parameter 2** of Figure 5-1, the parameter value of the amplitude appears as a blinking cursor. Use the **knob** or **numeric keypad** to set the desired value.

Set the offset

Press the **Offset/Low Level** softkey to confirm whether the **Offset** menu item is highlighted; if not, press the **Offset/Low level** key to switch to **Offset**. In **parameter 3** of Figure 5-1, the parameter value of the offset appears as a blinking cursor. Use the **knob** or **numeric keypad** to set the desired value.

Set the high level

Press the **Amplitude/High level** button to confirm whether the “High level” menu item is highlighted; if not, press the **Ampl/High level** button to switch to “High level”. In **parameter 2** of Figure 5-1, a high-level parameter value appears as a blinking cursor. Use the **knob** or **numeric keypad** to set the desired value.

Set the low level


Press the **Off/Low level** button to confirm whether the “Low level” menu item is highlighted; if not, press the **Offset/Low level** button to switch to “Low level”. In

parameter 3 of Figure 5-1, a low-level parameter value appears as a blinking cursor. Use the **knob** or **numeric keypad** to set the desired value.

Set the start phase

Press the **Start Phase** softkey to confirm whether the **Start Phase** menu item is highlighted; if not, press the **Start Phase** key. In **parameter 4** of Figure 5-1, the parameter value of the starting phase appears as a blinking cursor. Use the **knob** or **numeric keypad** to set the desired value

Output Square Wave

Press , the screen displays the square wave user interface. By operating the square wave menu on the right side of the screen, you can set the square wave output waveform parameters.

The square wave menu includes: **frequency / period**, **amplitude / high level**, **offset / low level**, **starting phase**.

For the setting frequency/period, amplitude/high level, offset/low level, and starting phase, please refer to *Output Sine Wave* on page 11.

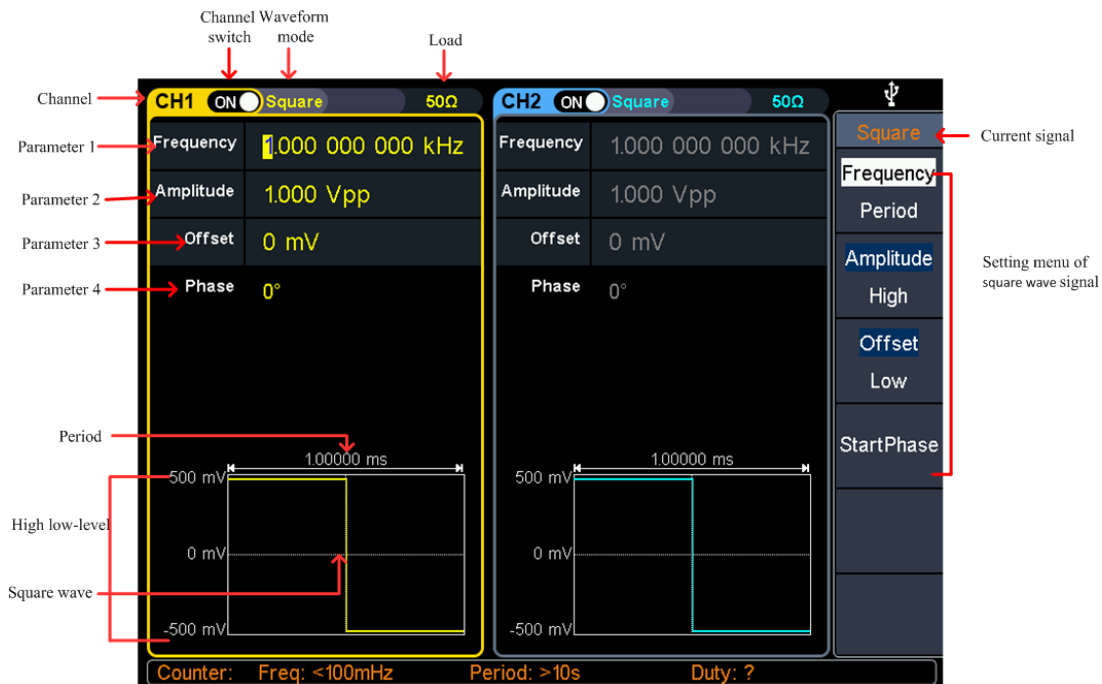



Figure 5-3: Square wave user interface

Output Ramp Wave

Press , the screen displays the user interface of the ramp wave. By operating the ramp menu on the right side of the screen, you can set the output waveform parameters of the ramp wave.

The ramp menu includes: frequency/period, amplitude/high level, offset/low level, symmetry.

For the setting frequency/period, amplitude/high level, offset/low level, and starting phase, please refer to *Output Sine Wave* on page 11.

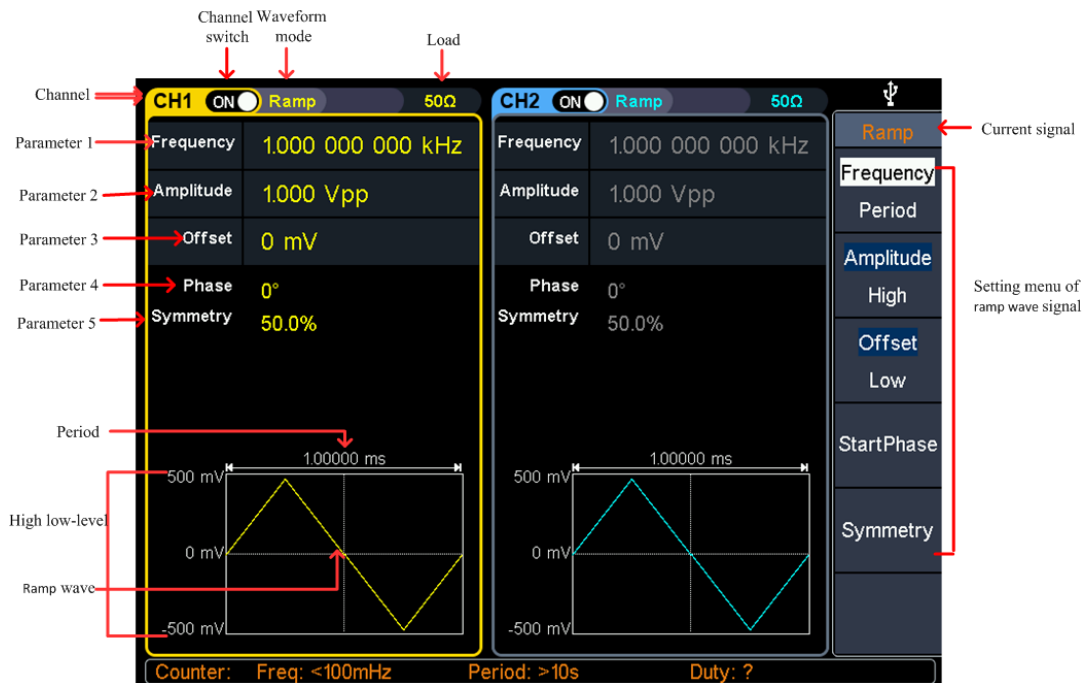


Figure 5-4: Ramp wave user interface

Glossary

Symmetry: Sets the percentage of the period during which the ramp waveform is rising.

Set the symmetry

- (1) Press the **Symmetry** softkey to select the **Symmetry** menu item. Figure 5-6
Parameter 1 shows the current value of the symmetry;
- (2) Use the **knob** to change directly, the value in **parameter 1** of Figure 5-6; Or use the numeric keypad to enter the value, press the **%** or **Enter** key to

display the symmetrical value of the input, press the **X** soft key to delete the last digit, press the **←** soft key to cancel the input, and press the **Enter** softkey to indicate the default input.

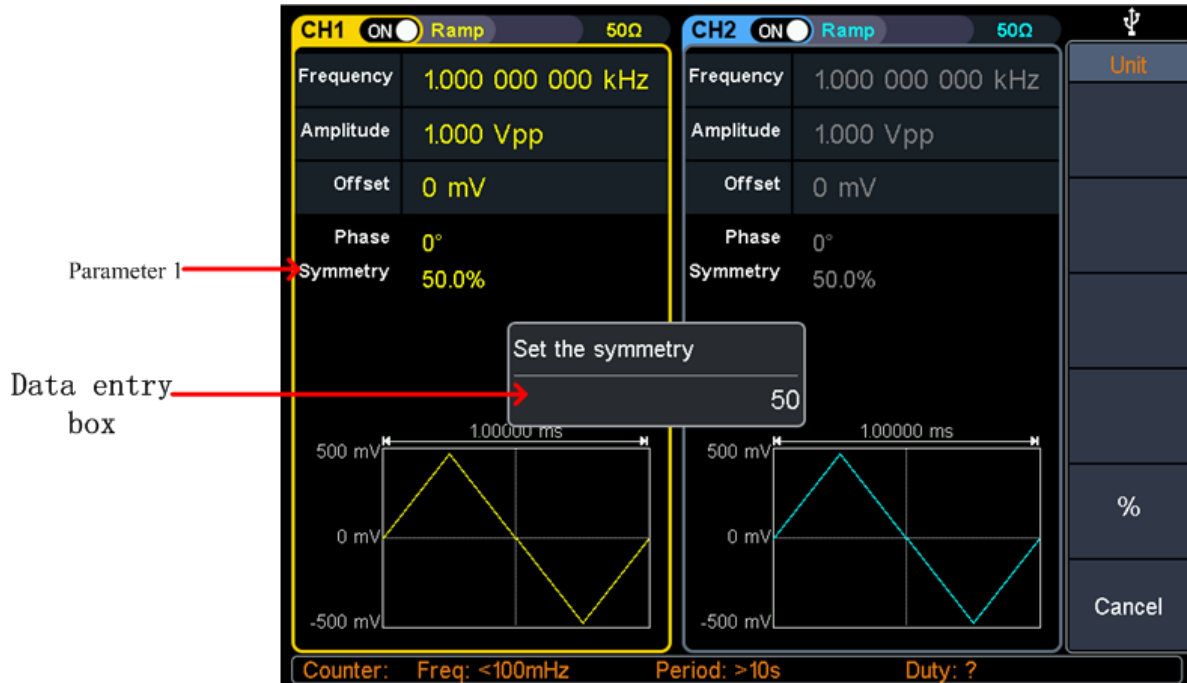


Figure 5-5: Set the symmetry of ramp wave

Output Pulse Wave

Press **(Pulse)**, the screen displays the user interface of the pulse wave. By operating the pulse wave menu on the right side of the screen, the output waveform parameters of the pulse wave can be set.

The pulse wave menu includes: frequency/period, amplitude/high level, offset/low level, start phase, pulse width/duty cycle, rise time/fall time.

For the setting frequency/period, amplitude/high level, offset/low level, and starting phase, please refer to *Output Sine Wave* on page 11.

5. Panel Operation

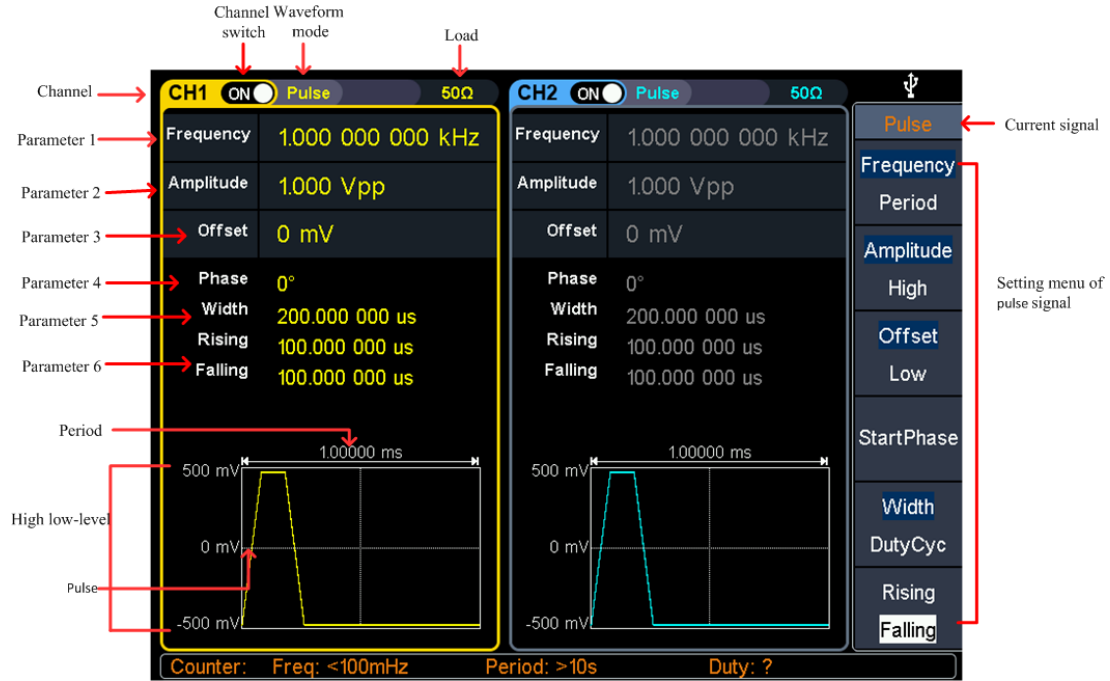


Figure 5-6: Pulse wave user interface

Glossary

Pulse Width

PW is an abbreviation for pulse width and is divided into positive pulse width and negative pulse width.

The positive pulse width is the time interval from 50% of the rising edge to 50% of the adjacent falling edge.

The negative pulse width is the time interval from 50% of the falling edge to 50% of the adjacent rising edge.

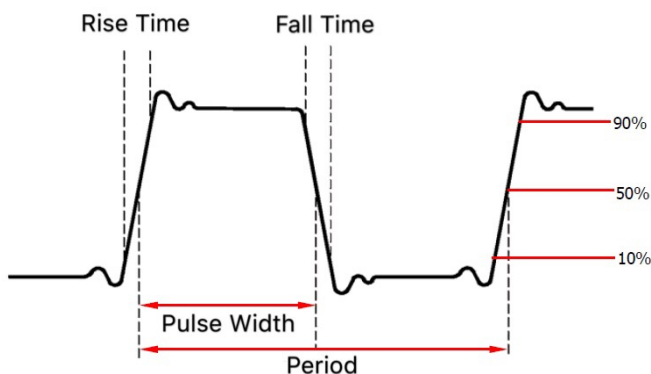
The pulse width is determined by the period and duty cycle of the signal. The calculation formula is pulse width = period * duty cycle.

Duty Cycle

In a series of ideal pulse sequences (such as a square wave), the ratio of the duration of the positive pulse to the total pulse period.

Pulse/Duty Cycle

The pulse width is defined as the time interval from the 50% threshold of the amplitude of the rising edge of the pulse to the 50% threshold of the amplitude of the next falling edge, as shown in the following figure.



- The settable range of pulse width is limited by the "minimum pulse width" and "pulse period"
 - Pulse width \geq minimum pulse width
 - Pulse width \leq pulse period - minimum pulse width
- The pulse duty cycle is defined as the pulse width as a percentage of the pulse period.
- The pulse duty cycle is associated with the pulse width, and modifying one of the parameters will automatically modify the other parameter. The pulse duty cycle is limited by the "minimum pulse width" and "pulse period".
 - Pulse duty cycle \geq minimum pulse width 脉冲 pulse period \times 100%
 - Pulse duty cycle \leq (1 - 2 \times minimum pulse width 脉冲 pulse period) \times 100%

Set the pulse width/duty cycle

Press the **Pulse Width/Duty Cycle** softkey to select the Pulse Width menu item. As shown in Figure 5-7, parameter 1 displays the current value of the pulse width. Press the **Pulse Width/Duty Cycle** button to display the duty cycle.

Set the **pulse width** parameter value, use the **knob** to directly change the value of the pulse width in **parameter 1** of Figure 5-7; or use the **numeric keypad** to enter the value, then select the desired unit from the right menu, press the desired unit (ks, s, ms, us, ns) or **Enter** the value; press the **X** soft key to delete the last digit, press the **←** soft key to cancel the input, and press the **Enter** soft key to indicate the default input.

Set the **duty cycle** parameter value, use the **knob** to directly change the value of the graph duty cycle; or use the **numeric keypad** to enter the value, then press **%** or **Enter** from the right menu to enter the demand value; press the **X** soft key to delete the last one. Bit, press the **←** soft key to cancel the input, press the **Enter** soft key to indicate the default input.

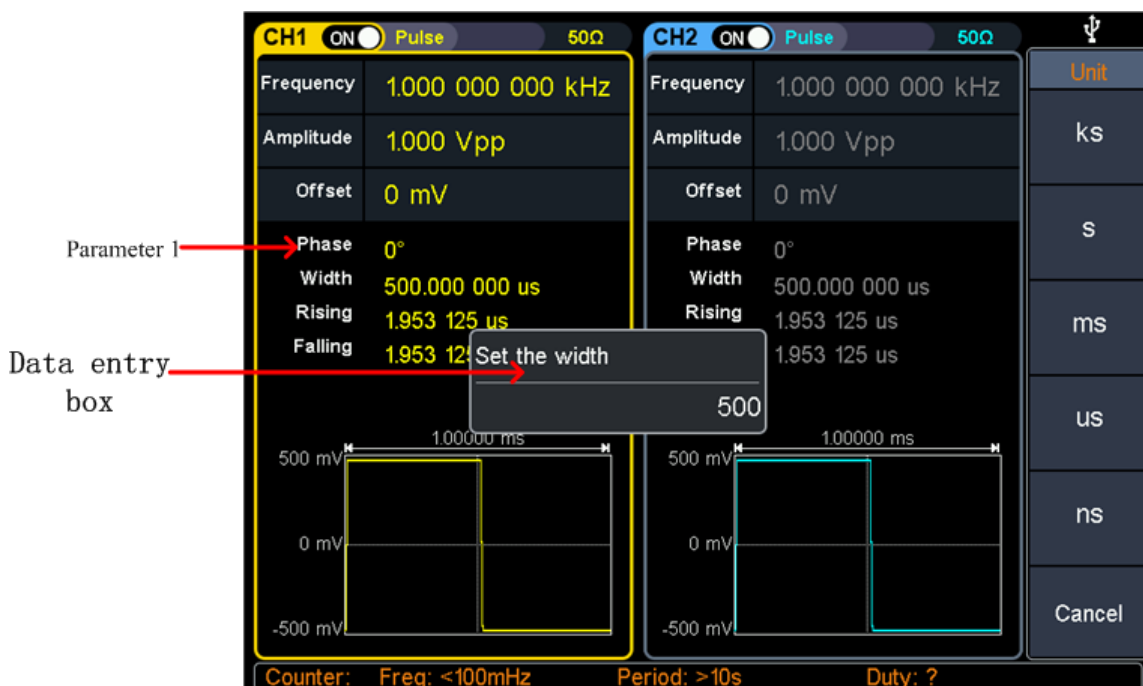



Figure 5-7: Set the pulse width

Set the rising/falling time

Press the **rise time / fall time** soft key to select the "rise time / fall time" menu item, as shown in Figure 5-6, parameter 6 shows the current value of the rise/fall time; press the **rise time / fall time** key to switch between the current display. Parameter value.

Set the **rise time/fall time** parameter value Use the **knob** or use the **numeric keypad** to enter the value, then select the desired unit from the right menu, press the desired unit (ks, s, ms, us, ns) or **Enter** the value; press the **X** soft key to delete the last digit, press the **←** soft key to cancel the input, press the **Enter** softkey to indicate the default input.

Output Noise Wave

The noise wave output by the system is white noise. Press , the screen displays the user interface of the noise wave. By operating the noise wave menu on the right side of the screen, the output waveform parameters of the noise wave can be set.

The noise wave has no frequency and periodic parameters, and the bandwidth is 120 MHz of Gaussian noise.

The menu of noise waves includes: **amplitude / high level**, **offset / low level**.

For the setting of amplitude/high level, offset/low level, please refer to *Output Sine Wave* on page 11.

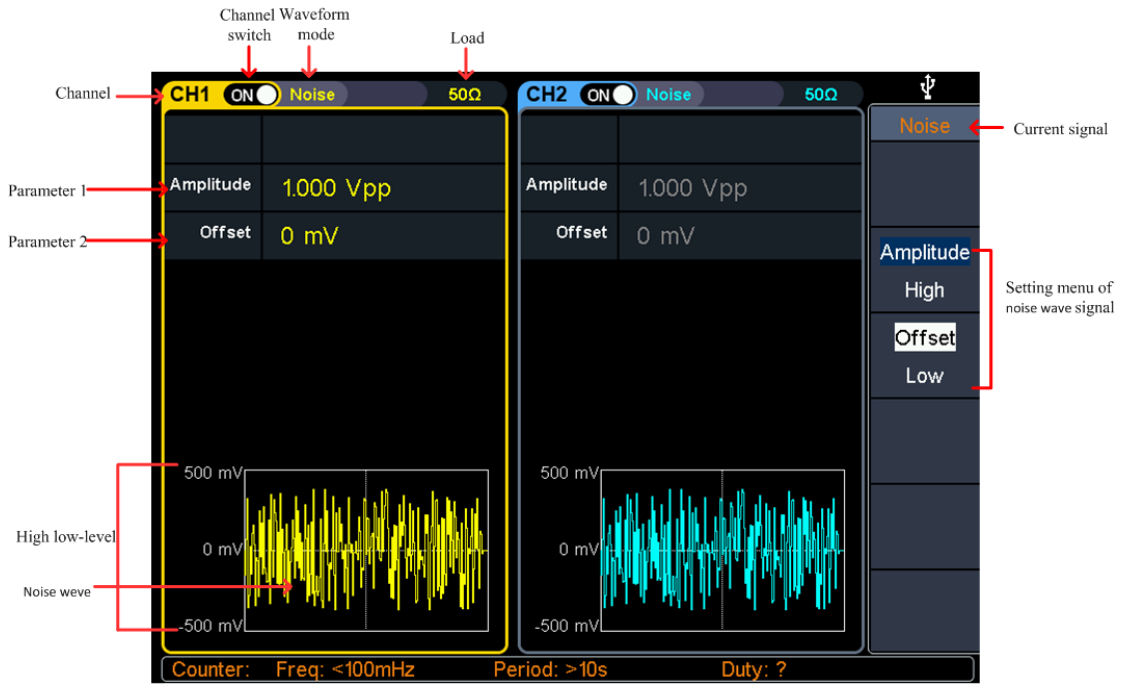



Figure 5-8: noise wave user interface

Output Arbitrary Wave

Press , the screen displays the user interface of the arbitrary wave. By operating the arbitrary wave menu on the right side of the screen, the output waveform parameters of the arbitrary wave can be set.

Arbitrary wave menus include: frequency/period, amplitude/high level, offset/low level, start phase, built-in waveform.

For the setting frequency/period, amplitude/high level, offset/low level, and starting phase, please refer to *Output Sine Wave* on page 11.

Arbitrary waves include two kinds of arbitrary waveforms: system built-in waveforms and user-edited waveforms.

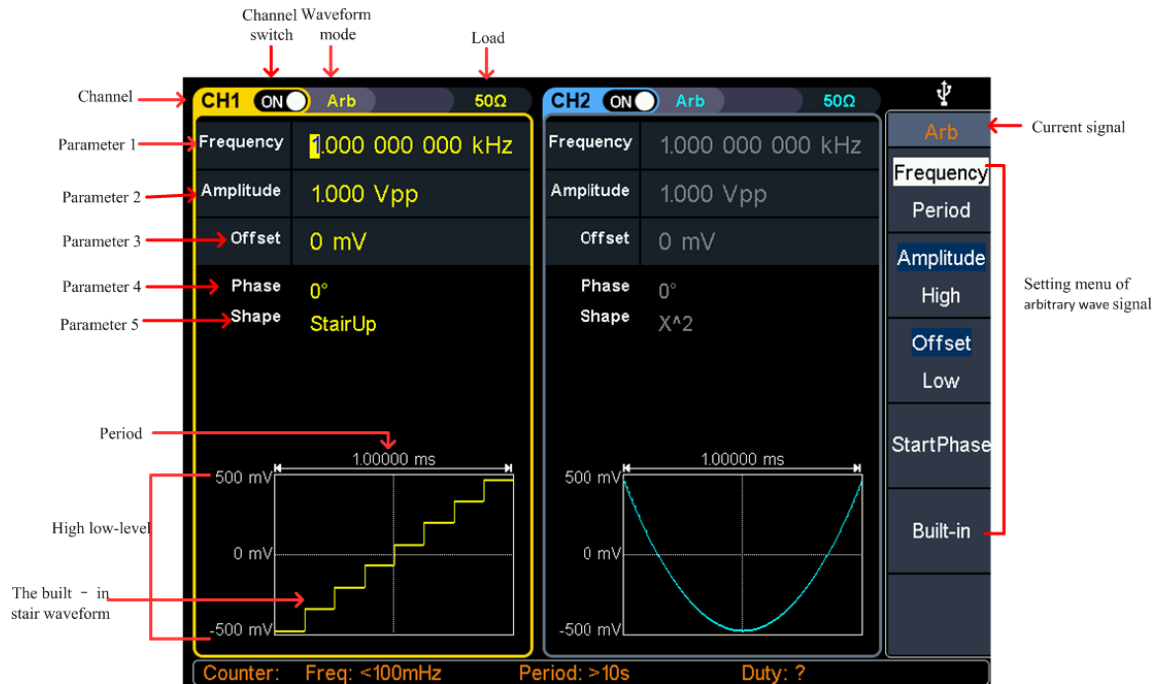



Figure 5-9: Arbitrary wave user interface

Choose build-in waves

There are 152 types of waveforms built into the system, the number of waveform points is 8192 points, and the highest upper limit frequency is 15MHz. To select a built-in waveform, the steps are as follows:

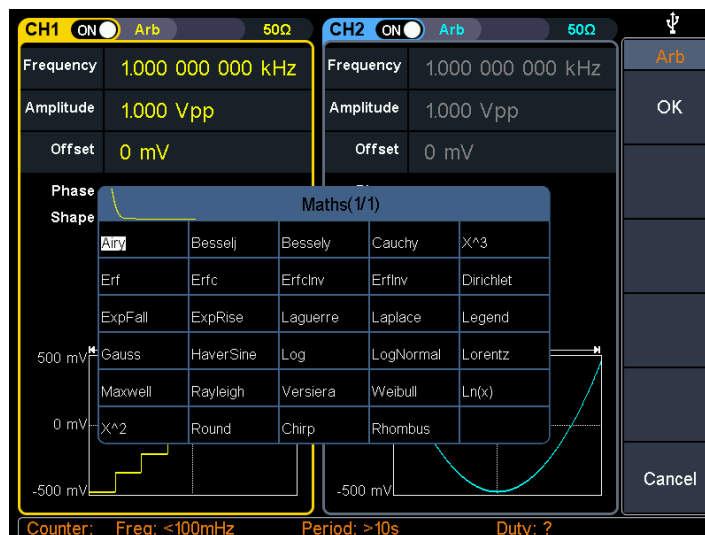
(1) Press , then press the **built-in waveform** soft key to enter and select the menu

(2) Select the type of built-in waveform by **common**, **medical**, **standard**, **math** soft keys

Press **Next** menu to select the built-in waveform: **Trigonometric function**, **window function**, **engineering**, and **segmentation modulation**.

For example, select **Math** to enter the interface shown below.

5. Panel Operation



- (3) Turn the **knob** to select the desired waveform, for example, select **Airy**. Press the **OK** soft key to enter the **Airy** function.

Buld-in wave list

Name	Description
Common	
DC	Direct current
AbsSine	Absolute sine
AbsSineHalf	Absolute half-sine
AmpALT	Gain oscillation curve
AttALT	Attenuation oscillation curve
GaussPulse	Gauss pulse
NegRamp	Negative ramp
NPulse	Negative pluse
PPulse	Positive pluse
SineTra	Sine-Tra wave
SineVer	Sine-Ver wave
StairDn	Stair downward
StairUP / UD	Stair upward/downward
Trapezia	Trapezia
Medical	
Heart	Heart
Cardiac	Cardiac
LFPulse	Low frequency pulse electrotherapy waveform
Tens1	Neuroelectric stimulation therapy waveform 1
Tens2	Neuroelectric stimulation therapy waveform 2
Tens3	Neuroelectric stimulation therapy waveform 3
EOG	Electrooculogram

5. Panel Operation

EEG	electroencephalogram
Pulseilogram	Ordinary pulse curve
ResSpeed	Ordinary expiratory flow rate curve
Standard	
Ignition	Automobile internal combustion engine ignition waveform
TP2A	Automotive transients due to inductance in the wiring
ISP	Automobile starting profile with oscillation
VR	Working voltage profile of the car when resetting
TP1	Automotive transients due to power cuts
TP2B	Car transients due to startup switching off
P4	Car working profile during start-up
TP5A	Car transients due to the power cut of battery
TP5B	Car transients due to the power cut of battery
SCR SCR	Sintering temperature release map
Surge	Surge signal
Math	
Airy	Airy function
Besselj	Type I Bessel function
Bessely	Type II Bessel function
Cauchy	Cauchy distribution
X^3	Cubic function
Erf	Error function
Erfc	Remnant error function
ErfcInv	Anti-complement error function
ErfInv	Inverse error function
Dirichlet	Dirichlet function
ExpFall	Exponential decline function
ExpRise	Exponential rise function
Laguerre	Four Laguerre polynomials
Laplace	Laplace distribution
Legend	Five Legendre polynomials
Gauss	Gaussian distribution, also known as the normal distribution
HaverSine	Semi-positive function
Log	Base 10 logarithmic function
LogNormal	Lognormal distribution
Lorentz	Lorentz function
Maxwell	Maxwell distribution
Rayleigh	Rayleigh distribution
Versiera	Tongue line
Weibull	Weber distribution
Ln(x)	Natural logarithmic waveform
X^2	Square function
Round	Round wave

5.Panel Operation


Chirp	Linear frequency modulation
Rhombus	Diamond wave
Trigonometric function	
CosH	Hyperbolic cosine
Cot	Cotangent function
CotH	Hyperbolic cotangent
CotHCon	Concave hyperbolic cotangent
CotHPro	Raised hyperbolic cotangent
CscCon	Recessed cosecant
Csc	Cosecant
CscPro	Raised cosecant
Csch	Hyperbolic cosecant
CschCon	Depressed hyperbolic cosecant
CschPro	Raised hyperbolic cosecant
RecipCon	Reciprocal of the depression
RecipPro	Raised countdown
SecCon	Depression secant
SecPro	Raised secant
SecH	Hyperbolic secant
Sinc	Sinc function
SinH	Hyperbolic sine
Sqrt	Square root function
Tan	Tangent function
TanH	Hyperbolic tangent
ACos	Inverse cosine function
ACosH	Inverse hyperbolic cosine function
ACot	Anti-cotangent function
ACotCon	Inverse cotangent function
ACotPro	Raised inverse cotangent function
ACotH	Inverse hyperbolic cotangent function
ACotHCon	Inverse hyperbolic cotangent function
ACotHPro	Raised inverse hyperbolic cotangent function
Acsc	Anti-cosecting function
ACscCon	Concave inverse cosecting function
ACscPro	Raised anti-cosecting function
AcscH	Anti-hyperbolic cosecant
ACschCon	Inverse hyperbolic cotangent function
ACschPro	Raised inverse hyperbolic cosecant function
Asec	Inverse cut function
ASecCon	Inverse tangent function
ASecPro	Raised arctangent function
ASecH	Inverse hyperbolic secant function
ASin	Inverse sine function

5. Panel Operation

ASinH	Inverse hyperbolic sine function
ATan	Arc tangent function
ATanH	Inverse hyperbolic tangent function
Window Function	
Bartlett	Bartlett window
BarthannWin	Modified Bartlett window
Blackman	Blackman window
BlackmanH	BlackmanH window
BohmanWin	BohmanWin window
Boxcar	Rectangular window
ChebWin	Chebyshev window
FlattopWin	Flat top window
Hamming	Hamming window
Hanning	Hanning window
Kaiser	Kaiser window
NuttallWin	The smallest four Blackman-Harris windows
ParzenWin	Parzen window
TaylorWin	Taylor window
Triang	Triangle window, also call Fejer window
TukeyWin	Tukey window
Engineering Window	
Butterworth	Butterworth filter
Combin	Combined function
CPulse	C-Pulse signal
CWPulse	CW pulse signal
RoundHalf	Half-round wave
BandLimited	Band limited signal
BlaseiWave	Blasting vibration "time-vibration speed" curve
Chebyshev1	Type I Chebyshev filter
Chebyshev2	Type II Chebyshev filter
DampedOsc	Damped oscillation "time-displacement" curve
DualTone	Dual audio signal
Gamma	Gamma signal
GateVibar	Gate self-vibration signal
LFMPulse	Chirp signal
MCNoise	Mechanical construction noise
Discharge	NiMH battery discharge curve
Quake	Seismic wave
Radar	Radar signal
Ripple	Ripple
RoundsPM	RoundsPM wave
StepResp	Step response signal
SwingOsc	Swing oscillation kinetic energy-time curve

TV	TV signal
Voice	Voice signal
Segment Modulation	
AM	Sinusoidal segmented AM wave
FM	Sinusoidal segmented FM wave
PM	Sinusoidal segmented PM wave
PWM	Pulse width segmented PWM wave

Output Harmonic Wave

Press  to display the harmonic user interface. You can set the harmonic output waveform parameters by operating the harmonic menu on the right side of the screen.

Harmonic menus include: frequency/period, amplitude/high level, offset/low level, start phase, harmonic type, harmonic order, sequence number, harmonic amplitude, harmonic phase.

For the setting frequency/period, amplitude/high level, offset/low level, and starting phase, please refer to *Output Sine Wave* on page 11.


Harmonic wave function overview

According to the Fourier transform theory, the time domain waveform is a superposition of a series of sine waves, expressed by the following equation:

$$f(t) = A_1 \sin(2\pi f_1 t + \varphi_1) + A_2 \sin(2\pi f_2 t + \varphi_2) + A_3 \sin(2\pi f_3 t + \varphi_3) + \dots$$

Generally, the component of frequency f_1 is called the fundamental wave, f_1 is the fundamental

frequency, A_1 is the fundamental amplitude, and φ_1 is the fundamental phase. In addition, the frequency of each component is usually an integer multiple of the fundamental frequency, which is called harmonic. A component whose frequency is an odd multiple of the fundamental frequency is called an odd harmonic, and a component whose frequency is an even multiple of the fundamental frequency is called an even harmonic.

This signal source can output up to 16 harmonic orders. After selecting CH1 or CH2, press the front panel  button to enter the harmonic setting menu. You can set the parameters of the fundamental, select the type of output harmonics, specify the maximum number of output harmonics, and the amplitude and phase of each harmonic.

Select the harmonic type

This signal source can output even harmonics, odd harmonics, all harmonics or user-defined harmonics. Enter the harmonic setting menu and press the harmonic type softkey to select the desired harmonic type.

Even harmonic

Press the **Harmonic Type** softkey menu and the instrument outputs the fundamental and even harmonics.

Odd harmonic

Press the **Harmonic Type** softkey menu and the instrument outputs the fundamental and odd harmonics.

Order harmonic

Press the **Harmonic Type** softkey menu and the instrument outputs the fundamental and harmonics in sequence.

customize

Press the Harmonic Type softkey to customize the number of times the harmonics are output. The maximum number of times is 16. The 16-bit binary data is used to represent the output state of the 16th harmonic, respectively, 1 means the output of the corresponding subharmonic is turned on, and 0 means the output of the corresponding subharmonic is turned off. The user only needs to use the numeric keypad to modify the value of each data bit (note: the leftmost bit indicates the fundamental wave, fixed to X, and modification is not allowed). For example, set 16-bit data to X001 0000 0000 0001, indicating the output fundamental, 4th harmonic, and 16th harmonic. **Note: The harmonics of the actual output are limited by the currently specified “harmonic times”.**

Set the harmonic times

Press the **Next** soft key to enter the next page, and then press the **Harmonic Times** softkey to confirm whether the “Harmonic Times” menu item is highlighted; if not, press the **Harmonic Times** softkey. In parameter 5 of Figure 5-11, the parameter value of the harmonic order appears as a blinking cursor. Use the knob or numeric keypad to set the desired value, which can be set from 2 to 16 times.

Set the harmonic number

Press the **Next** soft key to enter the next page, and then press the **Sequence** soft key to confirm whether the “Number” menu item is highlighted; if not, press the **Sequence** soft key. In parameter 6 of Figure 5-11, the parameter value of the serial number appears as a blinking cursor. Use the knob or numeric keypad to set the desired value, which can be set from 2 to 16 times.

Set the harmonic amplitude

Press the **Next** soft key to enter the next page, and then press the **Harmonic Amplitude** softkey to confirm whether the “Harmonic Amplitude” menu item is highlighted; if not, press the **Harmonic** softkey soft key. In parameter 7 of Figure 5-11, the parameter value of the harmonic amplitude appears as a blinking cursor. Use the knob or numeric keypad to set the desired value.

Set the harmonic phase

Press **Next** to enter the next page, and then press the **Harmonic Phase** softkey to confirm whether the “Harmonic Phase” menu item is highlighted; if not, press the **Harmonic Phase** softkey. In parameter 8 of Figure 5-11, the parameter value of the harmonic phase appears as a blinking cursor. Use the knob or numeric keypad to set the desired value.

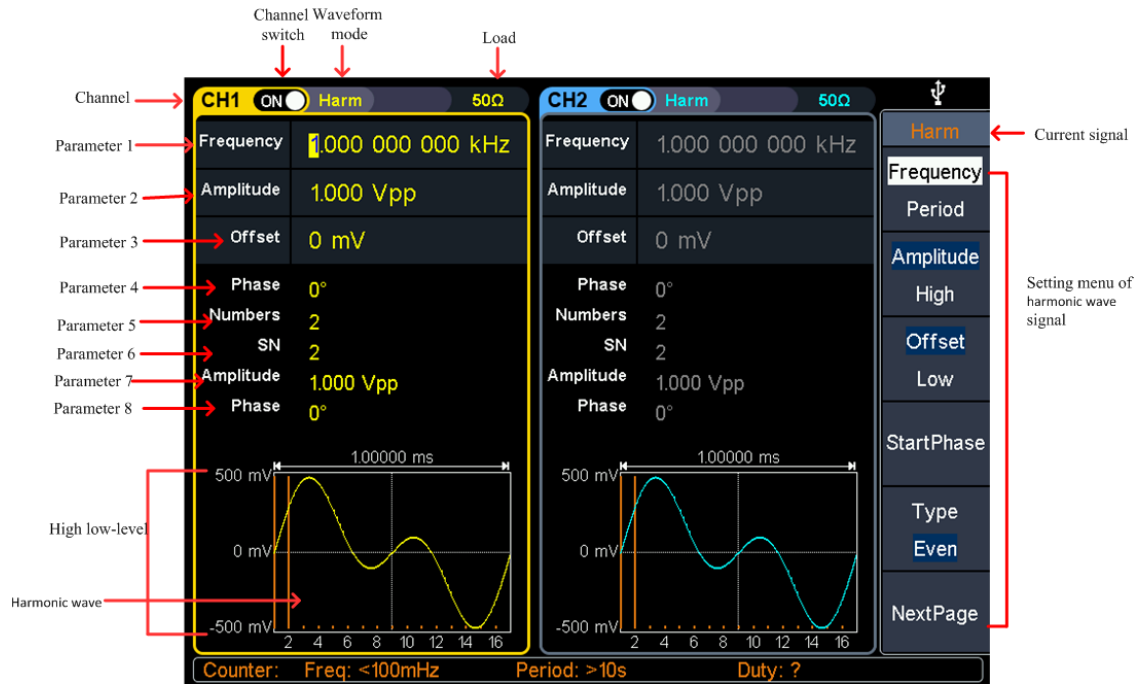


Figure 5-10 harmonic wave user interface

Output the modulated waves

After pressing the **Mod** function key, press the **F1** key to select the modulation type to output the modulated waveform. Types that can be modulated include: AM (amplitude modulation), FM (frequency modulation), PM (phase modulation), PWM (pulse width modulation), ASK (amplitude shift keying), PSK (phase shift keying), FSK (frequency) Shift keying), 3FSK (ternary frequency shift keying), 4FSK (quadrature frequency shift keying), BPSK (biphase phase shift keying), OSK (oscillating keying).

Note: The following output modulation waveform uses CH1 channel as an example. If you need to set CH2 channel, please refer to CH1 channel specific operation.

Amplitude Modulation(AM)

The output modulation waveform consists of a carrier wave and a modulated wave. The carrier wave can be a sine wave, a square wave, a ramp wave, or an arbitrary wave. In amplitude modulation, the amplitude of the carrier varies with the instantaneous voltage of the modulation waveform. The user interface for amplitude modulation is shown below.

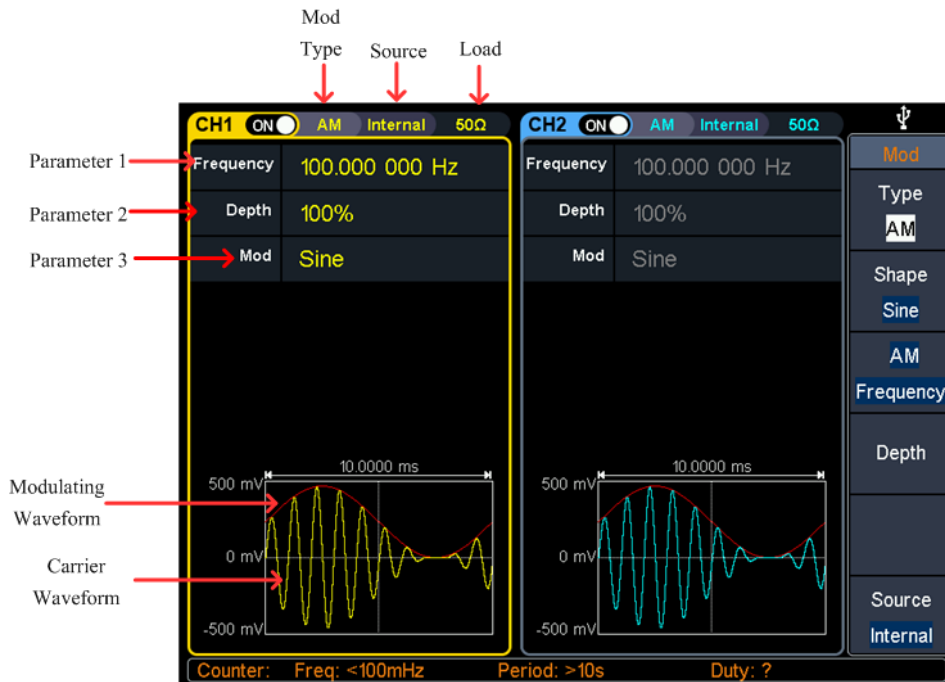




Figure 5-11: Amplitude modulation user interface

How to set the parameters of amplitude modulation

- (1) After pressing the **Mod** function key, press the **Modulation type** soft key, use the knob to select, the modulation type is **AM**, press the **OK** soft key.
- (2) Press  to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press  or **Mod** to return to the modulation mode interface.
- (3) Press **Source** to select the source. If **External** is selected, the external signal source is connected to the **Ext Mod In** interface on the rear panel, and the setting is completed; if you select **Internal**, continue with the following steps.
- (4) Press **Modulation Waveform** to select the modulation waveform. You can select **Sine**, **Square**, **Ramp**, **Noise**, or **Arb**.
- (5) Press the **AM frequency** button to set the AM frequency. The amplitude modulation range is from 2 mHz to 100 kHz (for internal sources only).
- (6) Press **Modulation Depth** to set the modulation depth. The modulation depth ranges from 0% to 100%.

Glossary

AM frequency: the frequency of the modulation waveform.

Modulation Depth: The range of amplitude variations of the output modulation waveform. At 0% modulation, the output amplitude is half of the set amplitude. At 100% modulation, the output amplitude is equal to the specified value. For external sources, the AM depth is controlled by the signal level on the **Ext Mod In** connector. +1 V corresponds to the currently selected depth of 100%.

Frequency Modulation (FM)

The output modulation waveform consists of a carrier wave and a modulated wave. The carrier wave can be a sine wave, a square wave, a ramp wave, or an arbitrary wave. In frequency modulation, the frequency of the carrier varies with the instantaneous voltage of the modulation waveform. The user interface for frequency modulation is shown below.

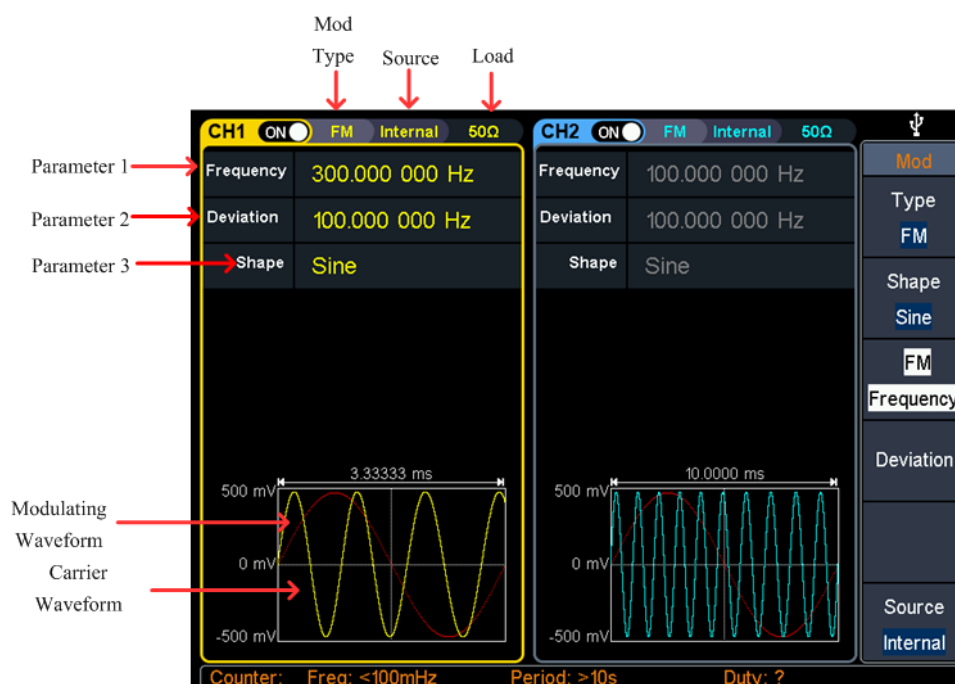




Figure 5-12: frequency modulation user interface

Steps to set the frequency modulation

- (1) After pressing the **Mod** function key, press the **Modulation type** soft key, select the knob to select, the modulation type is **FM**, press the **OK** soft key.
- (2) Press  to display the waveform and parameters of the current carrier. You

can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press  or **Mod** to return to the modulation mode interface.

- (3) Press **Source** to select the source. If **External** is selected, connect the external signal source to the **Ext Mod In** interface on the rear panel and skip to step (5). If you select **Internal**, continue with the following steps.
- (4) Press **Modulation Waveform** to select the modulation waveform type. You can select **Sine**, **Square**, **Ramp**, **Noise**, or **Arb**.
- (5) Press **Modulation Frequency** to set the modulation frequency value. The modulation frequency ranges from 2 mHz to 100 kHz (for internal sources only).
- (6) Press the **Frequency Offset** softkey to set the frequency offset value. Frequency offset range: $2 \text{ mHz} \leq \text{offset} \leq \text{min}$ (min is the carrier frequency or carrier maximum frequency - carrier frequency) by default, the smaller of the two.



Phase Modulation (PM)

The output modulation waveform consists of a carrier wave and a modulated wave. The carrier wave can be a sine wave, a square wave, a ramp wave, or an arbitrary wave. In phase modulation, the phase of the carrier varies with the instantaneous voltage of the modulation waveform. The phase modulation user interface is shown below



Figure 5-13: Phase modulation user interface

Steps to set phase modulation

- (1) After pressing the **Mod** function key, press the **Modulation type** soft key, use the knob to select, the modulation type **PM**, and press the **OK** soft key.
- (2) Press  to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press  or **Mod** to return to the modulation mode interface.
- (3) Press **Source** to select the source. If **External** is selected, connect the external signal source to the **Ext Mod In** interface on the rear panel and skip to step (5). If you select **Internal**, continue with the following steps.
- (4) Press **Modulation Waveform** to select the modulation waveform. You can select **Sine**, **Square**, **Ramp**, **Noise**, or **Arb**.

- (5) Press the **Phase Modulation Frequency** softkey to set the phase modulation frequency. The range is from 2 mHz to 100 kHz (for internal sources only).
- (6) Press **Phase Deviation** to set the phase deviation, which is the offset of the phase, ranging from 0° to 180°.

Pulse Width Modulation (PWM)

The output modulation waveform consists of a carrier wave and a modulated wave. The pulse width modulation function can only be applied to the modulated pulse wave, so the carrier can only be a pulse wave. In pulse width modulation, the pulse width of a carrier (pulse wave) varies with the instantaneous voltage of the modulation waveform.

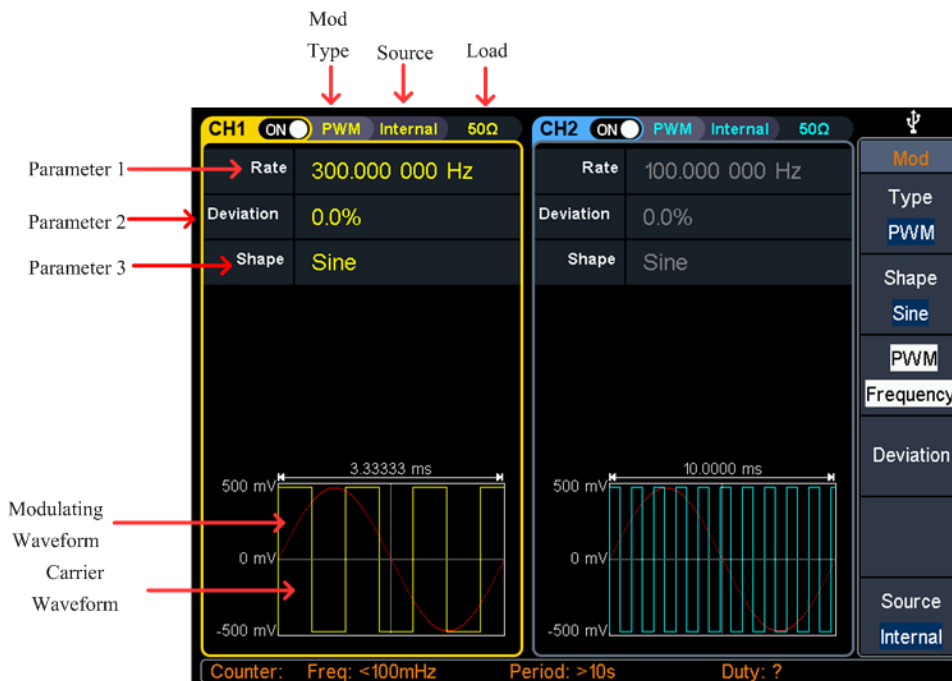


Figure 5-14 Pulse width modulation user interface

Steps to set pulse width modulation

- (1) First set the carrier to pulse wave, press **Mod** to enter PWM modulation mode.
- (2) After pressing the **Mod** function button, press the **Modulation Type** softkey, use the knob to select the modulation type as PWM, and press the Enter soft key.
- (3) Press **⏏** to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press **⏏** or **Mod** to return to the modulation mode interface.

- (4) Press **Source** to select the source. If **External** is selected, connect the external signal source to the Ext Mod In interface on the rear panel and skip to step (6). If you select **Internal**, continue with the following steps.
- (5) Press **Modulation Waveform** to select the modulation waveform. You can select Sine, Square, Ramp, Noise, or Arb.
- (6) Press the **PWM Rate** softkey to set the **PWM rate**, which can be set from 2 mHz to 100 kHz (for internal sources only).
- (7) Press the **Duty Cycle** Deviation softkey to set the **duty cycle deviation** (depending on the non-modulation mode, the pulse wave setting menu is pulse width or duty cycle). The maximum value of the duty cycle deviation is: 0 to 99%. [pulse wave duty ratio, 100% - pulse wave duty ratio]

Amplitude shift keying (ASK)

The output modulation waveform consists of a carrier wave and a modulated wave. The carrier wave can be a sine wave, a square wave, a ramp wave, or an arbitrary wave. In phase modulation, the phase of the carrier varies with the instantaneous voltage of the modulation waveform. The user interface for phase modulation is shown below.

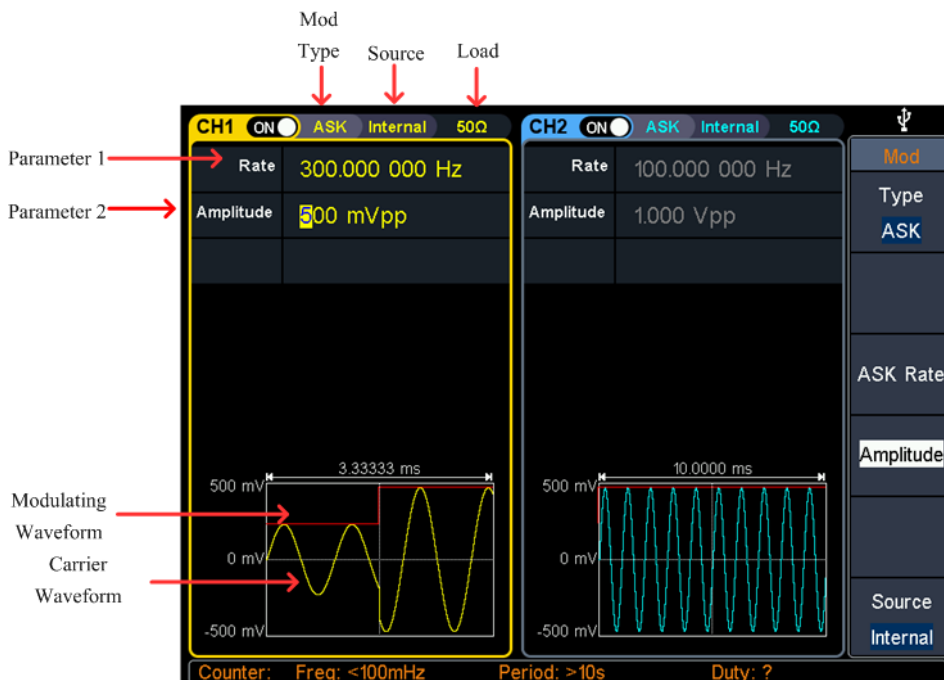




Figure 5-15 Amplitude shift keying user interface

Steps to set frequency shift keying modulation

- (1) After pressing the **Mod** function key, press the **Modulation type** soft key, use the knob to select, the modulation type is ASK, press the Enter soft key.
- (2) Press  to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press  or **Mod** to return to the modulation mode interface.
- (3) Press **Source** to select the source. If **external** is selected, connect the external signal source to the Ext Trig/Burst/Fsk In interface on the rear panel and skip to step (5). If you select **internal**, continue with the following steps.
- (4) Note: When the source selects **external**, the slope is set to “positive”, then the larger of the carrier amplitude and modulation amplitude is output when the logic is high level, and the carrier amplitude and modulation amplitude are output when the logic low level is input. The smaller one. When the slope is "negative", the opposite is true.
- (5) Press the **ASK Rate** softkey to set the **ASK rate**, which can be set from 2 mHz to 1 MHz (for internal sources only).
- (6) Press the **Amplitude** softkey to set the **amplitude**, ie the modulation amplitude, which can be set from 0 mVpp to 1 Vpp.

Phase Shift Keying (PSK)

The output modulation waveform consists of a carrier wave and a modulated wave. The carrier wave can be a sine wave, a square wave, a ramp wave, or an arbitrary wave. In phase modulation, the phase of the carrier varies with the instantaneous voltage of the modulation waveform. The phase modulation user interface is shown below

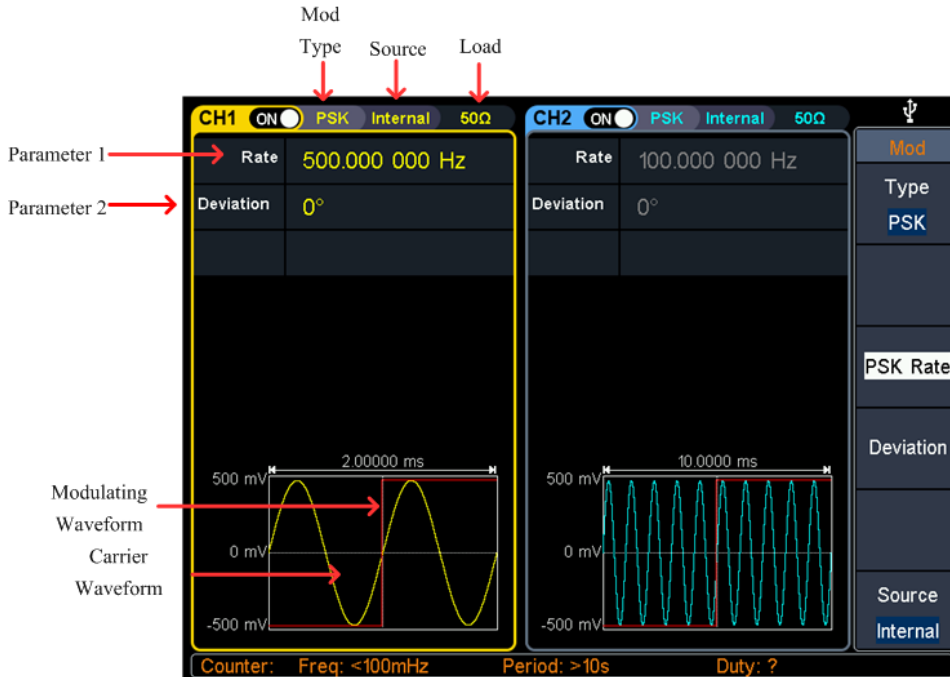


Figure 5-16 Phase shift keying user interface

Steps to set phase shift keying modulation

- (1) After pressing the **Mod** function key, press the **Modulation type** soft key, use the knob to select, the modulation type is **PSK**, press the **Enter** soft key. The carrier waveform can be selected as needed. The following is a sine wave.
- (2) Press **⏏** to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press **⏏** or **Mod** to return to the modulation mode interface.
- (3) Press **Source** to select the source. If **external** is selected, connect the external signal source to the Ext Trig/Burst/Fsk In interface on the rear panel and skip to step (5). If you select **internal**, continue with the following steps.
Note: When the source selects external, set the slope to “positive”, then output the carrier phase when input logic low level, and output the modulation phase

when input logic high level. When the slope is "negative", the opposite is true.

- (4)** Press the **PSK** softkey to set the **PSK rate**, which can be set from 2 MHz to 1 MHz (for internal sources only).
- (5)** Press Phase Deviation to set the phase deviation. The range is from 0° to 360°. The default is 0°.

Frequency Shift Keying (FSK)

Using frequency shift keying modulation, the output frequency is shifted between two preset frequency values (carrier frequency and hopping frequency). The frequency at which the output moves between the two frequencies is determined by the internal frequency generator (internal source) or the signal level (external source) on the rear panel **Ext Trig/Burst/Fsk In** interface. The carrier wave can be a sine wave, a square wave, a ramp wave, or an arbitrary wave. The user interface of the frequency shift keying modulation is shown below.

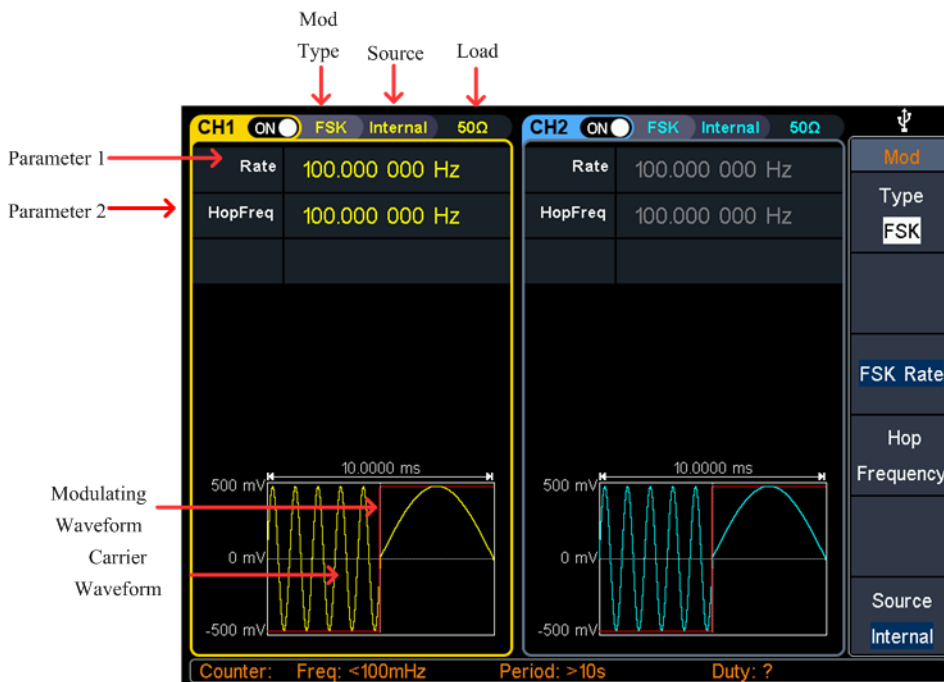




Figure 5-17: Frequency shift keying user interface

Steps to set frequency shift keying modulation

- (1) After pressing the **Mod** function key, press the Modulation type soft key, use the knob to select, the modulation type is **PSK**, press the **OK** soft key. The carrier waveform can be selected as needed. The following is a sine wave.
- (2) Press  to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press  or **Mod** to return to the modulation mode interface.
- (3) Press **Source** to select the source. If **external** is selected, connect the external signal source to the **Ext Trig/Burst/Fsk In** interface on the rear panel and skip to step (5). If you select **internal**, continue with the following steps.

Note: When the source selects **external**, set the slope to “positive”, then

output the carrier frequency when input logic low level, and output the frequency hopping frequency when input logic high level. When the slope is "negative", the opposite is true.

- (4) Press the **FSK Rate** softkey to set the **FSK rate**, which can be set from 2 mHz to 1 MHz (for internal sources only).
- (5) Press the **Frequency Hopping** softkey to set the **frequency hopping**, which is the alternating frequency.

Hexadecimal frequency shift keying (3FSK)

Using ternary frequency shift keying modulation, the output frequency is shifted between three preset frequency values ("carrier frequency" and 2 "hopping frequencies"). The frequency at which this output moves between three frequencies is determined by the internal frequency generator (internal source). The carrier wave can be a sine wave, a square wave, a ramp wave, or an arbitrary wave. The user interface of ternary frequency shift keying modulation is shown in the figure below.

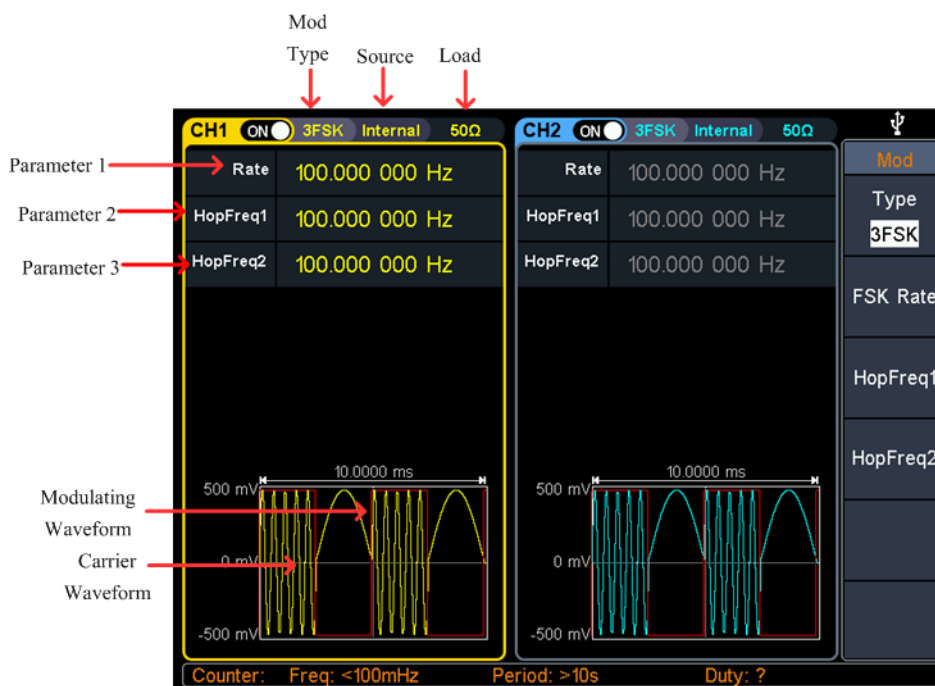




Figure 5-18 Hexadecimal frequency shift keying user interface

Steps to set frequency shift keying modulation

- (1) After pressing the **Mod** function key, press the **modulation type** soft key, use the knob to select, the modulation type is **3FSK**, press the **enter** key. The carrier waveform can be selected as needed. The following is a sine wave.

- (2) Press  to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press  or **Mod** to return to the modulation mode interface.
- (3) Press the **FSK Rate** softkey to set the 3FSK rate, which can be set from 2 MHz to 1 MHz.
- (4) Press the **Frequency Hopping 1** **Frequency Hopping 2** softkey to select the setting frequency hopping, which is the alternating frequency.

Quaternary frequency shift keying (4FSK)

Using quaternary frequency shift keying modulation, the output frequency is shifted between four preset frequency values ("carrier frequency" and 3 "hopping frequencies"). The frequency at which the output moves between the four frequencies is determined by the internal frequency generator (internal source). The carrier wave can be a sine wave, a square wave, a ramp wave, or an arbitrary wave. The user interface of quaternary frequency shift keying modulation is shown in the figure below.






Figure 5-19 Quaternary frequency shift keying user interface

Steps to set frequency shift keying modulation

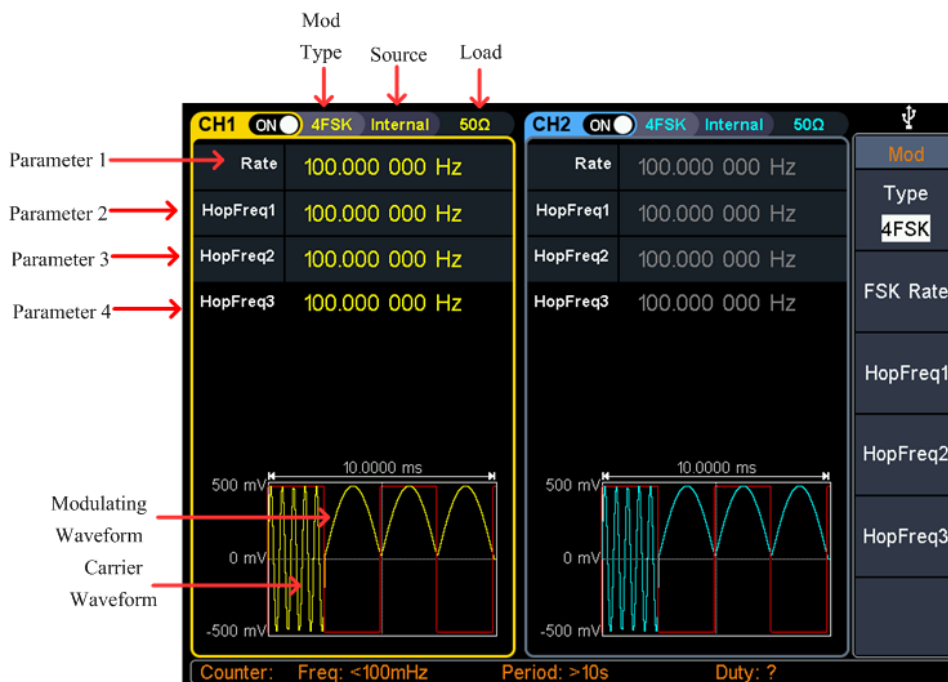- (1) After pressing the **Mod** function key, press the **modulation type** soft key, use the knob to select, the modulation type is **4FSK**, press the **enter** key. The carrier waveform can be selected as needed. The following is a sine wave.
- (2) Press  to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press  or **Mod** to return to the modulation mode interface.
- (3) Press **FSK Rate** to set the **4FSK rate** from 2 MHz to 1 MHz.
- (4) Press **Frequency Hopping 1** **Frequency Hopping 2** **Frequency Hopping 3** Soft Key to select the setting **frequency hopping**, which is the alternating frequency.



Binary phase shift keying (BPSK)

The use of binary phase shift keying modulation shifts the output phase between preset frequency values ("carrier phase" and "modulation phase"). The frequency at which the output moves between the two phases is determined by the internal frequency generator (internal source). The carrier wave can be a sine wave, a square wave, a ramp wave, or an arbitrary wave. The user interface of the two-phase phase shift keying modulation is shown in the figure below.



Figure 5-20 Binary phase shift keying user interface

Steps to set frequency shift keying modulation

- (1) After pressing the **Mod** function key, press the **modulation type** soft key, use the knob to select the modulation type as **BPSK**, and press the **ENTER** key. The carrier waveform can be selected as needed. The following is a sine wave.
- (2) Press  to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press  or **Mod** to return to the modulation mode interface.
- (3) Press **Code Rate** to set the code rate. The range is from 2 mHz to 1 MHz.
- (4) Press **Phase Deviation** to select the phase deviation. The range is from 0° to 360°.
- (5) Press **Data Source** to select the setting data source, including (01 code, 10 code, PN15 code, PN21 code).



Oscillating keying (OSK)

The output modulation waveform consists of a carrier wave and a modulated wave. The carrier can only be a sine wave. In phase modulation, the phase of the carrier varies with the keying frequency of the modulated waveform. The user interface for the oscillating keying modulation is shown below.



Figure 5-21 Oscillating keying user interface

Steps to set frequency shift keying modulation

- (1) After pressing the **Mod** function key, press the **Modulation type** soft key, use the knob to select the modulation type as **OSK**, and press the **enter** key. The carrier waveform can be selected as needed. The following is a sine wave.
- (2) Press  to display the waveform and parameters of the current carrier. You can change the parameters of the carrier. For details, please refer to *Output Sine Wave* on page 11. Press  or **Mod** to return to the modulation mode interface.
- (3) Press the **key frequency**. The soft key sets the **key rate**. The range is from 2 mHz to 1 MHz.
- (4) Press **Vibration Time** to select the **vibration time**, ranging from 8ns to 499.75 μ s.

Output the sweep frequency (Sweep)

In the sweep mode, the frequency is output from the start frequency to the end frequency according to the sweep type change frequency within the specified sweep time. Sweeping can only be performed using sine, square, ramp or arbitrary waves.

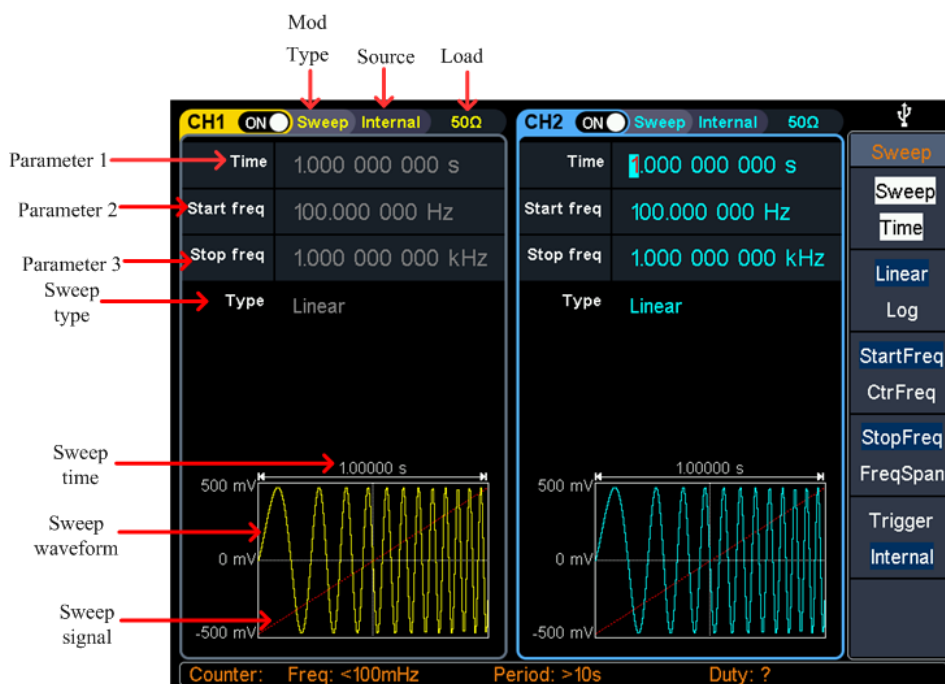



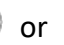



Figure 5-22: Sweep mode user interface

Steps to set the scan mode

- (1) In the sine wave, square wave, ramp wave or arbitrary wave interface, press the **Sweep** function key to enter the scan mode.
- (2) Press , ,  or  to select the sweep waveform. For example, when selecting a sine wave, press  to display the scan waveform and parameters, and change the parameters. For details, please refer to *Output Sine Wave* on page 11.
- (3) Press **Sweep Time** to set the scan time, which is the number of seconds from the start frequency to the stop frequency. The range is from 1ms to 500s.
- (4) Press the Linear **Sweep/Logarithmic Scan** softkey to switch the scan type. When linear sweep is selected, the output frequency changes linearly during the scan; when logarithmic sweep is selected, the logarithm of the output frequency changes during the scan.

- (5) Press the **Start Frequency / Center Frequency** softkey to select the start frequency or center frequency and set the corresponding value, as shown in Figure 1.
- (6) Press the **End Frequency/Frequency Range** softkey to select the end frequency or frequency range and set the corresponding value. See Figure 1 for details.

Wave type	Sine	Square	Ramp	Arbitrary
Parameter				
Minimum start/stop frequency	1uHz			
Maximum start/stop frequency	200MHz	50MHz	5MHz	15MHz (Bulid-in waves) 50MHz (User customized waves)

Table 1

- (7) Press the **Trigger Source** softkey to select the trigger source. The internal is the internal signal source; the external is the external source of the Ext Trig/Burst/Fsk In interface on the rear panel. Under the external signal source, the slope can be selected as positive/negative (Positive: Select to output the trigger signal when rising. Negative: Select to output the trigger signal when falling.); manually select manual trigger, each time you press the front panel knob in the sweep interface, it will start a scan.

Output the burst (Burst)

Press **Burst** function key, that is **burst**, to generate burst waveform output of various waveform functions. The burst can last for a specific number of waveform cycles (N-cycle bursts) or be controlled by an external gate signal (gated burst). Sine, square, ramp, pulse, or arbitrary wave functions can be used (this function is not available for noise waves and harmonics).

Glossary

Burst:

The set of pulses transmitted together is called a "burst". The various signal generators are commonly referred to as the BURST function.

N cycle burst:

Contains a specific number of waveform cycles, each of which is initiated by a trigger event.

Gated burst:

Use external department signals to control when waveform burst waveforms are active

Set N cycle burst

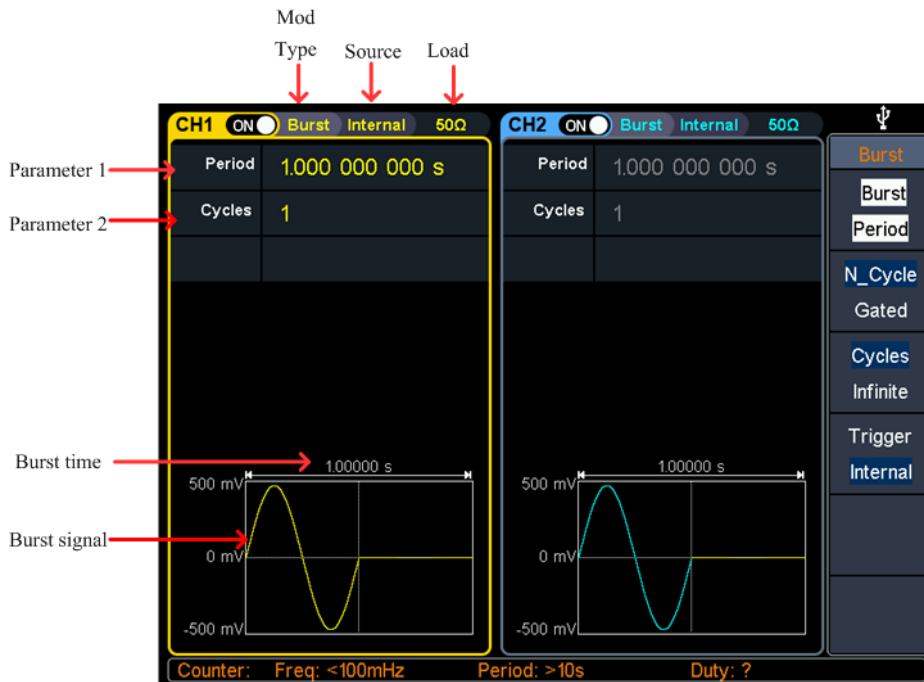









Figure 5-23: N cycle burst user interface

(1) In the sine wave, rectangular wave, ramp wave, pulse wave or arbitrary waveform interface, press the **Burst** function key to **burst**.

(2) Press , , ,  or  to select the waveform function. For example, when selecting a sine wave, press  to display the waveform and parameters, and change the parameters. For details, please refer to *Output Sine Wave* on page 11, and then press  to return to the burst mode interface.


Note: Before configuring the waveform parameters, you must first select the channel you want to configure. Press CH1 or CH2 to select the corresponding channel, and the corresponding channel area in the user interface will light up.

(3) Press the **N Cycle/Gate** softkey to switch to the N cycle.

(4) Press the Trigger Period softkey to set the burst period, which can be set from 10 ns to 500 s (Min = Cycles * Period).

(5) Press the **Cycles/Infinite** softkey to set the number of cycles, which is the number of waveform cycles to be output for each N-cycle pulse train. The range is from 1 to 50,000 cycles. When Infinite is selected, a continuous

waveform is output until a trigger event is received.

Note: In **Burst** mode, the upper limit of the carrier frequency is half of the maximum frequency of the original carrier. Taking a sine wave as an example, the maximum carrier frequency is 200MHz. Press  to set the carrier to 200MHz. Then press the **Burst** softkey menu, then press or Burst to display the original carrier frequency to 100MHz.

Warning:




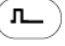


- If necessary, the burst period will increase to accommodate the specified number of cycles.
- For infinite count bursts, an external or manual trigger source start pulse train (except internally) is required.

(6) Press **Source** to select the source. The **internal** is the internal signal source; the external is the external source of the **Ext Trig/Burst/Fsk In** interface on the rear panel. Under the **external** signal source, the **slope** can be selected as positive/negative. (Positive: Select the trigger signal when rising) ; negative: select to output the trigger signal when falling); manually select **manual** trigger, in the N cycle burst interface, press the **Trigger** under the current channel of the front panel to output a burst.

Set the gated burst



Figure 5-24: gated burst user interface

- (1) In the sine wave, square wave, ramp wave, pulse wave or arbitrary waveform interface, press the **Burst** function key.
- (2) Press , , ,  or  to select the waveform function. For example, when selecting a sine wave, press  to display the waveform and parameters, and change the parameters. For details, please refer to *Output Sine Wave* on page 11.

Note: Before configuring the waveform parameters, you must first select the channel you want to configure. Press **CH1** or **CH2** to select the corresponding channel, and the corresponding channel area in the user interface will light up.
- (3) Press the **N Cycle/Gate** softkey to switch to the gate.
- (4) Press the **Polarity** softkey to select the gate signal “Positive” or “Negative”. The default is positive. The gate polarity is only available in gated burst mode. The instrument outputs a pulse train when the gate signal on the [Ext Trig/Burst/Fsk In] connector on the rear panel is "High" or "Low".

Counter

The frequency meter measures signals in the frequency range from 100 mHz to 200 MHz. The **[10MHz In/Out/Counter]** connector on the rear panel is used by default to receive the frequency meter input signal. The frequency meter works from the start, unless the connector is set to an external clock input or clock output.

- (1) Press the front panel **Counter** function key to enter the frequency meter interface.
- (2) Connect the signal to be tested to the **[10MHz In/Out/Counter]** connector on the rear panel.
- (3) Set the counter:
 - Press the **Coupling** soft key to switch AC or DC to set the coupling mode of the input signal.
 - Press the **Sensitivity** softkey to toggle low, medium or high.
For small amplitude signals, the sensitivity is selected to be medium or high.

For low frequency large signals or signals with slow rising edges, low sensitivity is selected and the measurement results are more accurate.

- Press the **HF Suppression** softkey to toggle ON or OFF high frequency rejection.

High-frequency rejection can be used to filter high-frequency components when measuring low-frequency signals, improving measurement accuracy.

When measuring low frequency signals with a frequency less than 1 kHz, turn on high frequency rejection to filter out high frequency noise interference; turn off high frequency rejection when measuring high frequency signals with frequencies greater than 1 kHz.

- Press the **Trigger Level** softkey. Turn the **knob** to change the current cursor position value, press the arrow keys to move the cursor left or right; or use the **numeric keypad** to enter a value and then select the desired unit from the right menu. The trigger level ranges from -2.5 V to 2.5 V.

After the setting is completed, the frequency meter will measure the signal to be tested at the current setting. If the reading is unstable, repeat the above adjustment until the display is stable.

- (4) The frequency, period, duty cycle, positive pulse width, and negative pulse width can be viewed on the frequency meter interface

Utility function setting

Press the **Utility** function key to enter the system options menu. The user can set the display parameters of the signal generator, CH1/2 settings, interface settings, and system parameters. Press **Utility** again to exit the system options menu.

Display Setting

Brightness Control

- (1) Press the **Utility** softkey, select **Display Settings**, and press the **Backlight** softkey to select **Backlight**.
- (2) Turn the **knob** to change the current cursor position value, press the **←/→** arrow key to move the cursor left or right, or use the **numeric keypad** to enter the brightness percentage. The brightness range is from 0% to 100%.

Screen Saver

If there is no operation during the set screen saver time, the screen enters the protection mode (the screen display is turned off, that is, the black screen). Press any key to redisplay the operation interface.

- (1) Press the **Utility** softkey, select **Display Settings**, and press the **Screen Saver** softkey to select the **On/Off** screen saver.
- (2) When the screen saver is turned on, the screen saver time can be set. Turn the **knob** to change the current cursor position value, press the **←/→** arrow key to move the cursor left or right, or use the **numeric keypad** to enter the time in minutes, and the screen saver time range is 1 to 999 minutes.

Separator

The user can set the separator of the screen display data.

- (1) Press the **Utility** softkey, select **Display Settings**, and press the **Delimiter** softkey.
- (2) Press the **Separator** softkey to toggle between commas, spaces, and none.

Taking the frequency parameter as an example:

Comma	Separator: 1.000,000,0
Space	Separator: 1.000 000 0
None	Separator: 1.0000000

Date

- (1) Press the **Utility** softkey, select **Display Settings**, and then press the **Date** softkey to select **Date**.
- (2) Turn the **knob** to change the current cursor position value, press the **←/→** arrow key to move the cursor left or right.

CH1/2 Settings

Synchronize

Our instruments can output basic waveforms (except noise), arbitrary waveforms (except DC), harmonics, sweep waveforms, burst waveforms, and synchronized waveforms of modulated waveforms from a single channel or simultaneously from

two channels. This signal is output from the front panel **[Sync]** connector.

(1) Sync Switch

Enable or disable the sync signal on the [Sync] connector. Press **Utility** to set **CH1 sync/CH2 sync** and select "On" or "Off" sync signal output. The default is "on", which sends the sync signal to the [Sync] connector. The output level on the [Sync] connector is a logic low when the sync signal is turned off.

(2) Synchronization signal of various waveforms

- For sine, square, ramp and pulse waves, the sync signal is a square wave with a 50% duty cycle. When the waveform output is positive, the sync signal is TTL high with respect to the 0V voltage (or DC offset value). When the waveform output is negative, the sync signal is TTL low relative to the 0V voltage (or DC offset value).
- For an arbitrary waveform, the sync signal is a square wave with a variable duty cycle. When the output waveform amplitude reaches a certain value, the sync signal is TTL high.
- For harmonics, the sync signal is referenced to the harmonic order and is a square wave with a variable duty cycle. When the output waveform amplitude is positive, the sync signal is TTL high.
- For AM, FM, PM, and PWM, for internal modulation, the sync signal is referenced to the modulation frequency, and the sync signal is a square wave with a 50% duty cycle. In the first half of the modulation waveform, the sync signal is TTL high. When external modulation is performed, there is no sync signal output.
- For ASK, FSK, PSK, BPSK, 3FSK, 4FSK, the synchronization signal is referenced to the keying frequency, and the synchronization signal is a square wave with a duty cycle of 50%. There is no sync signal output during external modulation.
- For OSK, the sync signal is referenced to the keyed frequency and the sync signal is a square wave with a 50% duty cycle. When the internal crystal oscillator starts, the sync signal is TTL high.
- For N-cycle bursts, the sync signal is TTL high at the beginning of the burst. At the end of the specified number of cycles, the sync signal is TTL low (if the waveform has an associated start phase, it may not be a zero crossing). For an infinite count pulse train, the sync signal is the same as the sync signal of the continuous waveform.
- For external gated bursts, the sync signal follows its gate signal. Note: This signal does not become TTL low until the end of the last cycle (if the waveform has an associated starting phase, it may not be a zero crossing).

Output Setting

Set the load

For each of the two channels of the front panel, the signal generator has a fixed series output impedance of 50 Ω . If the actual load impedance is different from the specified value, the displayed amplitude and offset level will not match the voltage

level of the part under test. The load impedance settings provided are only for the convenience of the user to match the display voltage to the desired load.

The step to set the CH1 or CH2 load value is as follows:

- (1) Press the **Utility** function button to select the CH1/2 setting. Press **CH1 Load** to select CH1 load, or press **CH2 Load** to select CH2 load; press again to switch to high impedance or *ohm ("*" represents a value).
- (2) To change the resistance value, after selecting *ohm in the previous step, turn the **knob** to change the current cursor position value, press the **←/→** arrow key to move the cursor left or right, or use the **numeric keypad** to input the value. The input load range is from 1 ohm to 10k ohm.

Warning:

Each output of the front panel has a fixed 50 Ω series output impedance, regardless of the value specified for this parameter. If the actual load is different from the specified value, the displayed voltage level does not match the actual level.

Interface Setting

- (1) Press the **Utility** function key, select the **interface setting**, and press the **USB device** soft key to switch the USB device.
 - Set the communication protocol type of the USB Device interface on the rear panel.
 - **PC:** This is the internal communication protocol. Select this option when connecting to the ultrawave host computer software via the USB Device interface.
 - **USBTMC:** Select this when you need to use the USBTMC communication protocol standard.
- (2) Press the **Network Settings** button and select Network Settings to go to the next level menu: IP Address, Gateway, Subnet Mask, Port. The physical address displayed on the interface cannot be modified. After setting the network parameters such as the IP address of the user-defined signal generator, you need to wait for 2S or more to restart the machine.
 - Press **IP Address** to select the IP address. Use the numeric keypad and the rotary keys to enter the desired IP address. The format of the IP address is nnn.nnn.nnn.nnn. The first nnn ranges from 1 to 223 (except 127), and the

other three nnn ranges from 0 to 255. It is recommended to ask your network administrator for an available IP address.

- Press **Gateway** and select **Gateway**. Use the numeric keypad and knob keys to enter the desired gateway address. The default gateway format is nnn.nnn.nnn.nnn. The first nnn ranges from 1 to 223 (except 127), and the other three nnn ranges from 0 to 255. It is recommended to consult your network administrator for an available IP address.
- Press the **Subnet Mask** softkey to select the **subnet mask**. Use the numeric keypad and knob keys to enter the desired subnet mask address. The default gateway format is nnn.nnn.nnn.nnn. Where nnn ranges from 0 to 255. It is recommended to ask your network administrator for an available IP address.
- Press **Port** to select the port. Use the numeric keypad and knob keys to enter the desired port value, which ranges from 0001 to 4000.

System Setting

Select the language

Press the **Utility** function key to select **System Settings** and press the **Language** softkey to switch the display language.

Buzzer

Press the **Utility** function button, select **System Settings**, and press the **beep** soft key to select the “on” or “off” buzzer.

Clock source

An internal clock source is provided, an external clock source from the [10MHz In/Out/Counter] input on the rear panel is also accepted, and a clock source can be output from the [Ref Clk Out] connector for use by other devices.

Warning:

The amplitude of the [10MHz In/Out/Counter] input signal must be above 1 V.

Press the **Utility** function key, select **System Settings**, press the **Clock Source** softkey to select the

clock source, and then press the soft key to switch. Internal/External

Warning:

The clock source defaults to the internal clock source. When an external clock source is required, this function is switched to the outside. At this time, the clock source forcibly outputs the output. When the clock source output selection is turned on, the clock source must be switched to internal, and the frequency meter function stops after the clock output is turned on.

Clock Output

Press the **Utility** function key, select **System Settings**, select the **Clock Output** soft key, press the **Clock Output** menu, and then press the soft key to toggle on/off.

Firmware update

Press the **Utility** softkey to select **System Setup**.

Plug the USB storage device into the USB connector on the front panel of the instrument. (Note: If the USB storage device is not plugged in, the **Firmware Upgrade** menu will be disabled)

Select the **Firmware Upgrade** softkey, press the **firmware upgrade** menu, use the front panel knob to select USBDEVICE, press to enter the softkey, and enter the USB storage device to browse the file.

Use the front panel knob to select the downloaded firmware file and press the **Execute** softkey to perform the firmware upgrade.

Note: The firmware file name is as follows: xxx model _Vx.x.x version.upp.

Note: If the firmware update fails, an error code will be displayed on the screen. The error message corresponding to the error code can be found in Schedule 2.

Error Code	Error Information
2	File too large
3	Error reading firmware file
4	Verify firmware file error
5	Firmware type flag error
6	Instrument version cannot be upgraded to firmware file version
7	Instrument model does not match firmware file model

Table 2

Restore to factory setting

Press the **Preset** function key, press the **reset** soft key, and then press the **Enter** to restore the instrument's settings to the factory default values (Note: "Reset Settings"

menu is “Factory Settings” to press the “Reset” soft key for factory setting.). The factory default parameter values are as follows

Output Configuration	Factory Setting
CH1 signal output switch	OFF
CH2 signal output switch	OFF
Function	Sine
Frequency	1 kHz
Amplitude/offset	1 Vpp / 0 Vdc

Waveform Configuration	Factory Setting
Frequency	1.000kHz
Period	1.000ms
Amplitude	1.000Vpp
Offset	0.000V
High Level	500mV
Low Level	-500mV
Start Phase	0deg
Symmetry	50%
Pulse Width	500.000us
Duty Cycle	50.00%
Rising Time	1.953125us
Falling Time	1.953125us
Build-in Wave	X ²
Harmonic Wave Type	Even harmonic
Harmonic Wave Times	2
Number	2
Harmonic Wave Amplitude	1.000Vpp
Harmonic Wave Phase	0deg

Modulation Waveform	Factory Setting
Modulation type	AM
Modulated waveform	Sine
Amplitude modulation frequency	100.000Hz

5. Panel Operation

Modulation depth	100%
Source	Internal
Frequency modulation frequency	100.000Hz
Frequency offset	100.000Hz
Phase modulation frequency	100.000Hz
Phase deviation	0deg
PWM rate	100.000Hz
Duty cycle deviation	0.0%
ASK rate	100.000Hz
ASK amplitude	1.000Vpp
PSK rate	100.000Hz
PSK phase deviation	0deg
FSK rate	100.000Hz
Frequency hopping	100.000Hz
Frequency hopping 1	100.000Hz
Frequency hopping 2	100.000Hz
Frequency hopping 3	100.000Hz
Code rate	100.000Hz
BPSK phase deviation	180deg
Data source	PN15 code
Key frequency	100.000Hz
Vibration time	100.000us

Sweep	Factory Setting
Sweeping time	1.000s
Sweeping method	Linear Sweep
Starting frequency	100.000Hz
Termination frequency	1.000kHz
Center frequency	550.000Hz
Frequency range	900.000Hz
Trigger source	Internal
Slope	Positive

Burst	Factory Setting
--------------	------------------------

5. Panel Operation

Trigger interval	1.000s
Burst mode	N cycle
Number of cycles	1
Trigger source	Internal
Slope	Positive
Polarity	Positive

Counter	Factory Setting
Coupling	AC
Sensitivity	Low
High frequency suppression	ON
Trigger level	0.000V

Edit	Factory Setting
Number of waveform points	1000
Interpolation	Off
Template	Blank

Save/recall instrument settings	Factory Setting
Reset settings	Factory setting
Power-on setting	Last time setting
user settings	Setup0

Accessibility	Factory Setting
Backlight	100%
Screen saver	turn on
Screen saver time	30Minute
Separator	Space
CH1 synchronization	shut down
CH2 synchronization	shut down
CH1 load	50ohm
CH2 load	50ohm
USB device	USBTMC
IP address	192.168.1.99
Gateway	192.168.1.1
Subnet mask	255.255.255.000
Port	3000
Language	Subject to the actual machine
Buzzer	turn on
Clock source	internal

Between Channels	Factory Setting
Frequency lock	Off
Amplitude lock	Off

Edit the Arbitrary Wave (Edit)

Press the front panel **Edit** function key to enter the arbitrary wave editing interface.

- (1) **Set the number of waveform points:** Press the **number of waveform points** softkey, use the **knob** to change the value directly or use the **numeric keypad** to input and select the unit softkey. The number of points ranges from 2 to 100,000.
- (2) **Set interpolation:** Press the **Interpolate** softkey to toggle the interpolation **on/off**. Select **On** to connect each waveform point with a straight line; select **Off**, the voltage level between each waveform point remains the same, creating a waveform similar to the step.

- (3) **Select a template:** Press the **Template** softkey to select blank, sine, square, ramp, and noise.
- (4) **Edit Waveform Point:** Press to **edit the waveform point** to enter the Edit Waveform Point menu.
- Select the **number of points** and enter the number of the point you want to set.
 - Select the **voltage** and enter the voltage value to be set at this point.
 - Repeat this step to set all the points you want to set.
 - Press **Store** to enter the file system interface.
 - If you want to save the waveform to the built-in memory, check INTER and press to **enter** the softkey. Turn the knob to select one of the USER files (EditMemory cannot be selected) and press the **Save** softkey. (The file size is displayed on the right side of the USER file. If 0B is displayed, it means the file is empty.)
- ◆ **Description:** EditMemory is a temporary data space created, saved, edited or recalled by any arbitrary wave. Saving the waveform is to save the data of this space to the user-specified location (EditMemory is in the memory and never empty). The data in this space is changed after an arbitrary waveform is called, a new waveform is created, or a related programming command is received.

If you want to save to a USB storage device, you need to plug the USB storage device into the front panel USB interface. Turn the knob to select USBDEVICE. Press to **enter** the softkey and the instrument will list the directories of the folders and files in the USB storage device. You can turn the knob to select a folder or file. Press to **enter** the softkey to enter the currently selected folder. To return to the parent directory, press the **Back** soft key.

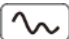
After selecting the storage path, press the **Save As** softkey and the input keyboard appears on the screen. Turn the knob to select a character. Press the **uppercase/lowercase** softkey to toggle the case of keyboard characters. Press the **Select** soft key to enter the current character. Press the Delete soft key to delete the last character that has been entered. Press the **Finish** soft key to finish editing, and the waveform will be saved in the current path with the file suffixed by bin.

File system (Store)

File system memory is divided into internal memory (INTER) and removable memory (USBDEVICE). When a USB device is connected, the main interface displays INTER and USBDEVICE. If no USB device is connected, only the internal memory INTER is displayed. The internal memory can store 32 arbitrary waveform data.

Press the front panel **Store** function key to enter the file system.

Save Current Arbitrary Wave

- (1) Press the  button to enter the Arbitrary Wave menu and configure the waveform parameters.
- (2) Press the front panel **Store** function key to enter the file system.
 - If you want to save the current arbitrary waveform to the built-in memory, select INTER and press to **enter** the soft key. Turn the knob to select one of the USER files (EditMemory cannot be selected) and press the **Save** softkey. (The file size is displayed on the right side of the USER file. If 0B is displayed, it means the file is empty.)

Description: EditMemory is a temporary data space created, saved, edited or recalled by any arbitrary wave. Saving the waveform is to save the data of this space to the user-specified location (EditMemory is in the memory and never empty). The data in this space is changed after an arbitrary waveform is called, a new waveform is created, or a related programming command is received.

- If you want to save to a USB storage device, you need to plug the USB storage device into the front panel USB interface. Turn the knob to select USBDEVICE. Press to **enter** the softkey and the instrument will list the directories of the folders and files in the USB storage device. You can turn the knob to select a folder or file. Press to **enter** the softkey to enter the currently selected folder. To return to the parent directory, press the **Back** soft key.

After selecting the storage path, press the Save As softkey and the input keyboard appears on the screen. Turn the knob to select a character. Press the uppercase/lowercase softkey to toggle the case of keyboard characters. Press the Select soft key to enter the current character. Press the Delete soft key to delete the last character that has been entered. Press the Finish soft key to finish editing, and the waveform will be saved in the current path in a file format such as bin.

Bring up arbitrary wave files in internal/external memory

Press the front panel **Store** function key to enter the file system.

- To call up the waveform file in the internal memory, select INTER under the memory selection interface and press to **enter** the soft key. Turn the knob to select a file and press to call up the softkey. If the reading is successful, the screen will prompt “File Read Successful”.

Note: The file size is displayed on the right side of the file. If 0B is displayed, the file is empty.

- To recall the waveform file in the USB storage device, turn the knob to select USBDEVICE in the memory selection interface. Press to enter the softkey and the instrument will list the directories of the folders and files in the USB storage device. Turn the knob to select a folder or file. Select the file with the suffix of bin and press to call up the softkey. If the reading is successful, the screen will prompt “File Read Successful”. Press the Save As soft key, a soft keyboard will appear on the screen interface. We can use the front panel knob to rotate left or right or the right menu soft key to create and name files.

Note:The screen will output the waveform file <500kB, which can be directly previewed in the lower right corner of the screen. If the knob is named, press the knob once to confirm it. If you press and hold the button (greater than 2s), the button will be saved when it is popped up. The current screen interface in bmp format to the u disk specific path ((model) / IMAGE / xx.bmp).

- Copy the waveform file from the USB storage device to the internal memory: After the waveform file in the USB storage device is called up according to the previous step, press the Back soft key to return to the upper directory. After returning to the memory selection interface, turn the knob to select INTER and press to enter the soft key. Turn the knob to select a USER file and press the Save button to copy the waveform file to the internal memory.

Note:In the arbitrary waveform interface, Shape displays the storage location or waveform name of the current arbitrary waveform. USER indicates the internal memory, External indicates the USB storage device, and if it is a built-in waveform, the built-in waveform name is displayed.

Clear waveform from memory

- (1) Press the front panel **Store** function key to enter the file system.
- (2) Select INTER under the memory selection interface and press to **enter** the soft key. Press the **Security** soft key, the screen pops up, and then press the **OK** soft key to clear all waveforms in the internal memory.

Save/recall instrument settings (Preset)

The instrument settings can be saved as files in internal memory or on an external

USB storage device. Up to 16 instrument settings can be saved in the instrument's internal memory. To save more settings, use a USB storage device. The settings file saved to the USB storage device uses the extension CFG. The saved settings can be restored from files in the internal memory or USB storage device.

Operation Steps:

Press the front panel **Preset** function key to enter the preset menu, and press the **Save/Read Settings** soft key to enter the memory selection interface.

- If you want to save the settings to the built-in memory, check INTER and press the **Enter** soft key. Turn the knob to select a Setup file and press the **Save** softkey. (The file size is displayed on the right side of the Setup file. If 0B is displayed, it means the file is empty.)

Note: Press the **Security** softkey and press the **OK** soft key to clear all settings in the internal memory.

- If you want to save to a USB storage device, you need to plug the USB storage device into the front panel USB interface. Turn the knob to select USBDEVICE. Press to **enter** the softkey and the instrument will list the directories of the folders and files in the USB storage device. You can turn the knob to select a folder or file. Press to **enter** the softkey to **enter** the currently selected folder. To return to the parent directory, press the **Back** soft key.

After selecting the storage path, press the **Save As** softkey and the input keyboard appears on the screen. Turn the knob to select a character. Press the **uppercase/lowercase** softkey to toggle the case of keyboard characters. Press the **Select** soft key to enter the current character. Press the **Delete** soft key to delete the last character that has been entered. Press the **Finish** soft key to complete the editing. The current instrument settings will be saved in the current path in the cfg file format.

- To recall the settings, select the desired file and press to **call up** the softkey.

Use build-in help (Help)

(1) To get help for any front panel buttons or menu softkeys, first press the front panel **Help** softkey, then press the button you need help with.

(2) Press the **Help** softkey again to exit the help interface.

6. Communicate with PC

Supports communication with a computer via a USB port or a LAN port. Using the Waveform Editor software installed on the computer, the signal generator can be operated on the computer to control the output of the signal generator.

Here's how to connect to a computer. First, install the Waveform Editor software on the CD-ROM on your computer. Then, there are several connection options to choose from.

Using USB Port

- (1) **Set the USB device protocol type of the signal generator:** Press **Utility** → **I/O Setup** → **USBDEV** , switch to PC.
- (2) **Connection:** Connect the USB Device interface on the rear panel of the signal generator to the **USB interface** of the computer with a USB cable.
- (3) **Install the driver:** Run Waveform Editor software on the computer, press F1 to view the built-in help documentation. Follow the instructions to install the driver. The path of the driver is the USBDRV folder in the directory where the Waveform Editor communication software is located, such as "C:\Program Files (x86)\DS_Wave\Waveform Editor\USBDRV".
- (4) **Host computer communication port setting:** Open the Waveform Editor software, click "Communications" in the menu bar, select "Ports-Settings", in the setting dialog box, select the communication port as "USB". After the connection is successful, the connection status prompt in the lower right corner of the software interface turns green.

Using LAN Port

Connect Directly

- (1) **Connection.** Plug one end of the network cable into the LAN connector on the rear panel of the signal generator; the other end is plugged into the LAN interface of the computer.
- (2) **Set the network parameters of the computer.** Since the signal generator does not support automatic IP address acquisition, you need to specify the IP yourself. Here we set the IP address to 192.168.1.71.
- (3) **Set the network parameters of the host computer.** Run Waveform Editor software on the computer. In the "Communications" menu, under "Ports-Settings", select the communication port as "LAN", the IP is set to be the same as the first three fields of the computer's network IP in step (2), and the

last field has a different IP address. It is "192.168.1.99"; the port can be set to any value from 0 to 4000. However, since ports below 2000 are often occupied, it is recommended to set it to 2000 or higher. Here, it is set to "3000".

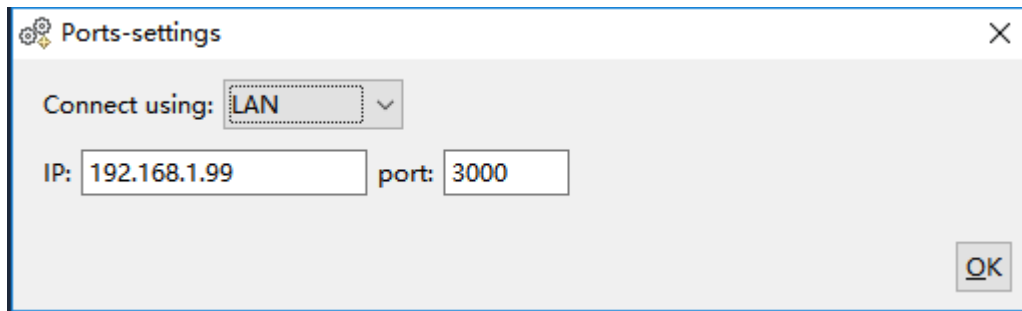


Figure 6-1 Setting the network parameters of the host computer

- (4) **Set the network parameters of the signal generator.** In the signal generator, press **Utility** → **I/O Setup** → **Network setting** to enter the submenu. Set the IP address and port to the IP and port in the PC software port settings in step (3). After the shutdown and restart, if the data can be obtained normally in the PC software, the connection is successful.

Connect through a Router

- (1) **Connection.** Connect the LAN interface on the rear panel of the signal generator to the router with a network cable. The computer is also connected to the router.
- (2) **Set the network parameters of the computer.** Since the signal generator does not support automatic IP address acquisition, you need to specify the IP yourself. The default gateway and subnet mask settings must match the settings of the router. For example, the IP address is set to 192.168.1.71, the subnet mask is set to 255.255.255.0, and the default gateway is set to 192.168.1.1.
- (3) **Set the network parameters of the host computer.** Run Waveform Editor software on the computer. In the "Communications" menu, under "Ports-Settings", select the communication port as "LAN", the IP is set to be the same as the first three fields of the computer's network IP in step (2), and the last field has a different IP address. It is "192.168.1.99"; the port can be set to any value from 0 to 4000. However, since ports below 2000 are often occupied, it is recommended to set it to 2000 or higher. Here, it is set to "3000".

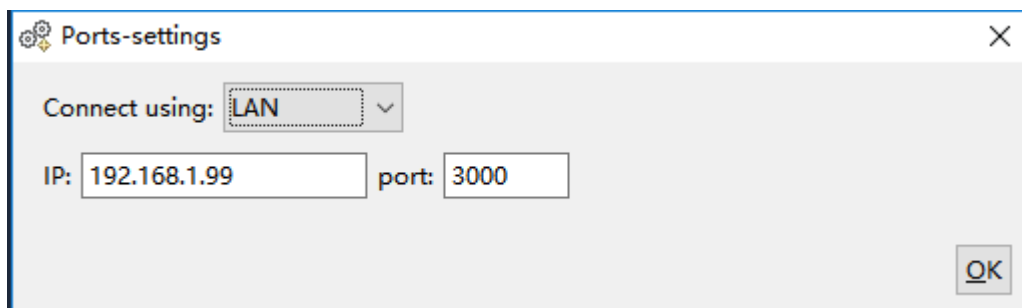


Figure 6-2 Set the network parameters of the host computer

- (4) **Set the network parameters of the signal generator.** In the signal generator, press **Utility** → **I/O Setup** → **Network setting** to enter the submenu. Set the IP address and port to the IP and port in the PC software port settings in step (3). The gateway settings need to be the same as the gateway settings of the router. After the shutdown and restart, if the data can be obtained normally in the PC software, the connection is successful.

For the specific operation method of Waveform Editor software, please press F1 to view the built-in help documentation.

7. Troubleshooting

1. If the instrument is still black and there is no display when you press the power switch, please follow the steps below:

- Check if the power connector is connected.
- Check that the voltage selector is in the correct gear position.
- Check that the fuse at the power connector meets the specified type and rating and is blown (can be opened with a flat-blade screwdriver).
- After completing the above checks, restart the instrument.
- If you still cannot use this product, please contact OWON and let us serve you.

2. The measured value of the output signal amplitude does not match the displayed value:

Check that the actual load value of the signal is consistent with the load value set by the system. For details, please refer to *Set the load* on page 51.

If you encounter other problems, please try resetting the settings (see *Clock source* on page 53) or reboot. If you still cannot use this product, please contact OWON and let us serve you.

8. Specification

All specifications apply to this product unless otherwise stated. The signal generator must be operated continuously for more than 30 minutes at the specified operating temperature to meet these specifications.

In addition to the specifications marked with the word "Typical", the specifications used are guaranteed.

Waveform	
Standard Waveform	Sine wave, square wave, ramp wave, pulse wave, noise, arbitrary wave, harmonic
Arbitrary waveform	Sinc, exponential rise, exponential decline, electrocardiogram, Gaussian, semi-positive, Lorentz, dual audio, DC voltage totaling more than 150 kinds
Sampling Rate	1.25GSa/s
Number of channels	2
Number of digits	14bits

Frequency Feature		
Frequency resolution: 1 μ Hz or 10 significant figures;		
Frequency stability: ± 1 ppm at 0-40C;		
Frequency aging rate: ± 1 ppm per year.		
Sine wave	XDG3252	1 μ Hz—250 MHz
	XDG3202	1 μ Hz—200 MHz
	XDG3162	1 μ Hz—160 MHz
	XDG3102	1 μ Hz—100 MHz
	XDG3082	1 μ Hz—80 MHz
Square wave	XDG3252	1 μ Hz—50 MHz
	XDG3202	
	XDG3162	
	XDG3102	1 μ Hz—40 MHz
	XDG3082	1 μ Hz—30 MHz
Ramp wave	1 μ Hz—5 MHz	
Pulse wave	1 μ Hz—25 MHz	
Noise wave	120 MHz bandwidth (-3dB) (Gaussian white noise)	
Arbitrary wave	1 μ Hz—15MHz (Bulid-in waves); 1 μ Hz—50MHz (User customized waves)	
Harmonic wave	XDG3252	1 μ Hz—125 MHz
	XDG3202	1 μ Hz—100 MHz
	XDG3162	1 μ Hz—80 MHz
	XDG3102	1 μ Hz—50 MHz
	XDG3082	1 μ Hz—40 MHz

8.Specification

Amplitude characteristics (not specifically labeled, the load defaults to 50Ω)		
Output amplitude	High Resistance	2mVpp to 20Vpp (≤ 40MHz) 2mVpp to 10Vpp (≤80MHz) 2mVpp to 5Vpp (≤120MHz) 2mVpp to 2Vpp (≤250MHz)
	50 Ω	1mVpp to 10Vpp (≤ 40MHz) 1mVpp to 5Vpp (≤80MHz) 1mVpp to 2.5Vpp (≤120MHz) 1mVpp to 1Vpp (≤250MHz)
Amplitude accuracy	±(1% of setting + 1 mVpp) (Typical value 1kHz sine, 0V offset)	
Amplitude resolution	1 mVpp or 4 digits	
DC offset range (High resistance, open circuit)	±(10 Vpk – Amplitude Vpp/2)	
DC offset range	±(5 Vpk – Amplitude Vpp/2)	
DC offset accuracy	±(1 % of setting + 1 mV + amplitude Vpp * 0.5%)	
Offset resolution	1 mV or 4 digits	
Output Impedance	50Ω (typical)	

Waveform Feature

Sine

Bandwidth flatness (1 Vpp, relative to 1kHz)	≤10MHz: ±0.2dB ≤60MHz: ±0.3dB ≤100MHz: ±0.5dB ≤160MHz: ±1dB ≤250MHz: ±1.5dB
Harmonic distortion	Typical (0dBm) DC to 1MHz: <-65dBc 1MHz to 10MHz: <-60dBc 10MHz to 120MHz: <-50dBc 120MHz to 250MHz: <-45dBc
Total harmonic distortion	<0.05 %, 10 Hz to 20 kHz, 1 Vpp
Non-harmonic distortion	Typical (0dBm) ≤10MHz: <-70dBc >10MHz: <-70dBc + 6dB/ sound interval
Phase noise	Typical (0dBm, 10kHz offset) 10MHz: ≤-110dBc/Hz

Square

Rise/fall time	<5ns
Jitter	300ps + 100ppm
Overshoot	< 3%
Duty cycle	50.0% (fixed)

8.Specification

Ramp	
Linearity	< 0.1% of peak output (typical 1 kHz, 1 Vpp, symmetry 50%)
Symmetry	0% to 100%
pulse	
Pulse Width	12 ns to 1000 ks
Duty cycle	0.3% to 99.7%
Rise and fall time	≥7ns
Overshoot	< 3%
Jitter	300ps + 100ppm
Noise	
Types	Gaussian white noise
Bandwidth (-3dB)	120M
Arbitrary wave	
Bandwidth	120M
Waveform length	2 to 1M points
Sampling rate	< = 312M (at frequency <25kHz) 1.25G (at frequency ≥25kHz)
Amplitude accuracy	14 bits
Minimum rise and fall time	< 7 ns
Jitter	3 ns
Harmonic wave	
Harmonic number	≤16
Frequency Range	1μHz to 100MHz
Harmonic type	Odd, even, sequential, custom
Harmonic amplitude	Each harmonic amplitude can be set
Harmonic phase	Each harmonic phase can be set

Modulated Waves

AM	
Carrier	Sine wave, square wave, ramp wave, arbitrary wave
Modulated signal source	Internal or external
Internal modulation waveform	Sine wave, square wave, ramp wave, white noise, arbitrary waveform
Internal amplitude modulation frequency	2 mHz to 100 kHz
Depth	0.0% to 100.0%
FM	
Carrier	Sine wave, square wave, ramp wave, arbitrary wave
Modulated signal source	Internal or external

8.Specification

Internal modulation waveform		Sine, square, ramp, white noise, and arbitrary waveforms
Internal modulation frequency		2 mHz to 100 kHz
Frequency offset		$2 \text{ mHz} \leq \text{offset} \leq \min(\text{carrier frequency}, \text{carrier maximum frequency} - \text{carrier frequency})$ by default, the smaller of the two
PM		
Carrier		Sine wave, square wave, ramp wave, arbitrary wave
Modulated signal source		Internal or external
Internal modulation waveform		Sine, square, ramp, white noise, and arbitrary waveforms
Internal phase modulation frequency		2 mHz to 100 kHz
Phase deviation range		$0^\circ \sim 180^\circ$
PWM		
Carrier		Pulse wave
Modulated signal source		Internal or external
Internal modulation waveform		Sine, square, ramp, white noise, and arbitrary waveforms
Internal phase modulation frequency		2 mHz to 100 kHz
Offset		0 to min (min is the smaller value of pulse wave duty cycle and 100%-pulse wave duty cycle)
FSK		
Carrier		Sine wave, square wave, ramp wave, arbitrary wave
Modulated signal source		internal
Internal modulation waveform		50% square wave
FSK frequency		2 mHz to 1MHz
3FSK		
Carrier		Sine wave, square wave, ramp wave, arbitrary wave
Modulated signal source		internal
Internal modulation waveform		50% square wave
FSK frequency		2 mHz to 1MHz
4FSK		
Carrier		Sine wave, square wave, ramp wave, arbitrary wave
Modulated signal source		internal

8.Specification

source	
Internal modulation waveform	50% square wave
PSK	
Carrier	Sine wave, square wave, ramp wave, arbitrary wave
Modulated signal source	Internal or external
Internal modulation waveform	50% square wave
PSK frequency	2 mHz to 1MHz
ASK	
Carrier	Sine wave, square wave, ramp wave, arbitrary wave
Modulated signal source	Internal or external
Internal modulation waveform	50% square wave
ASK frequency	2 mHz to 1MHz
BPSK	
Carrier	Sine wave, square wave, ramp wave, arbitrary wave
Modulated signal source	internal
Internal modulation waveform	50% square wave
BPSK frequency	2 mHz to 1MHz
OSK	
Carrier	Sine wave
Modulated signal source	internal
Internal modulation waveform	50% square wave
Oscillation time	8ns to 499.75μs
OSK frequency	2 mHz to 1MHz
Sweep	
Carrier	Sine, rectangular wave, ramp wave, arbitrary wave
Minimum/maximum starting frequency	1uHz
Maximum/termination frequency	Sine wave: 200MHz Square wave: 50MHz Ramp wave: 5MHz Arbitrary wave: 15MHz (built-in waveform) or 50MHz (user-defined waveform)
Types	Linear, logarithmic
Sweep direction	Up / Down

8.Specification

Sweep time	1 ms to 500 s \pm 0.1%
Trigger source	Internal, external, manual
Burst	
Waveform	Sine wave, square wave, ramp wave, pulse wave and arbitrary wave
Types	Count (1 to 50,000 cycles), unlimited, gated
Trigger source	Internal, external, manual
Carrier frequency	2mHz to 100MHz
Internal cycle	10 ns to 500 s (Min = Cycles * Period)
Gate source	External trigger

Counter Specification

Measurement function	Frequency, period, positive pulse width, negative pulse width, duty cycle	
Frequency Range	Single channel: 100 mHz to 200 MHz	
Frequency resolution	7 digits	
Coupling method	AC, DC	
Voltage range and sensitivity (non-modulated signal)		
DC coupling	DC offset range	\pm 1.5 V
	100 mHz to 100 MHz	250 mVp-p - 5 Vp-p (AC+DC)
	100 MHz to 200 MHz	400 mVp-p - 5 Vp-p (AC+DC)
AC coupling	1 Hz to 100 MHz	250 mVp-p - 5 Vp-p _p
	100 MHz to 200 MHz	400 mVp-p - 5 Vp-p
Pulse width and duty cycle measurement	1 Hz to 10 MHz (100 mVpp to 5 Vpp)	
Input resistance	1 M Ω	
Sensitivity	Can set high, medium and low three files	
Trigger level range	\pm 2.5 V	
Channel coupling	1 Hz to 10 MHz (100 mVpp to 5 Vpp)	
Amplitude lock, frequency lock, channel copy		

Input/Output

Communication Interface	USB Host, USB Device, LAN
External modulation input	
Input frequency range	DC-20 kHz
Input level range	\pm 1 V full scale
Input resistance	10 k Ω typical value
External trigger input	
Level	TTL-compatible
Slope	Rise/fall optional
Pulse Width	>100 ns
External clock input (frequency meter input)	

8.Specification

External clock input (frequency meter input) impedance	1M Ω DC coupled
Input level range	100 mVp-p to 3.3 Vp-p
Lock time	<1s
Lock range	10 MHz \pm 9 kHz
External clock output	
Frequency	10 MHz
Impedance	50 Ω , DC coupling
Amplitude	1.6Vpp 50 Ω impedance
Sync Output	
Level	TTL-compatible
Maximum frequency	1MHz

Display:

Feature	Description
Display type	8-inch color LCD display
display resolution	800 horizontal \times 600 vertical pixels
Display color	65536 colors, 16 bits, TFT

Power:

Feature	Description
Voltage	100 - 240 VAC, 50/60 Hz, CAT II
Power consumption	Less than 50 W
Fuse	250 V, F2AL
Start time	Booting for 30 mins

Environment:

Feature	Description
Temperature	Working temperature: 0 $^{\circ}$ C to 40 $^{\circ}$ C Storage temperature: -20 $^{\circ}$ C to 60 $^{\circ}$ C
Relative humidity	\leq 90%
Height	Operating 3,000 meters Non-operation 12,000 meters
Cooling method	Smart fan cooling

Mechanical Specification:

Feature	Description
Dimension	340 mm (Length) \times 177 mm (Height) \times 90mm (Width)
Weight	2.5 kg

Adjustment interval:

The recommended calibration interval is one year.

9. Appendix

Appendix A: Accessories

- A power cord that meets the standards of the country where you are located
- A USB communication cable
- A communication software CD
- A Quick Guide
- One BNC/Q9 line

Appendix B: Maintenance and cleaning

General maintenance

Do not store or place the instrument where the LCD monitor will be exposed to direct sunlight for long periods of time.

Cautious: Do not allow sprays, liquids, and solvents to get on the instrument to avoid damaging the instrument.

Cleaning

The instrument is often checked for usage. Follow the steps below to clean the outer surface of the instrument:

1. Wipe the dust on the outside of the instrument with a soft cloth. When cleaning the LCD screen, be careful not to scratch the transparent LCD screen.
2. Wipe the instrument with a soft cloth that is damp but not dripping. Please pay attention to disconnect the power supply. It can be scrubbed with a mild detergent or water. Do not use any abrasive chemical cleaners to avoid damaging the instrument.



Warning: Before re-energizing, please confirm that the instrument has dried out to avoid electrical short circuit or even personal injury due to moisture.

PC Software USB Driver Install Guide

Use the supplied USB cable to connect the oscilloscope with a PC through their USB ports.

Note: If you use a USB cable that is not supplied by us, some problems such as connection error and signal disturbing might occur.

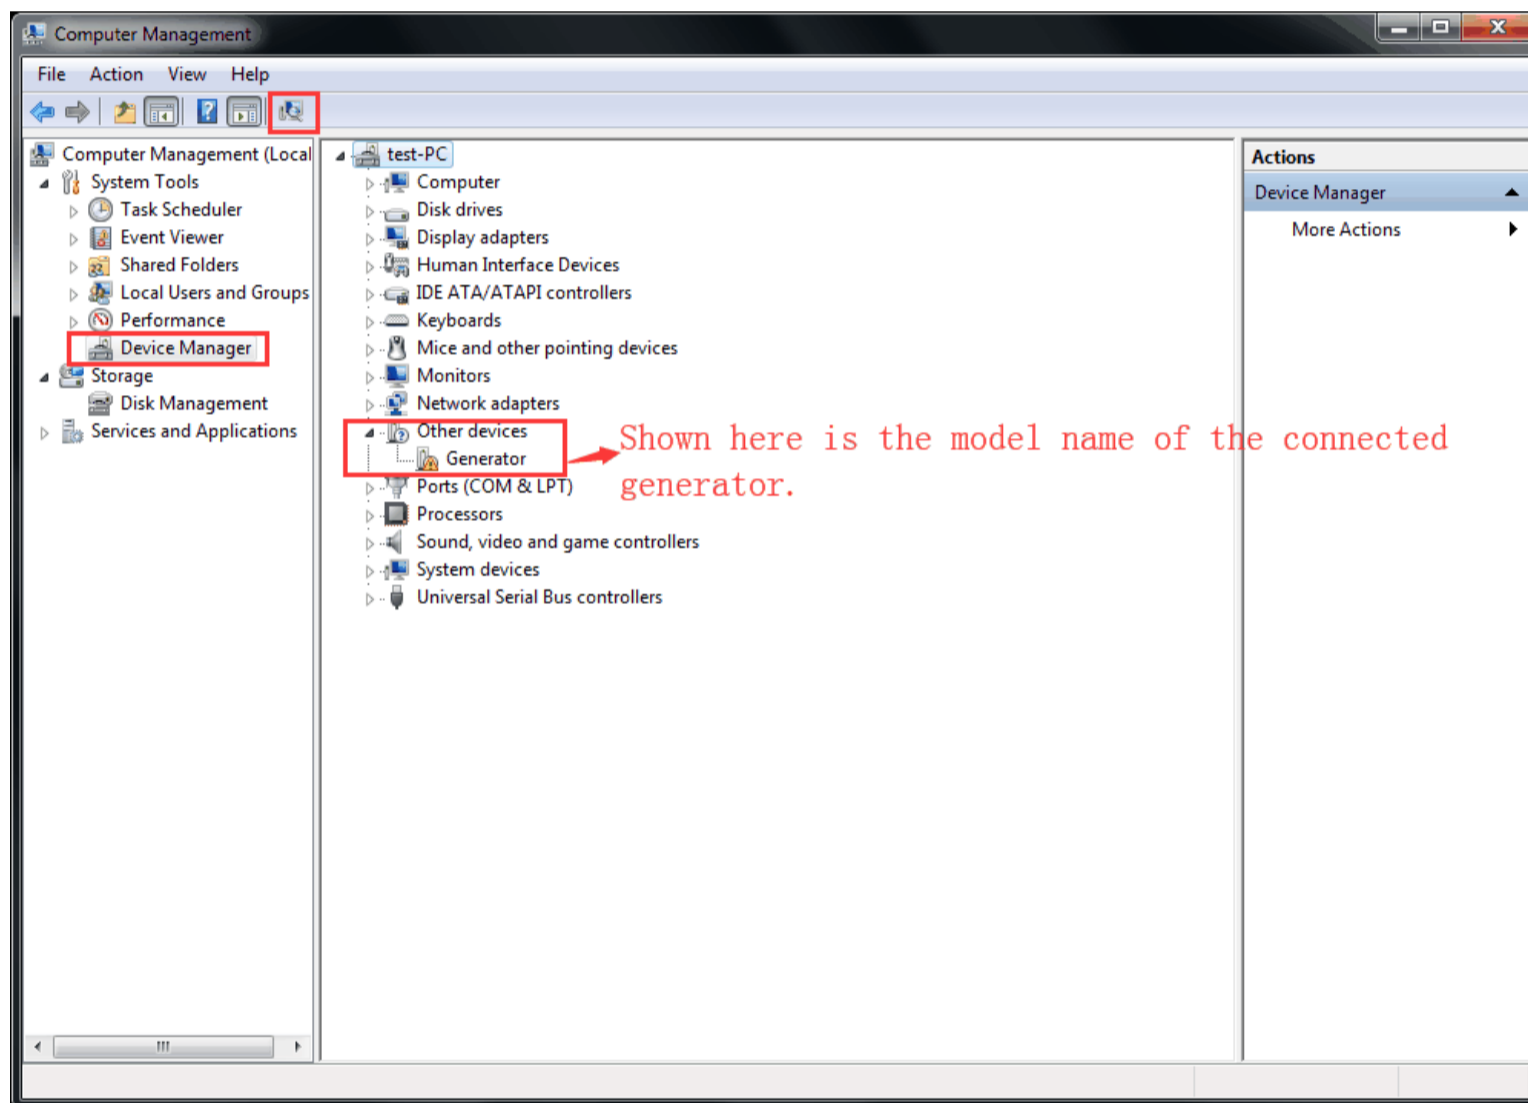
Install Guide for Windows 10\Windows 8\Windows 7\Windows Vista

During the whole installation, please assure that the device is running well and plugged into PC from USB.


Right click [**Computer**], you can find it on the desktop, or in [**Start**] menu.




In the pop up menu, click [**Manage**] and it will open a window named "Computer Management", as follow, in the left side click [**Device Manager**], it will show a devices tree in the middle, and then click the last one button "Scan for hardware changes" in tool bar as follow, and if the device is running well and plugged into PC, computer will detect an unknown device with a "!" icon.



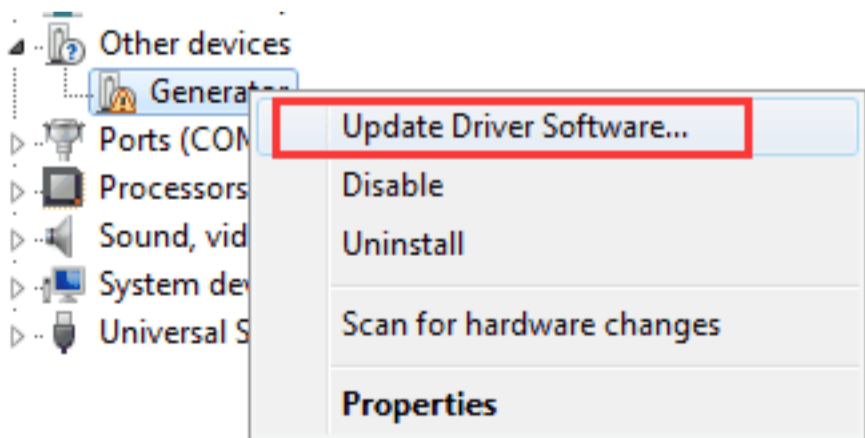
Right click the unknown device icon, in the pop up menu click [**Update Driver Software...**],



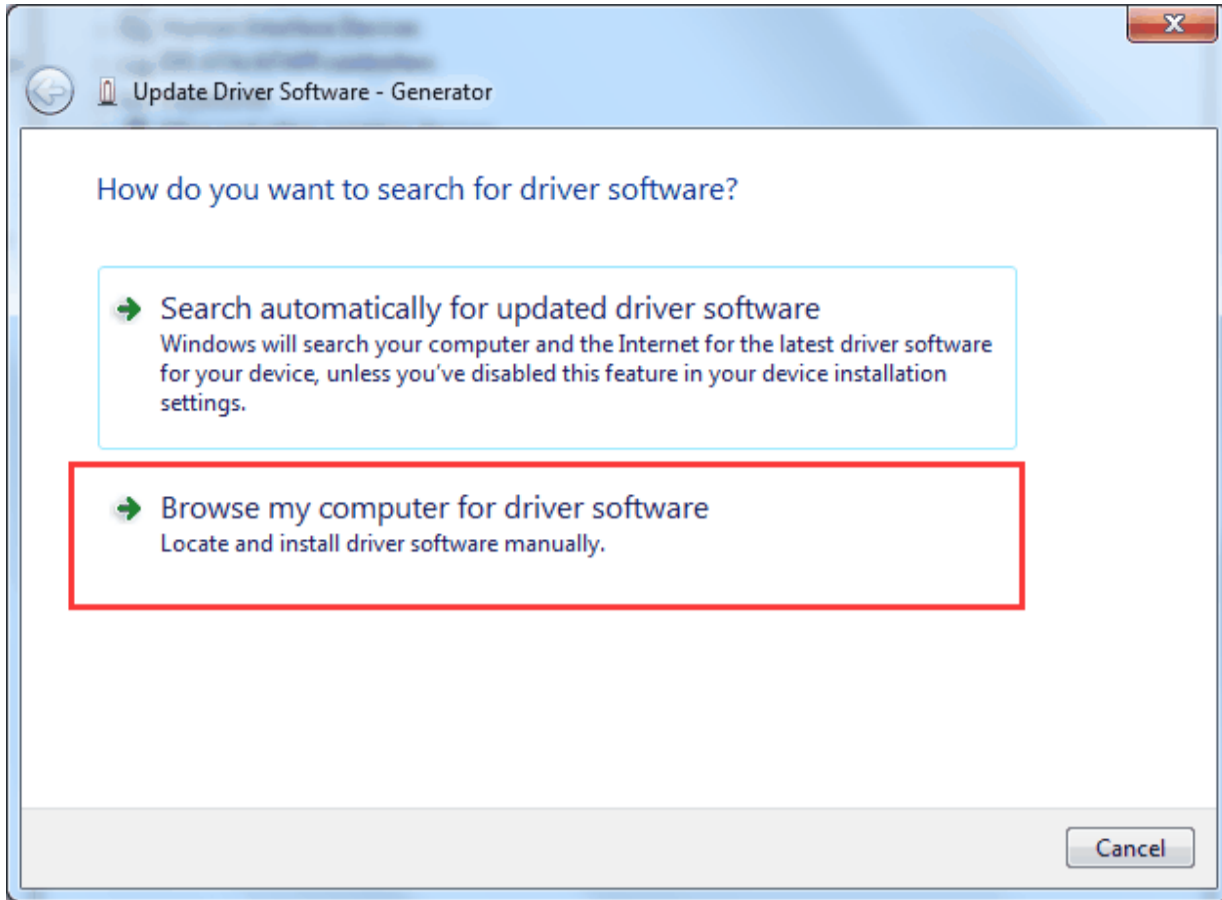
In the open window, select [**Browse my computer for driver software**].



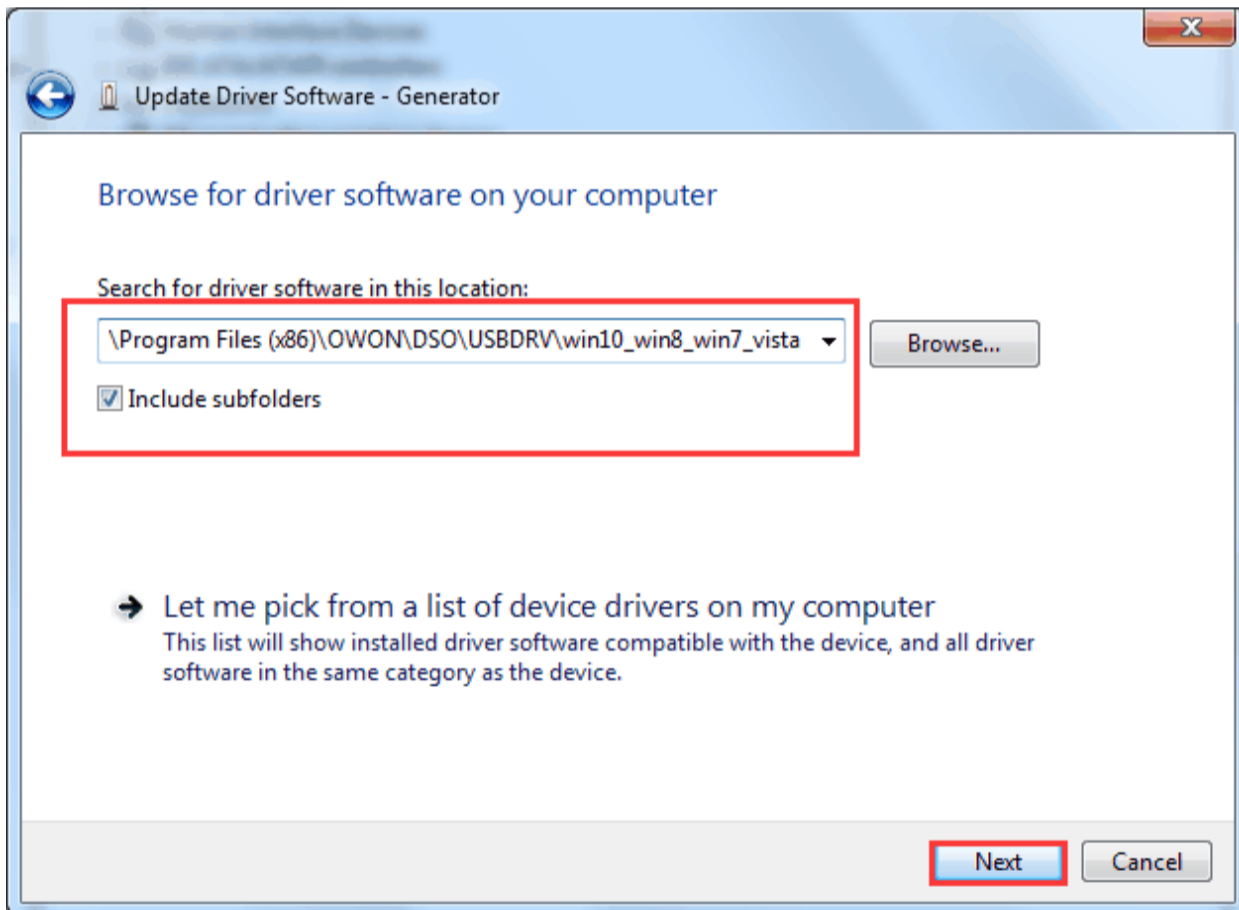The next window, select a directory path for the driver software location "\Program Files (x86)\OWON\DSO\USBDRV\win10_win8_win7_vista", and click "**Next**".




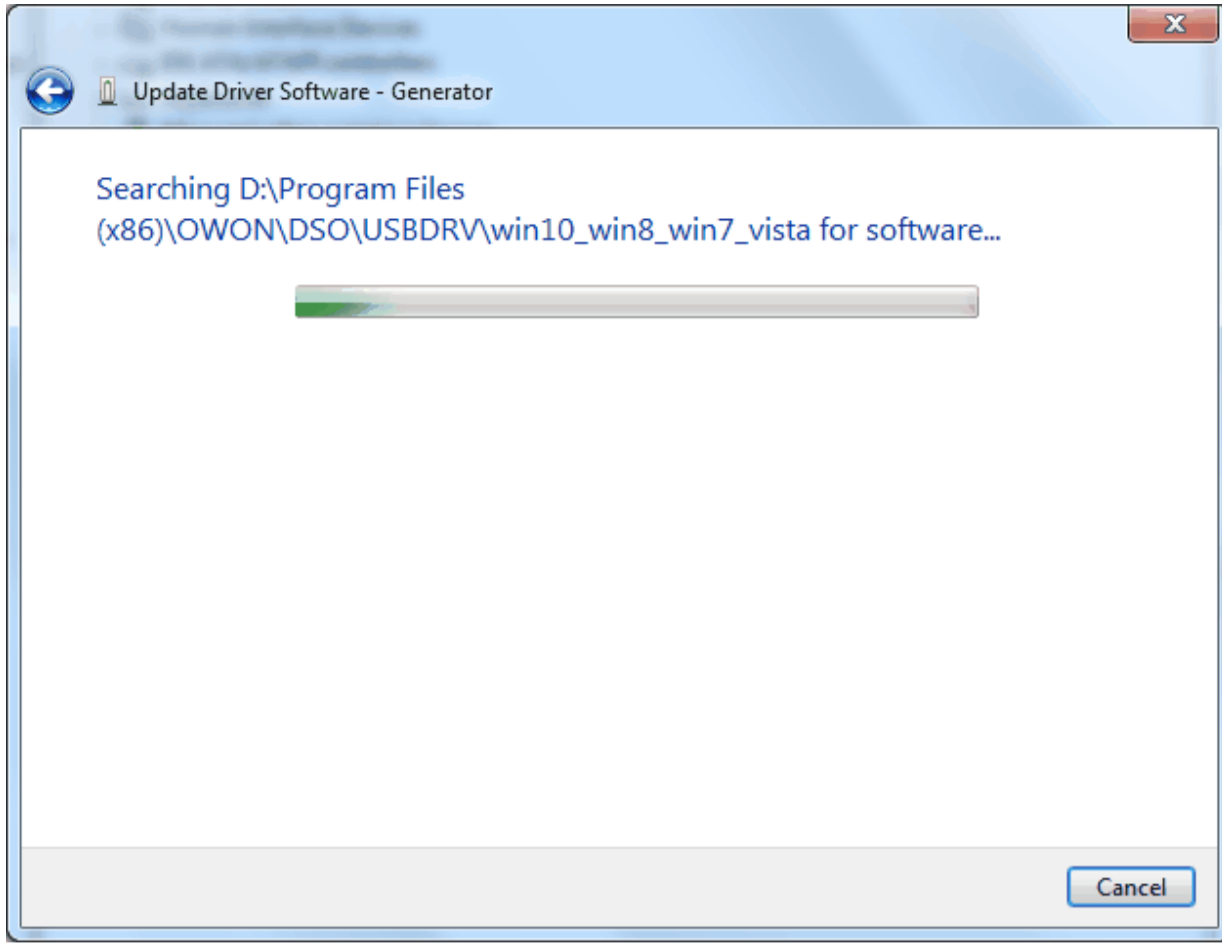The system is installing driver software for you, as follow:




And finish.

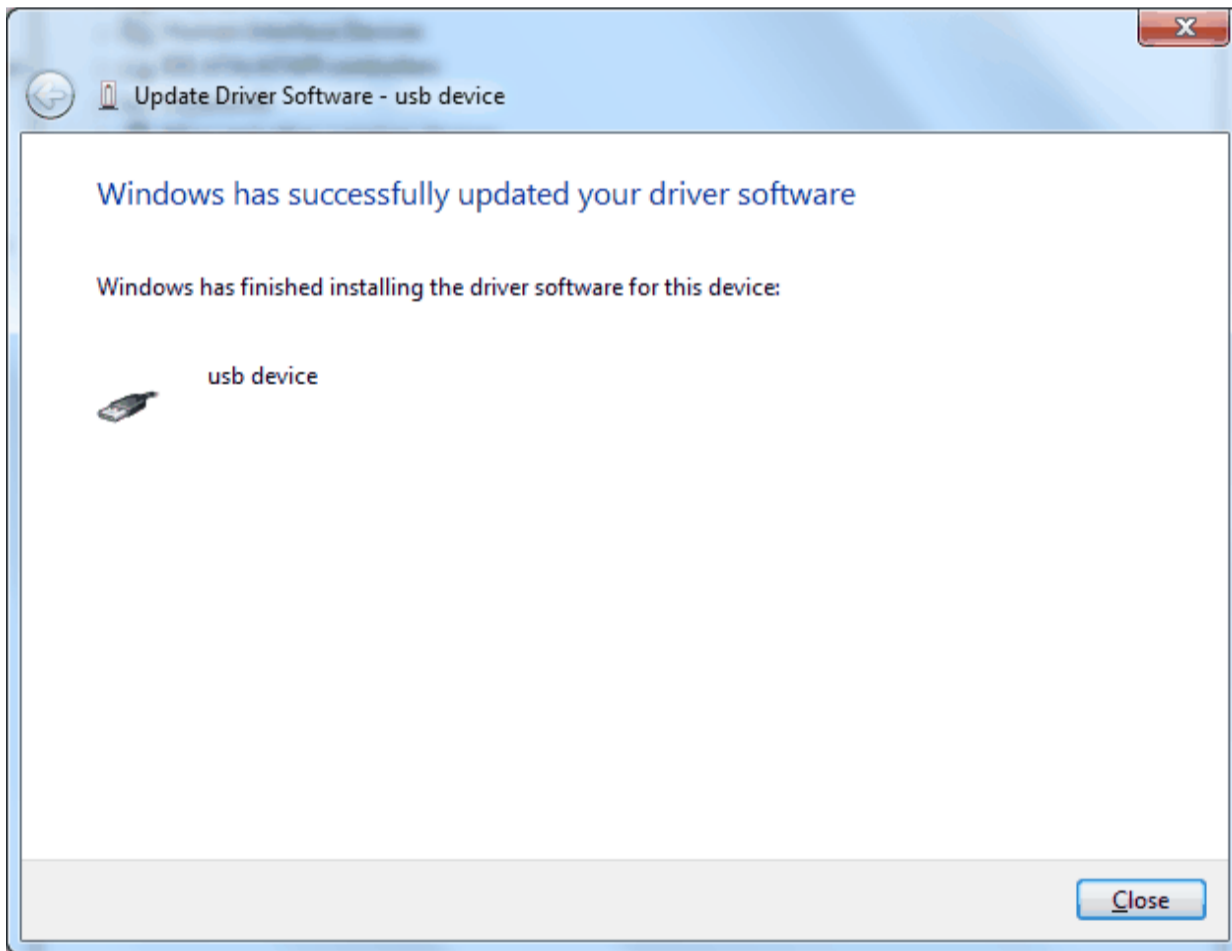Now a successful installation window opens with information "Windows has successfully updated your driver software".



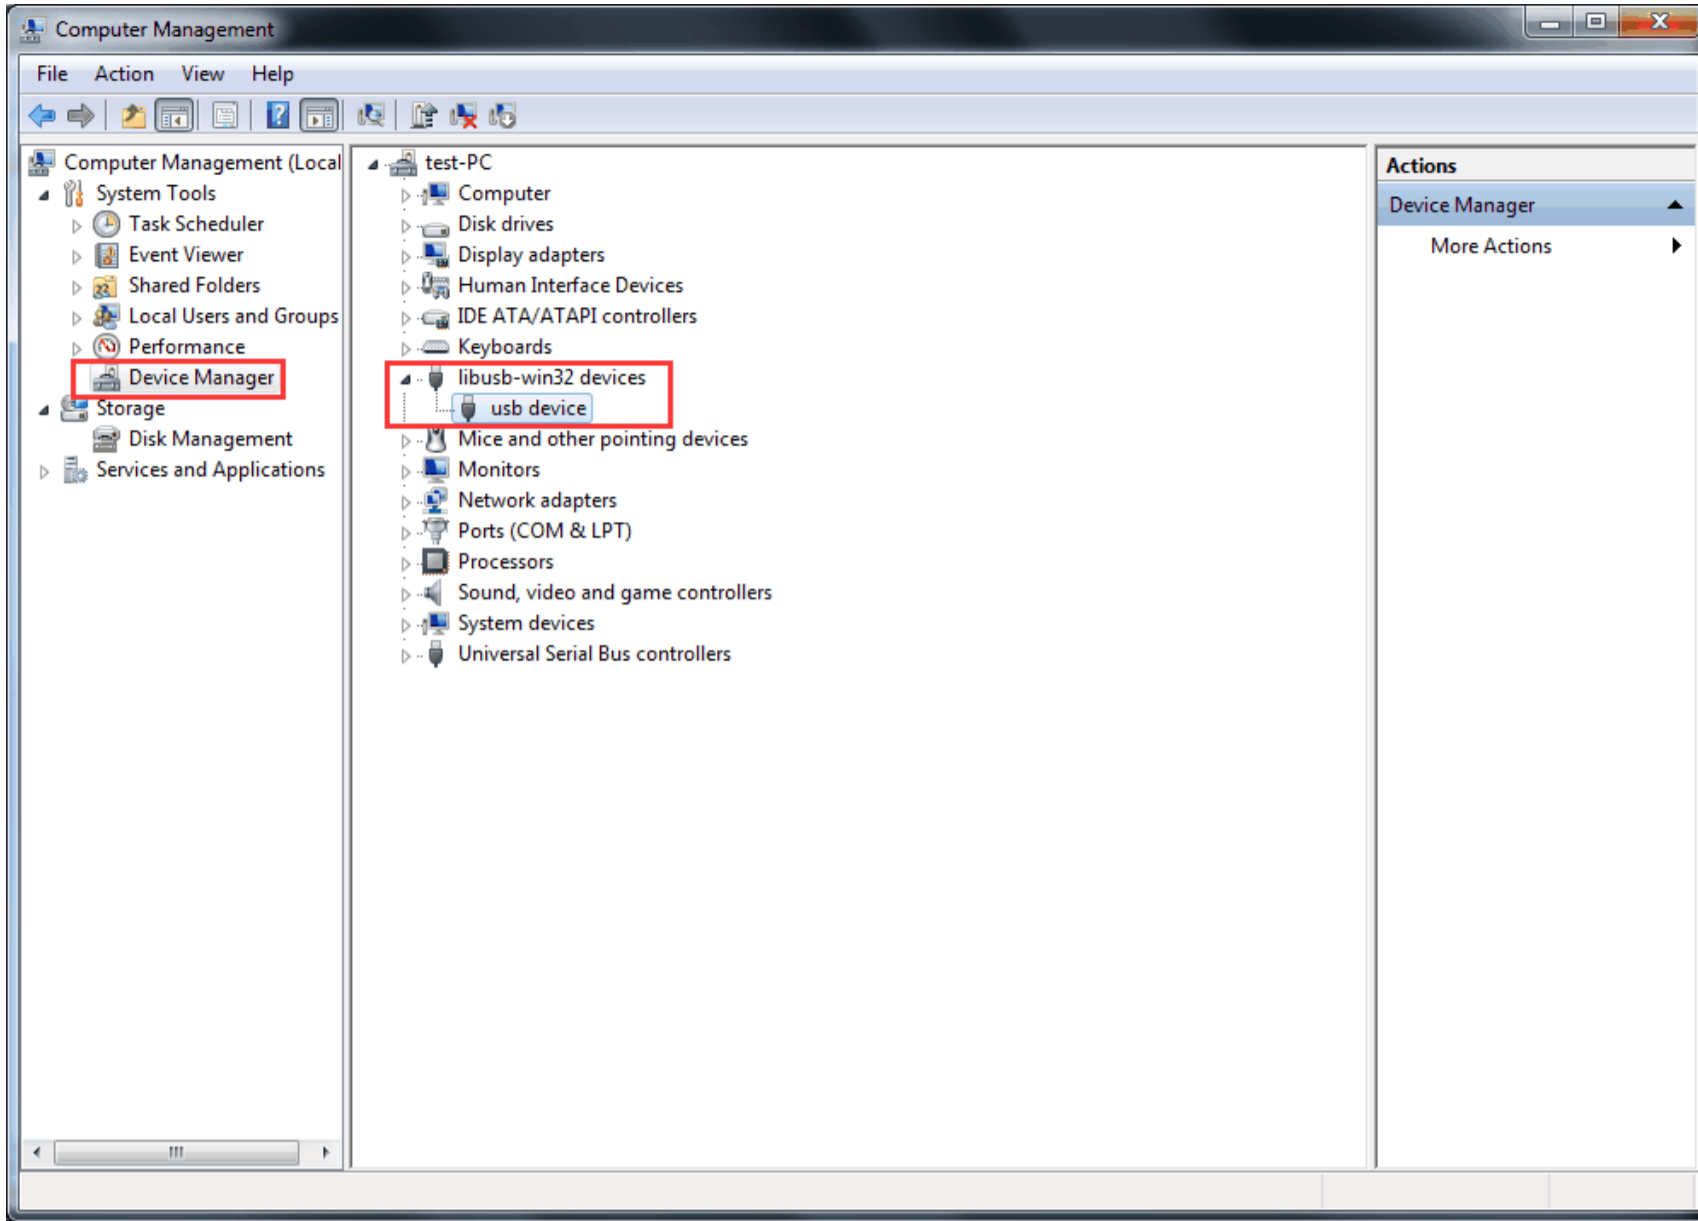Close the window, have a look at the "Computer Management" window, you will find a device under [LibUSB-Win32 Devices], it should be like this:




Now the USB driver will work.

Install Guide for Windows XP\Windows 2000

Notice: for both x86 and x64.
Plug into the running well device to open [Found New Hardware Wizard] dialog.



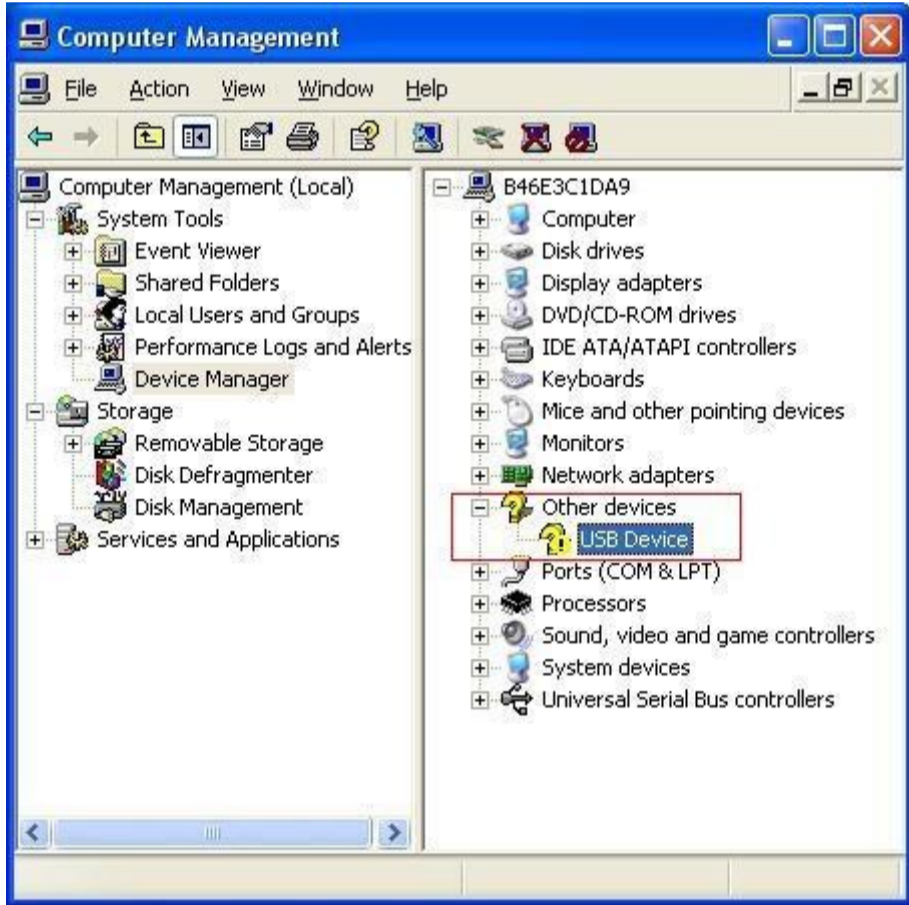
Or you can right click [My Computer] and select [Manage], in the left area of opened [Computer Management] select [Device Manager] , double click the item [USB Device] with "?" in the middle area to open the Wizard,



Select "Install from a list or specific location(Advanced)".



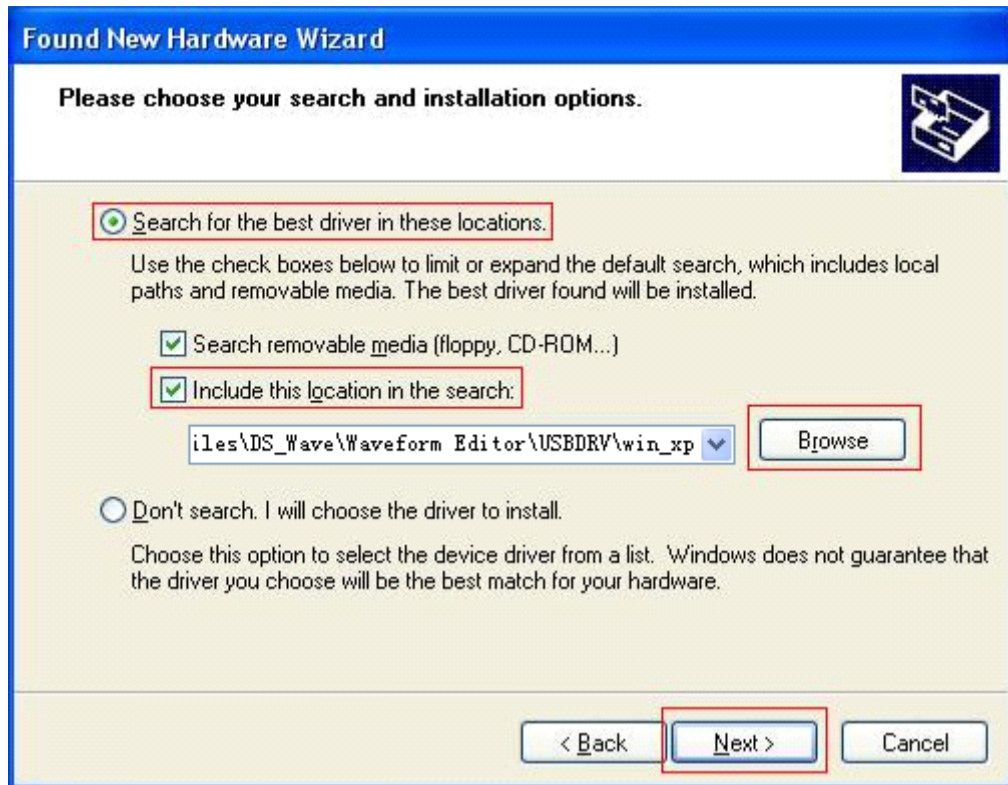Select [Search for the best driver in these locations.] , then select [Include this location in the search] and indicate a directory location for USB driver which is named as "USBDRV\win_xp" and under the directory where you installed the program at,



Then the installation is running,



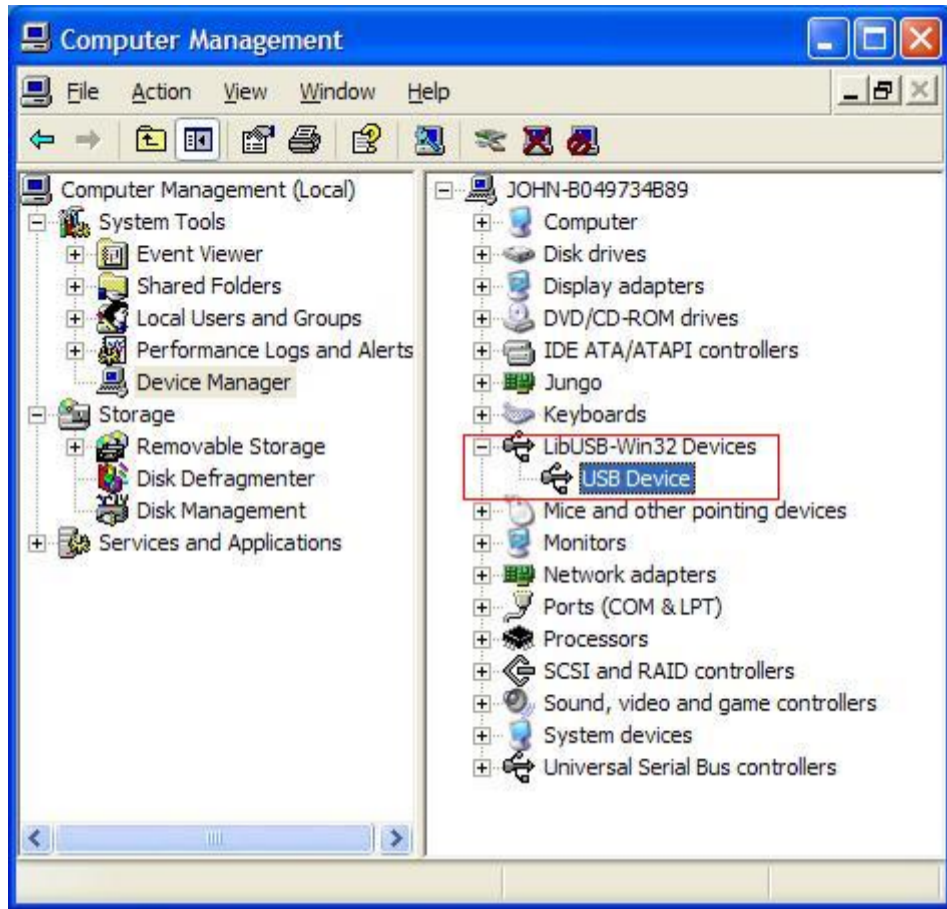
And complete,



And prompt as installed,



And show installed in [Device Management],



Now you can use the program and use it for USB communication.

If there is an early version of USB driver in your computer, you could try running "reinstall.bat" to fix, the file is under the directory of "USBDRV".

Mar. 2018 V1.4



**XDG Dual-Channel
Arbitrary Waveform Generator
Programmer Manual**

www.owon.com.cn

Representations and Warranties

Nov. 2018 edition V1.0.0

Copyright © LILLIPUT Company. All rights reserved.

The LILLIPUT's products are under the protection of the patent rights, including ones which have already obtained the patent rights and those which are applied for. The information in this manual will replace all materials published.

The information in this manual was correct at the time of printing. However, LILLIPUT will continue to improve products and reserves the rights to change specification at any time without notice.

owon[®] is the registered trademark of the LILLIPUT Company.

Fujian LILLIPUT Optoelectronics Technology Co., Ltd.

No. 19, Heming Road

Lantian Industrial Zone, Zhangzhou 363005 P.R. China

Tel: +86-596-2130430

Fax: +86-596-2109272

Web: www.owon.com.cn

E-mail: info@owon.com.cn

Table of Contents

Representations and Warranties	ii
1. Introduction to the SCPI Language.....	1
1.1. Command Syntax	1
1.2. Symbol Description	1
1.3. Programmed Parameter Type	1
1.4. Command Abbreviation	2
2. Commands	3
AFGControl:CSCopy (No Query Form).....	3
*CLS (No Query Form).....	3
COUNter:COUPing.....	3
COUNter:DUTYcycle? (Query Only).....	4
COUNter:FREQ? (Query Only).....	4
COUNter:HFR	5
COUNter:PERiod? (Query Only)	5
COUNter:PULSewidth? (Query Only)	6
COUNter:SENSitivity.....	6
COUNter:TRIGger	7
DISPlay:BRIGhtness	7
DISPlay:SAVer:DELay	8
DISPlay:SAVer:IMMEdiate (No Query Form)	8
DISPlay:SAVer[:STATe].....	9
HCOPy:SDUMp:DATA? (Query Only)	9
HCOPy:SDUMp[:IMMEdiate] (No Query Form)	10
*IDN? (Query Only)	10
MMEMory:CATalog? (Query Only).....	11
MMEMory:CDIRectory	11
MMEMory:DELete (No Query Form).....	12
OUTPut[1 2]:IMPedance	12
OUTPut[1 2][:STATe].....	13
*RCL (No Query Form)	13
*RST (No Query Form)	14
*SAV (No Query Form)	14
[SOURce[1 2]]:AM[:DEPTh]	15
[SOURce[1 2]]:AM:INTernal:FREQUency	15
[SOURce[1 2]]:AM:INTernal:FUNcTION	16
[SOURce[1 2]]:AM:INTernal:FUNcTION:EFILe.....	16
[SOURce[1 2]]:AM:SOURce	17
[SOURce[1 2]]:AM:STATe	17
[SOURce[1 2]]:ASKey[:AMPLitude].....	18

[SOURCE[1 2]]:ASKey:INTERNAL:RATE	19
[SOURCE[1 2]]:ASKey:SOURce	19
[SOURCE[1 2]]:ASKey:STATe	20
[SOURCE[1 2]]:BPSKey:DATA.....	20
[SOURCE[1 2]]:BPSKey:INTERNAL:RATE	21
[SOURCE[1 2]]:BPSKey:PHASe	21
[SOURCE[1 2]]:BPSKey:STATe	22
[SOURCE[1 2]]:BURSt:GATE:POLarity.....	22
[SOURCE[1 2]]:BURSt:INTERNAL:PERiod.....	23
[SOURCE[1 2]]:BURSt:MODE	23
[SOURCE[1 2]]:BURSt:NCYCles.....	24
[SOURCE[1 2]]:BURSt:SOURce	25
[SOURCE[1 2]]:BURSt:STATe.....	25
[SOURCE[1 2]]:FM[:DEVIation]	26
[SOURCE[1 2]]:FM:INTERNAL:FREQuency.....	26
[SOURCE[1 2]]:FM:INTERNAL:FUNcTion.....	27
[SOURCE[1 2]]:FM:INTERNAL:FUNcTion:EFILe	27
[SOURCE[1 2]]:FM:SOURce.....	28
[SOURCE[1 2]]:FM:STATe.....	28
[SOURCE[1 2]]:FREQuency:CENTer	29
[SOURCE[1 2]]:FREQuency:CONCurent	30
[SOURCE[1 2]]:FREQuency[:FIXed]	30
[SOURCE[1 2]]:FREQuency:SPAN	31
[SOURCE[1 2]]:FREQuency:STARt	31
[SOURCE[1 2]]:FREQuency:STOP	32
[SOURCE[1 2]]:FSKey[:FREQuency]	33
[SOURCE[1 2]]:FSKey:INTERNAL:RATE.....	33
[SOURCE[1 2]]:FSKey:SOURce.....	34
[SOURCE[1 2]]:FSKey:STATe	34
[SOURCE[1 2]]:3FSKey[:FREQuency].....	35
[SOURCE[1 2]]:3FSKey:INTERNAL:RATE.....	35
[SOURCE[1 2]]:3FSKey:STATe	36
[SOURCE[1 2]]:4FSKey[:FREQuency].....	36
[SOURCE[1 2]]:4FSKey:INTERNAL:RATE.....	37
[SOURCE[1 2]]:4FSKey:STATe	38
[SOURCE[1 2]]:FUNcTion:EFILe.....	38
[SOURCE[1 2]]:FUNcTion:RAMP:SYMMetry	39
[SOURCE[1 2]]:FUNcTion[:SHAPe]	39
[SOURCE[1 2]]:HARMonic:AMPL	41
[SOURCE[1 2]]:HARMonic:ORDER	41
[SOURCE[1 2]]:HARMonic:PHASe	42
[SOURCE[1 2]]:HARMonic:TYPE.....	42
[SOURCE[1 2]]:MOD:STATe	43
[SOURCE[1 2]]:OSKey:INTERNAL:RATE	43

[SOURce[1 2]]:OSKey:STAtE.....	44
[SOURce[1 2]]:OSKey:TIME	45
[SOURce[1 2]]:PHASe[:ADJust]	45
[SOURce[1 2]]:PHASe:INITiate (No Query Form)	46
[SOURce[1 2]]:PM[:DEViation].....	46
[SOURce[1 2]]:PM:INTernal:FREQuency.....	47
[SOURce[1 2]]:PM:INTernal:FUNction	47
[SOURce[1 2]]:PM:INTernal:FUNction:EFILe.....	48
[SOURce[1 2]]:PM:SOURce	49
[SOURce[1 2]]:PM:STAtE	49
[SOURce[1 2]]:PSKey[:DEViation].....	50
[SOURce[1 2]]:PSKey:INTernal:RATE.....	50
[SOURce[1 2]]:PSKey:SOURce	51
[SOURce[1 2]]:PSKey:STAtE	51
[SOURce[1 2]]:PULSe:DCYCLe	52
[SOURce[1 2]]:PULSe:TRANSition[:LEADing]	52
[SOURce[1 2]]:PULSe:TRANSition:TRAILing.....	53
[SOURce[1 2]]:PULSe:WIDTh.....	53
[SOURce[1 2]]:PWM:INTernal:FREQuency	54
[SOURce[1 2]]:PWM:INTernal:FUNction.....	55
[SOURce[1 2]]:PWM:INTernal:FUNction:EFILe	55
[SOURce[1 2]]:PWM:SOURce	56
[SOURce[1 2]]:PWM:STAtE.....	56
[SOURce[1 2]]:PWM[:DEViation]:DCYCLe.....	57
[SOURce[1 2]]:SWEep:SOURce.....	57
[SOURce[1 2]]:SWEep:SPACing.....	58
[SOURce[1 2]]:SWEep:STAtE.....	58
[SOURce[1 2]]:SWEep:TIME	59
[SOURce[1 2]]:VOLTage[:LEVel][:IMMediate]:OFFSet	60
[SOURce[1 2]]:VOLTage[:LEVel][:IMMediate][:AMPLitude]	60
SYSTem:BEEPer[:IMMediate] (No Query Form)	61
SYSTem:BEEPer:STAtE.....	61
SYSTem:ERRor[:NEXT]? (Query Only)	62
SYSTem:KLOCK[:STAtE].....	62
SYSTem:LANguage.....	63
SYSTem:POWeron.....	63
SYSTem:RESTART	64
SYSTem:VERSion? (Query Only).....	64
TRACe DATA:CATalog? (Query Only)	65
TRACe DATA:COpy (No Query Form)	65
TRACe DATA[:DATA]	66
TRACe DATA[:DATA]:VALue.....	66
TRACe DATA:POINts.....	67
*TRG (No Query Form).....	67

3. Command Errors	69
4. Index	70

1. Introduction to the SCPI Language

1.1. Command Syntax

The command systems present a hierarchy structure (tree system) and each command consists of a "Root" keyword and one or multiple sub-keywords. The keywords are separated by ":" and are followed by the parameter settings available, "?" is added at the end of the command string to indicate query and the command and parameter are separated by "space".

1.2. Symbol Description

Following symbols are usually used to assist to explain the parameters contained in a command.

a) Braces { }

The options enclosed in a { } are parameters available in the command. Only one option could be selected every time, and all the options are separated by "|". For example, {ON|OFF} indicates that ON or OFF can be selected.

b) Triangle Brackets < >

The parameter enclosed in < > must be replaced by an effective value.

1.3. Programmed Parameter Type

The commands contain 8 kinds of parameters, different parameters have different setting methods.

(1) arbitrary block

A specified length of arbitrary data, for example,

#6377512xxxxx . . . where

6 indicates that the following 6 digits (377512) specify the length of the data in bytes;

xxxxx ... indicates the data or #0xxxxx...<LF><&EOI>

(2) boolean

Boolean numbers or values, for example,

ON or \neq 0

OFF or 0

(3) discrete

A list of specific values, for example,

MIN, MAX

(4) NR1 numeric

Integers, for example,
0, 2, 30, -5

(5) NR2 numeric

Decimal numbers, for example,
0.6, 3.1415926, -2.6

(6) NR3 numeric

Floating point numbers, for example,
3.1415E-7, -8.2E3

(7) NRf numeric

Flexible decimal number that may be type NR1, NR2 or NR3
See NR1, NR2, and NR3 examples

(8) string

Alphanumeric characters (must be within quotation marks)
"Model, 123456"

1.4. Command Abbreviation

All the commands are case-insensitive, so you can use any kind of them. But if abbreviation is used, all the capital letters specified in commands must be written completely. For example,
SOURce1:FREQuency:FIXed 500kHz also can be:
SOUR1:FREQ:FIX 500kHz

2. Commands

AFGControl:CSCopy (No Query Form)

This command copies setup parameters for one channel to another channel.

Syntax

AFGControl:CSCopy {CH1|CH2},{CH1|CH2}

Arguments

CH1|CH2

Examples

AFGControl:CSCopy CH1,CH2

copies the CH1 setup parameters into CH2.

***CLS (No Query Form)**

This command clears all the event registers and queues, which are used in the instrument status and event reporting system.

Syntax

*CLS

Arguments

None

Examples

*CLS

clears all the event registers and queues.

COUNter:COUPing

This command sets or queries the coupling mode of the counter to AC or DC.

Syntax

COUNter:COUPing [AC|DC]
COUNter:COUPing?

Arguments

AC means that AC is selected for the coupling mode of the counter.
DC means that DC is selected for the coupling mode of the counter.

Returns

AC|DC

Example

COUNter:COUPing DC
sets the coupling mode of the counter to DC.

COUNter:DUTYcycle? (Query Only)

This query-only command returns the measurement results for duty cycle of the counter.

Syntax

COUNter:DUTYcycle?

Arguments

None

Returns

<dutycycle>:: \leq <NR3>

Examples

:COUNter:DUTYcycle?
might returns 2.265700368E+01.

COUNter:FREQ? (Query Only)

This query-only command returns the measurement results for frequency of the counter.

Syntax

COUNter:FREQ?

Arguments

None

Returns

<frequency>::=<NR3>

Examples

:COUNter:FREQ?

might returns 1.000082563E+02.

COUNter:HFR

This command enables or disables the high-frequency reject of the counter. The query returns the state of high-frequency reject of the counter.

Syntax

COUNter:HFR {ON|OFF|<NR1>}

COUNter:HFR?

Arguments

ON or <NR1>≠0 enables the high-frequency reject of the counter.

OFF or <NR1>=0 disables the high-frequency reject of the counter.

Returns

<NR1>

Examples

COUNter:HFR ON

enables the high-frequency reject of the counter.

COUNter:PERiod? (Query Only)

This query-only command returns the measurement results for period of the counter.

Syntax

COUNter:PERiod?

Arguments

None

Returns

<period>::=<NR3>

Examples

:COUNter:PERiod?

might returns 8.545000251E-03.

COUNter:PULSewidth? (Query Only)

This query-only command returns the measurement results for pulse width of the counter.

Syntax

COUNter:PULSewidth?

Arguments

None

Returns

<pulsewidth>::=<NR3>

Examples

:COUNter:PULSewidth?

might returns 366213017E-03.

COUNter:SENSitivity

This command sets or queries the trigger sensitivity of the counter.

Syntax

COUNter:SENSitivity [LOW|MIDDLE|HIGH]

COUNter:SENSitivity?

Arguments

LOW means that Low is selected for the trigger sensitivity of the counter.

MIDDLE means that Middle is selected for the trigger sensitivity of the counter.

HIGH means that High is selected for the trigger sensitivity of the counter.

Returns

LOW|MIDDLE|HIGH

Example

COUNter:SENSitivity LOW

sets the trigger sensitivity of the counter to Low.

COUNTER:TRIGGER

This command sets or queries the trigger level of the counter.

Syntax

COUNTER:TRIGGER {<value>|MINimum|MAXimum}

COUNTER:TRIGGER? {MINimum|MAXimum}

Arguments

<value>::=<NR3>[<units>]

where:

<NR3> is the trigger level of the counter.

<units>::=[mV|V]

Returns

<value>

Examples

COUNTER:TRIGGER 500mV

sets the trigger level of the counter to 500 mV.

DISPLAY:BRIGHTNESS

This command sets or queries the brightness of the LCD display.

Syntax

DISPLAY:BRIGHTNESS {<brightness>|MINimum|MAXimum}

DISPLAY:BRIGHTNESS?

Arguments

<brightness>::=<NR1>[<units>]

where:

<NR1> is a range of display brightness from 0 through 100. The larger the value, the higher the screen brightness.

<units>::=[PCT]

MINimum sets the display to the lowest brightness level.

MAXimum sets the display to the highest brightness level.

Returns

<NR1>

Examples

DISPLAY:BRIGHTNESS 90

sets the display brightness to 90%.

DISPlay:SAVer:DElay

This command sets or queries delay time for the screen saver function. The setting range is 1 minute to 999 minutes.

Syntax

DISPlay:SAVer:DElay {<minutes>|MINimum|MAXimum}

DISPlay:SAVer:DElay? {MINimum|MAXimum}

Arguments

<minutes>::=<NR1>[<units>]

where:

<NR1> is the delay time in minutes.

<units>::=MIN

Returns

<minutes>

Examples

DISPlay:SAVer:DElay 30

sets the delay time for the screen saver function to 30 minutes.

DISPlay:SAVer:IMMediate (No Query Form)

This command sets the screen saver state to ON, regardless of the DISPlay:SAVer[:STATe] command setting.

The screen saver is enabled immediately (without waiting for the delay time).

Syntax

DISPlay:SAVer:IMMediate

Arguments

None

Examples

DISPLAY:SAVER:IMMEDIATE

sets the screen saver state to ON.

DISPlay:SAVer[:STATe]

This command sets or queries the screen saver setting of the LCD display. When enabled, the screen saver function starts automatically if no operations are applied to the instrument front panel for the delay time set in DISPlay:SAVer:DELAy.

Syntax

DISPlay:SAVer[:STATe] {ON|OFF|<NR1>}

DISPlay:SAVer[:STATe]?

Arguments

ON or <NR1>≠0 enables the screen saver function.

OFF or <NR1>=0 disables the screen saver function.

Returns

<NR1>

indicating the screen saver state.

Examples

DISPLAY:SAVER:STATE OFF

disables the screen saver function.

HCOPy:SDUMp:DATA? (Query Only)

This query-only command returns a specified length of binary data which consist a BMP screen image.

Syntax

HCOPy:SDUMp:DATA?

Arguments

None

Returns

<data>::=<arbitrary block>

Examples

HCOPY:SDUMP:DATA?

might return the following response:

#6377512xxxxx . . . where

6 indicates that the following 6 digits (377512) specify the length of the data in bytes;

xxxxx ... indicates the BMP image data.

HCOPY:SDUMP[:IMMEDIATE] (No Query Form)

This command copies a screen image and saves the image file to a USB memory. The default file name is n.BMP, where n is a consecutive number from 0. The image files are saved in a folder named Model/IMAGE (Model is the instrument model) in the USB memory.

Syntax

HCOPY:SDUMP[:IMMEDIATE]

Arguments

None

Examples

HCOPY:SDUMP:IMMEDIATE

copies the screen image and may create a file 1.BMP in a USB memory.

***IDN? (Query Only)**

This query-only command returns identification information on the instrument.

Syntax

*IDN?

Arguments

None

Returns

<Manufacturer>,<Model>,<Serial Number>,<Firmware Level>

Examples

*IDN?

might return the following response:
OWON,XDG3202,1837001,SCPI:99.0 FV:V1.2.0

MMEMory:CATalog? (Query Only)

This query-only command returns the current state of the mass storage system (USB memory).

Syntax

MMEMory:CATalog?

Arguments

None

Returns

<NR1>,<NR1>[,<file_name>,<file_type>,<file_size>]...

where:

The first <NR1> indicates that the total amount of storage currently used, in bytes. The second <NR1> indicates that the free space of mass storage, in bytes.
<file_name> is the name of directory or file. If the name exceeds 22 characters in length, it will be shortened to 8 characters (without suffix) in 8.3 name format.
<file_type> is DIR for directory, otherwise it is blank.
<file_size> is the size of the file, in bytes. This value will be 0 for directory.

Examples

The USB memory includes the Test_folder folder, a Firmware.upp file, and a memo.txt file.

MMEMory:CATalog? might return the following response:

```
21973685,16851047,"Test_folder,DIR,0","Firmware.upp,,7791","memo.txt,,2566"
```

MMEMory:CDIRectory

This command changes the current working directory in the mass storage system.

Syntax

MMEMory:CDIRectory [<directory_name>]

MMEMory:CDIRectory?

Arguments

<directory_name>::=<string> indicates the current working directory for the mass storage

system.

Returns

<directory_name>::=<string>

Examples

MMEMory:CDIRectory "/Test_folder/Case"
changes the current directory to /Test_folder/Case.

MMEMory:DELeTe (No Query Form)

This command deletes a file or directory from the mass storage system. If a specified file in the mass storage is not allowed to overwrite or delete, this command causes an error. You can delete a directory if it is empty.

Syntax

MMEMory:DELeTe <file_name>

Arguments

<file_name>::=<string> specifies a file to be deleted and should include full path.

Examples

MMEMory:DELeTe "/Test_folder/Case/Firmware.upp"
deletes the Firmware.upp file from the /Test_folder/Case directory.

OUTPut[1|2]:IMPedance

This command sets the output load impedance for the specified channel. The specified value is used for amplitude, offset, and high/low level settings. You can set the impedance to any value from 1 Ω to 10 k Ω with a resolution of 1 Ω . The default value is 50 Ω . The query returns the current load impedance setting in ohms. If the load impedance is set to INFinity, the query returns "9.9E+37".

Syntax

OUTPut[1|2]:IMPedance {<ohms>|INFinity|MINimum|MAXimum}
OUTPut[1|2]:IMPedance? {MINimum|MAXimum}

Arguments

<ohms>::=<NR3>[<units>]
where:

<units>::=OHM

INFINITY sets the load impedance to >10 kΩ.

MINimum sets the load impedance to 1 Ω.

MAXimum sets the load impedance to 10 kΩ.

Returns

<ohms>::=<NR3>

Examples

OUTPut1:IMPedance MAXimum

sets the CH1 load impedance to 10 kΩ.

OUTPut[1|2][:STATe]

This command sets or query the instrument output state for the specified channel.

Syntax

OUTPut[1|2][:STATe] {ON|OFF|<NR1>}

OUTPut[1|2][:STATe]?

Arguments

ON or <NR1>≠0 enables the instrument output.

OFF or <NR1>=0 disables the instrument output.

Returns

<NR1>

Examples

OUTPut1:STATe ON

sets the instrument CH1 output to ON.

*RCL (No Query Form)

This command restores the state of the instrument from a copy of the settings stored in the setup memory. The settings are stored using the *SAV command. If the specified setup memory is deleted, this command causes an error.

Syntax

*RCL {0|1|2|...|14|15}

Arguments

0, 1, 2, ... 14, or 15 specifies the location of setup memory.

Examples

*RCL 3

restores the instrument from a copy of the settings stored in memory location 3.

***RST (No Query Form)**

This command resets the instrument to the factory default settings.

Syntax

*RST

Arguments

None

Examples

*RST

resets the instrument settings to the factory defaults.

***SAV (No Query Form)**

This command stores the current settings of the arbitrary function generator to a specified setup memory location.

Syntax

*SAV {0|1|2|...|14|15}

Arguments

0, 1, 2, ... 14, or 15 specifies the location of setup memory.

Examples

*SAV 3

saves the current instrument state in the memory location 3.

[SOURce[1|2]]:AM[:DEPTh]

This command sets or queries the modulation depth of AM modulation for the specified channel. Set the modulation depth from 0% to 100% with resolution of 1%.

Syntax

```
[SOURce[1|2]]:AM[:DEPTh] {<depth>|MINimum|MAXimum}  
[SOURce[1|2]]:AM[:DEPTh]? [MINimum|MAXimum]
```

Arguments

<depth>::=<NR2>[<units>]

where:

<NR2> is the depth of modulating frequency.

<units>::=PCT

MINimum sets the modulation depth to minimum value. MAXimum sets the modulation depth to maximum value.

Returns

<depth>

Examples

```
SOURce1:AM:DEPTh MAXimum
```

sets the depth of modulating signal on CH1 to the maximum value.

[SOURce[1|2]]:AM:INTernal:FREQuency

This command sets or queries the internal modulation frequency of AM modulation for the specified channel. Use this command when the internal modulation source is selected. Set the internal modulation frequency from 2 mHz to 100.00 kHz with resolution of 1 mHz.

Syntax

```
[SOURce[1|2]]:AM:INTernal:FREQuency {<frequency>|MINimum|MAXimum}  
[SOURce[1|2]]:AM:INTernal:FREQuency? [MINimum|MAXimum]
```

Arguments

<frequency>::=<NRf>[<units>]

where:

<NRf> is the modulation frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

SOURce1:AM:INTernal:FREQuency 10kHz
sets the CH1 internal modulation frequency to 10 kHz.

[SOURce[1|2]]:AM:INTernal:FUNcTion

This command sets or queries the modulating waveform of AM modulation for the specified channel. Use this command when the internal modulation source is selected. If you specify EFILE when there is no EFILE or the EFILE is not yet defined, this command causes an error.

Syntax

```
[SOURce[1|2]]:AM:INTernal:FUNcTion {SINusoid|SQUare|RAMP|PRNoise  
|USER<NR1>|EMEMory|EFILE}  
[SOURce[1|2]]:AM:INTernal:FUNcTion?
```

Arguments

USER<NR1>|EMEMory

<NR1> specifies the user waveform memory location, can be any number from 0 to 15. A user defined waveform saved in the user waveform memory or the EMEMory can be selected as a modulating signal.

EFILE

EFILE is used as a modulating signal.

Returns

SIN|SQU|RAMP|PRN|USER<NR1>|EMEMory|EFILE

Examples

SOURce1:AM:INTernal:FUNcTion SQUare
selects Square as the shape of modulating waveform for the CH1 output.

[SOURce[1|2]]:AM:INTernal:FUNcTion:EFILE

This command sets or queries an EFILE name used as a modulating waveform for AM modulation. A file name must be specified in the mass storage system. This command returns " " if there is no file in the mass storage.

Syntax

[SOURce[1|2]]:AM:INTernal:FUNcTion:EFILe <file_name>
[SOURce[1|2]]:AM:INTernal:FUNcTion:EFILe?

Arguments

<file_name>::=<string> specifies a file name in the mass storage system. The <file_name> includes path. Path separators are forward slashes (/).

Returns

<file_name>

Examples

SOURce1:AM:INTernal:FUNcTion:EFILe "TEST"
sets a file named "TEST" in the mass storage.

[SOURce[1|2]]:AM:SOURce

This command sets or queries the source of modulating signal of AM modulation for the specified channel.

Syntax

[SOURce[1|2]]:AM:SOURce [INTernal|EXTernal]
[SOURce[1|2]]:AM:SOURce?

Arguments

INTernal means that the carrier waveform is modulated with an internal source.
EXTernal means that the carrier waveform is modulated with an external source.

Returns

INT|EXT

Examples

SOURce1:AM:SOURce INTernal
sets the CH1 source of modulating signal to internal.

[SOURce[1|2]]:AM:STATe

This command enables or disables AM modulation for the specified channel. The query returns the state of AM modulation.

Syntax

[SOURce[1|2]]:AM:STATe {ON|OFF|<NR1>}
[SOURce[1|2]]:AM:STATe?

Arguments

If [SOURce[1|2]] are omitted, CH1 is specified automatically.
ON or <NR1>≠0 enables AM modulation.
OFF or <NR1>=0 disables AM modulation.

Returns

<NR1>

Examples

SOURce1:AM:STATe ON
enables the CH1 AM modulation.

[SOURce[1|2]]:ASKey[:AMPLitude]

This command sets or queries the modulation amplitude of ASK modulation for the specified channel. Set the modulation amplitude from 0 Vpp to the current amplitude of the carrier waveform. The amplitude resolution is 1 mVpp or four digits.

Syntax

[SOURce[1|2]]:ASKey[:AMPLitude] {<amplitude>|MINimum|MAXimum}
[SOURce[1|2]]:ASKey[:AMPLitude]? [MINimum|MAXimum]

Arguments

<amplitude>::=<NRf>[<units>]

where:

<NRf> is the modulation amplitude.

<units>::=[mVpp|Vpp]

MINimum sets the modulation amplitude to minimum value.

MAXimum sets the modulation amplitude to maximum value.

Returns

<amplitude>

Examples

SOURce1:ASKey:AMPLitude MAXimum
sets the amplitude of modulating signal on CH1 to the maximum value.

[SOURce[1|2]]:ASKey:INTernal:RATE

This command sets or queries the internal modulation rate of ASK modulation for the specified channel. Use this command when the internal modulation source is selected.

Syntax

```
[SOURce[1|2]]:ASKey:INTernal:RATE {<rate>|MINimum|MAXimum}  
[SOURce[1|2]]:ASKey:INTernal:RATE? {MINimum|MAXimum}
```

Arguments

<rate>::=<NRf>[<units>]

where:

<NRf> is the modulation rate.

<units>::=[Hz|kHz|MHz]

Returns

<rate>

Examples

```
SOURce1:ASKey:INTernal:RATE 50Hz  
sets the CH1 internal modulation rate to 50 Hz.
```

[SOURce[1|2]]:ASKey:SOURce

This command sets or queries the source of modulation signal of ASK modulation for the specified channel.

Syntax

```
[SOURce[1|2]]:ASKey:SOURce [INTernal|EXTernal]  
[SOURce[1|2]]:ASKey:SOURce?
```

Arguments

INTernal means that the carrier waveform is modulated with an internal source.

EXTernal means that the carrier waveform is modulated with an external source.

Returns

INT|EXT

Examples

```
SOURce1:ASKey:SOURce INTernal  
sets the CH1 source of modulating signal to internal.
```


[SOURce[1|2]]:ASKey:STATe

This command enables or disables ASK modulation. The query returns the state of ASK modulation. Select a sine, square, ramp, or arbitrary waveform as the carrier waveform.

Syntax

```
[SOURce[1|2]]:ASKey:STATe {ON|OFF|<NR1>}  
[SOURce[1|2]]:ASKey:STATe?
```

Arguments

ON or <NR1>≠0 enables ASK modulation.
OFF or <NR1>=0 disables ASK modulation.

Returns

<NR1>

Examples

```
SOURce1:ASKey:STATe ON  
enables the CH1 ASK modulation.
```

[SOURce[1|2]]:BPSKey:DATA

This command sets or queries the data source of modulation signal of BPSK modulation for the specified channel.

Syntax

```
[SOURce[1|2]]:BPSKey:DATA [01|10|PN15|PN21]  
[SOURce[1|2]]:BPSKey:DATA?
```

Arguments

01 means that the carrier waveform is modulated with 01 pattern.
10 means that the carrier waveform is modulated with 10 pattern.
PN15 means that the carrier waveform is modulated with PN15 pattern.
PN21 means that the carrier waveform is modulated with PN21 pattern.

Returns

01|10|PN15|PN21

Examples

SOURce1:BPSKey:DATA 01

sets the CH1 source of BPSK modulating signal to 01 pattern.

[SOURce[1|2]]:BPSKey:INTernal:RATE

This command sets or queries the internal modulation rate of BPSK modulation for the specified channel.

Syntax

[SOURce[1|2]]:BPSKey:INTernal:RATE {<rate>|MINimum|MAXimum}

[SOURce[1|2]]:BPSKey:INTernal:RATE? {MINimum|MAXimum}

Arguments

<rate>::=<NRf>[<units>]

where:

<NRf> is the modulation rate.

<units>::=[Hz|kHz|MHz]

Returns

<rate>

Examples

SOURce1:BPSKey:INTernal:RATE 50Hz

sets the CH1 internal BPSK modulation rate to 50 Hz.

[SOURce[1|2]]:BPSKey:PHASe

This command sets or queries the phase deviation of BPSK modulation for the specified channel.

Syntax

[SOURce[1|2]]:BPSKey:PHASe {<phase>|MINimum|MAXimum}

[SOURce[1|2]]:BPSKey:PHASe? [MINimum|MAXimum]

Arguments

<phase>::=<NR3>[<units>]

where:

<NR3> is the phase deviation.

<units>::=[RAD|DEG]

If <units> are omitted, RAD is specified automatically. The setting ranges are:

RAD: 0 PI to +1 PI, relative to phase value
DEG: 0 to +180, in 1 degree steps, relative to phase value

Returns

<phase>

Examples

SOURce1:BPSKey:PHASe MAXimum
sets the maximum value for the CH1 phase deviation of BPSK modulation.

[SOURce[1|2]]:BPSKey:STATe

This command enables or disables BPSK modulation. The query returns the state of BPSK modulation. Select a sine, square, ramp, or arbitrary waveform as the carrier waveform.

Syntax

[SOURce[1|2]]:BPSKey:STATe {ON|OFF|<NR1>}
[SOURce[1|2]]:BPSKey:STATe?

Arguments

ON or <NR1>≠0 enables BPSK modulation.
OFF or <NR1>=0 disables BPSK modulation.

Returns

<NR1>

Examples

SOURce1:BPSKey:STATe ON
enables the CH1 BPSK modulation.

[SOURce[1|2]]:BURSt:GATE:POLarity

This command sets the generator to output a burst when the gated signal at the [Ext Trig/Burst/Fsk In] connector at the rear panel is high level or low level. This command is only available in gated Burst mode.

Syntax

[SOURce[1|2]]:BURSt:GATE:POLarity{NORMAL|INVerted}
[SOURce[1|2]]:BURSt:GATE:POLarity?

Arguments

NORMAL sets the polarity to Normal.

INVERTed sets the polarity to Inverted.

Returns

NORM|INV

Examples

SOURCE1:BURSt:GATE:POLarity INVERTed

sets the polarity to INVERTed, means the instrument outputs a burst when the gated signal at the [Ext Trig/Burst/Fsk In] connector at the rear panel is low level.

[SOURCE[1|2]]:BURSt:INTernal:PERiod

This command sets or queries the Burst period for the specified channel.

Syntax

[SOURCE[1|2]]:BURSt:INTernal:PERiod {<period>|MINimum|MAXimum}

[SOURCE[1|2]]:BURSt:INTernal:PERiod?[MINimum|MAXimum]

Arguments

<period>::=<NRf>[<units>]

where

<NRf> is the Burst period.

<units>::=[ns|us|ms|s]

Returns

<period>

Examples

SOURCE1:BURSt:INTernal:PERiod 200ns

sets the CH1 Burst period to 200 ns.

[SOURCE[1|2]]:BURSt:MODE

This command sets or queries the burst mode for the specified channel.

Syntax

[SOURCE[1|2]]:BURSt:MODE {TRIGgered|GATed}

[SOURce[1|2]]:BURSt:MODE?

Arguments

TRIGgered means that triggered mode is selected for burst mode.

GATed means that gated mode is selected for burst mode.

Returns

TRIG|GAT

Examples

SOURce1:BURSt:MODE TRIGgered

selects triggered mode.

[SOURce[1|2]]:BURSt:NCYCles

This command sets or queries the number of cycles (burst count) to be output in burst mode for the specified channel. The query returns 9.9E+37 if the burst count is set to INFINITY.

Syntax

[SOURce[1|2]]:BURSt:NCYCles {<cycles>|INFINITY|MINimum|MAXimum}

[SOURce[1|2]]:BURSt:NCYCles? {MINimum|MAXimum}

Arguments

<cycles>::=<NRf>

where:

<NRf> is the burst count. The burst count ranges from 1 to 500,000.

INFINITY sets the burst count to infinite count.

MINimum sets the burst count to minimum count.

MAXimum sets the burst count to maximum count.

Returns

<cycles>

Examples

SOURce1:BURSt:NCYCles 2

sets the CH1 burst count to 2.

[SOURce[1|2]]:BURSt:SOURce

This command sets or queries the trigger source in the burst mode for the specified channel. This command is available only in the Triggered burst mode.

Syntax

```
[SOURce[1|2]]:BURSt:SOURce [TImer|MANual|EXternal]  
[SOURce[1|2]]:BURSt:SOURce?
```

Arguments

TImer specifies an internal clock as the trigger source.

MANual specifies a manual trigger input as the trigger source.

EXternal specifies an external trigger input as the trigger source.

Returns

TIM|MAN|EXT

Examples

```
SOURce1:BURSt:SOURce EXternal
```

sets an external trigger input as the trigger source in the burst mode.

[SOURce[1|2]]:BURSt:STATe

This command enables or disables the burst mode for the specified channel. The query returns the state of burst mode.

Syntax

```
[SOURce[1|2]]:BURSt:STATe {ON|OFF|<NR1>}  
[SOURce[1|2]]:BURSt:STATe?
```

Arguments

ON or <NR1>≠0 enables the burst mode.

OFF or <NR1>=0 disables the burst mode.

Returns

<NR1>

Examples

```
SOURce1:BURSt:STATe ON
```

enables the burst mode for the CH1.

[SOURce[1|2]]:FM[:DEViation]

This command sets or queries the peak frequency deviation of FM modulation for the specified channel. The setting range of frequency deviation depends on the waveform selected as the carrier.

Syntax

```
[SOURce[1|2]]:FM[:DEViation] {<deviation>|MINimum|MAXimum}  
[SOURce[1|2]]:FM[:DEViation]? [MINimum|MAXimum]
```

Arguments

<deviation>::=<NRf>[<units>]

where:

<NRf> is the frequency deviation.

<units>::=[Hz|kHz|MHz]

Returns

<deviation>

Examples

```
SOURce1:FM:DEViation 1.0MHz
```

sets the CH1 frequency deviation to 1.0 MHz.

[SOURce[1|2]]:FM:INTernal:FREQUENCY

This command sets or queries the internal modulation frequency of FM modulation for the specified channel. Use this command when the internal modulation source is selected.

Set the internal modulation frequency from 2 mHz to 100.00 kHz with resolution of 1 mHz.

Syntax

```
[SOURce[1|2]]:FM:INTernal:FREQUENCY {<frequency>|MINimum|MAXimum}  
[SOURce[1|2]]:FM:INTernal:FREQUENCY? [MINimum|MAXimum]
```

Arguments

<frequency>::=<NRf>[<units>]

where:

<NRf> is the modulation frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

SOURce1:FM:INTernal:FREQuency 10kHz

sets the CH1 internal modulation frequency to 10 kHz.

[SOURce[1|2]]:FM:INTernal:FUNCTion

This command sets or queries the modulating waveform of FM modulation for the specified channel. Use this command when the internal modulation source is selected. If you specify EFILE when there is no EFILE or the EFILE is not yet defined, this command causes an error.

Syntax

```
[SOURce[1|2]]:FM:INTernal:FUNCTion {SINusoid|SQUare|RAMP|PRNoise  
|USER<NR1>|EMEMory|EFILE}  
[SOURce[1|2]]:FM:INTernal:FUNCTion?
```

Arguments

USER<NR1>|EMEMory

<NR1> specifies the user waveform memory location, can be any number from 0 to 15.

A user defined waveform saved in the user waveform memory or the EMEMory can be selected as a modulating signal.

EFILE

EFILE is used as a modulating signal.

Returns

SIN|SQU|RAMP|PRN|USER<NR1>|EMEMory|EFILE

Examples

SOURce1:FM:INTernal:FUNCTion SQUare

selects Square as the shape of modulating waveform for the CH1 output.

[SOURce[1|2]]:FM:INTernal:FUNCTion:EFILE

This command sets or queries an EFILE name used as a modulating waveform for FM modulation. A file name must be specified in the mass storage system. This command returns " " if there is no file in the mass storage.

Syntax

[SOURce[1|2]]:FM:INTernal:FUNcTion:EFILe <file_name>
[SOURce[1|2]]:FM:INTernal:FUNcTion:EFILe?

Arguments

<file_name>::=<string> specifies a file name in the mass storage system. The <file_name> includes path. Path separators are forward slashes (/).

Returns

<file_name>

Examples

SOURce1:FM:INTernal:FUNcTion:EFILe "TEST"
sets a file named "TEST" in the mass storage.

[SOURce[1|2]]:FM:SOURce

This command sets or queries the source of modulating signal of FM modulation for the specified channel.

Syntax

[SOURce[1|2]]:FM:SOURce [INTernal|EXTernal]
[SOURce[1|2]]:FM:SOURce?

Arguments

INTernal means that the carrier waveform is modulated with the internal source.
EXTernal means that the carrier waveform is modulated with an external source.

Returns

INT|EXT

Examples

SOURce1:FM:SOURce INTernal
sets the CH1 source of modulating signal to internal.

[SOURce[1|2]]:FM:STATe

This command enables or disables FM modulation. The query returns the state of FM modulation.

Syntax

[SOURce[1|2]]:FM:STATe {ON|OFF|<NR1>}
[SOURce[1|2]]:FM:STATe?

Arguments

ON or <NR1>≠0 enables FM modulation.
OFF or <NR1>=0 disables FM modulation.

Returns

<NR1>

Examples

SOURce1:FM:STATe ON
enables the CH1 FM modulation.

[SOURce[1|2]]:FREQuency:CENTer

This command sets or queries the center frequency of sweep for the specified channel. This command is always used with the [SOURce[1|2]]:FREQuency:SPAN command. The setting range of center frequency depends on the waveform selected for sweep.

Syntax

[SOURce[1|2]]:FREQuency:CENTer {<frequency>|MINimum|MAXimum}
[SOURce[1|2]]:FREQuency:CENTer? {MINimum|MAXimum}

Arguments

<frequency>::=<NRf>[<units>]

where:

<NRf> is the center frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

SOURce1:FREQuency:CENTer 550kHz
sets the CH1 center frequency to 550 kHz.

[SOURce[1|2]]:FREQUency:CONCurent

This command enables or disables the function to copy the frequency (or period) of one channel to another channel.

The[SOURce[1|2]]:FREQUency:CONCurent command copies the frequency (or period) of the channel specified by the header suffix to another channel. If you specify CH1 with the header, the CH1 frequency will be copied to CH2.

When the concurrent copy function is enabled, the FreqLock function is also enabled automatically. Use general knob to adjust frequency (or period) of the two channels synchronously.

The[SOURce[1|2]]:FREQUency:CONCurent? command returns "0" (off) or "1" (on).

Syntax

```
[SOURce[1|2]]:FREQUency:CONCurent {ON|OFF|<NR1>}  
[SOURce[1|2]]:FREQUency:CONCurent?
```

Arguments

ON or <NR1>≠0 enables the concurrent copy function.

OFF or <NR1>=0 disables the concurrent copy function.

Returns

<NR1>

Examples

```
SOURce1:FREQUency:CONCurent ON  
copies the frequency value of CH1 to CH2.
```

[SOURce[1|2]]:FREQUency[:FIXed]

This command sets or queries the frequency of output waveform for the specified channel. The setting range of output frequency depends on the type of output waveform. If you change the type of output waveform, it might change the output frequency because changing waveform types impacts on the setting range of output frequency. The resolution is 1 μHz or 12 digits.

Syntax

```
[SOURce[1|2]]:FREQUency[:FIXed] {<frequency>|MINimum|MAXimum}  
[SOURce[1|2]]:FREQUency[:FIXed]? {MINimum|MAXimum}
```

Arguments

<frequency>::=<NRf>[<units>]

where:

<NRf> is the output frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

SOURce1:FREQuency:FIXed 500kHz
sets the CH1 output frequency to 500 kHz.

[SOURce[1|2]]:FREQuency:SPAN

This command sets or queries the span of frequency sweep for the specified channel. This command is always used with the [SOURce[1|2]]:FREQuency:CENTer command. The setting range of frequency span depends on the waveform selected for sweep.

Syntax

[SOURce[1|2]]:FREQuency:SPAN {<frequency>|MINimum|MAXimum}

[SOURce[1|2]]:FREQuency:SPAN? {MINimum|MAXimum}

Arguments

<frequency>::=<NRf>[<units>]

where:

<NRf> is the frequency span.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

SOURce1:FREQuency:SPAN 900 kHz
sets the CH1 frequency span to 900 kHz.

[SOURce[1|2]]:FREQuency:START

This command sets or queries the start frequency of sweep for the specified channel. This

command is always used with the [SOURCE[1|2]]:FREQUENCY:STOP command. The setting range of start frequency depends on the waveform selected for sweep.

Syntax

```
[SOURCE[1|2]]:FREQUENCY:START {<frequency>|MINimum|MAXimum}  
[SOURCE[1|2]]:FREQUENCY:START? {MINimum|MAXimum}
```

Arguments

<frequency>::=<NRf>[<units>]

where:

<NRf> is the start frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

```
SOURCE1:FREQUENCY:START 10kHz
```

sets the sweep start frequency of CH1 to 10 kHz.

[SOURCE[1|2]]:FREQUENCY:STOP

This command sets or queries the stop frequency of sweep for the specified channel. This command is always used with the [SOURCE[1|2]]:FREQUENCY:START command. The setting range of stop frequency depends on the waveform selected for sweep.

Syntax

```
[SOURCE[1|2]]:FREQUENCY:STOP {<frequency>|MINimum|MAXimum}  
[SOURCE[1|2]]:FREQUENCY:STOP? {MINimum|MAXimum}
```

Arguments

<frequency>::=<NRf>[<units>]

where:

<NRf> is the stop frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

```
SOURCE1:FREQUENCY:STOP 100kHz
```

sets the stop frequency of CH1 to 100 kHz.

[SOURce[1|2]]:FSKey[:FREQuency]

This command sets or queries the hop frequency of FSK modulation for the specified channel.

Syntax

```
[SOURce[1|2]]:FSKey[:FREQuency] {<frequency>|MINimum|MAXimum}  
[SOURce[1|2]]:FSKey[:FREQuency]? {MINimum|MAXimum}
```

Arguments

<frequency>::=<NRf>[<units>]

where:

<NRf> is the hop frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

```
SOURce1:FSKey:FREQuency 1.0MHz
```

sets the hop frequency of CH1 FSK modulation to 1.0 MHz.

[SOURce[1|2]]:FSKey:INTernal:RATE

This command sets or queries the internal modulation rate of FSK modulation for the specified channel. Use this command when the internal modulation source is selected.

Syntax

```
[SOURce[1|2]]:FSKey:INTernal:RATE {<rate>|MINimum|MAXimum}  
[SOURce[1|2]]:FSKey:INTernal:RATE? {MINimum|MAXimum}
```

Arguments

<rate>::=<NRf>[<units>]

where:

<NRf> is the modulation rate.

<units>::=[Hz|kHz|MHz]

Returns

<rate>

Examples

SOURce1:FSKey:INTernal:RATE 50Hz
sets the CH1 internal FSK modulation rate to 50 Hz.

[SOURce[1|2]]:FSKey:SOURce

This command sets or queries the source of modulation signal of FSK modulation for the specified channel.

Syntax

[SOURce[1|2]]:FSKey:SOURce [INTernal|EXTernal]
[SOURce[1|2]]:FSKey:SOURce?

Arguments

INTernal means that the carrier waveform is modulated with an internal source.
EXTernal means that the carrier waveform is modulated with an external source.

Returns

INT|EXT

Examples

SOURce1:FSKey:SOURce INTernal
sets the CH1 source of modulating signal to internal.

[SOURce[1|2]]:FSKey:STATe

This command enables or disables FSK modulation. The query returns the state of FSK modulation. Select a sine, square, ramp, or arbitrary waveform as the carrier waveform.

Syntax

[SOURce[1|2]]:FSKey:STATe {ON|OFF|<NR1>}
[SOURce[1|2]]:FSKey:STATe?

Arguments

ON or <NR1>≠0 enables FSK modulation.
OFF or <NR1>=0 disables FSK modulation.

Returns

<NR1>

Examples

SOURce1:FSKey:STATe ON
enables the CH1 FSK modulation.

[SOURce[1|2]]:3FSKey[:FREQUENCY]

This command sets or queries the hop frequency of 3FSK modulation for the specified channel.

Syntax

[SOURce[1|2]]:3FSKey[:FREQUENCY] <n>,{<frequency>|MINimum|MAXimum}
[SOURce[1|2]]:3FSKey[:FREQUENCY]? <n>,{MINimum|MAXimum}

Arguments

<n>::=<NR1>

where:

<NR1> is the sequence number of hop frequency, which can be 1 or 2.

<frequency>::=<NRf>[<units>]

where:

<NRf> is the hop frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

SOURce1:3FSKey:FREQUENCY 2,1.0MHz
sets the hop frequency 2 of CH1 3FSK modulation to 1.0 MHz.

[SOURce[1|2]]:3FSKey:INTERNAL:RATE

This command sets or queries the internal modulation rate of 3FSK modulation for the specified channel.

Syntax

[SOURce[1|2]]:3FSKey:INTERNAL:RATE {<rate>|MINimum|MAXimum}
[SOURce[1|2]]:3FSKey:INTERNAL:RATE? {MINimum|MAXimum}

Arguments

<rate>::=<NRf>[<units>]

where:

<NRf> is the modulation rate.

<units>::=[Hz|kHz|MHz]

Returns

<rate>

Examples

SOURce1:3FSKey:INTernal:RATE 50Hz

sets the CH1 internal 3FSK modulation rate to 50 Hz.

[SOURce[1|2]]:3FSKey:STATe

This command enables or disables 3FSK modulation. The query returns the state of 3FSK modulation. Select a sine, square, ramp, or arbitrary waveform as the carrier waveform.

Syntax

[SOURce[1|2]]:3FSKey:STATe {ON|OFF|<NR1>}

[SOURce[1|2]]:3FSKey:STATe?

Arguments

ON or <NR1>≠0 enables 3FSK modulation.

OFF or <NR1>=0 disables 3FSK modulation.

Returns

<NR1>

Examples

SOURce1:3FSKey:STATe ON

enables the CH1 3FSK modulation.

[SOURce[1|2]]:4FSKey[:FREQuency]

This command sets or queries the hop frequency of 4FSK modulation for the specified channel.

Syntax

[SOURce[1|2]]:4FSKey[:FREQuency] <n>,{<frequency>|MINimum|MAXimum}

[SOURce[1|2]]:4FSKey[:FREQuency]? <n>,{MINimum|MAXimum}

Arguments

<n>::=<NR1>

where:

<NR1> is the sequence number of hop frequency, which can be 1, 2, or 3.

<frequency>::=<NRf>[<units>]

where:

<NRf> is the hop frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

SOURce1:4FSKey:FREQuency 2,1.0MHz

sets the hop frequency 2 of CH1 4FSK modulation to 1.0 MHz.

[SOURce[1|2]]:4FSKey:INTernal:RATE

This command sets or queries the internal modulation rate of 4FSK modulation for the specified channel.

Syntax

[SOURce[1|2]]:4FSKey:INTernal:RATE {<rate>|MINimum|MAXimum}

[SOURce[1|2]]:4FSKey:INTernal:RATE? {MINimum|MAXimum}

Arguments

<rate>::=<NRf>[<units>]

where:

<NRf> is the modulation rate.

<units>::=[Hz|kHz|MHz]

Returns

<rate>

Examples

SOURce1:4FSKey:INTernal:RATE 50Hz

sets the CH1 internal 4FSK modulation rate to 50 Hz.

[SOURce[1|2]]:4FSKey:STATe

This command enables or disables 4FSK modulation. The query returns the state of 4FSK modulation. Select a sine, square, ramp, or arbitrary waveform as the carrier waveform.

Syntax

```
[SOURce[1|2]]:4FSKey:STATe {ON|OFF|<NR1>}  
[SOURce[1|2]]:4FSKey:STATe?
```

Arguments

ON or <NR1>≠0 enables 4FSK modulation.

OFF or <NR1>=0 disables 4FSK modulation.

Returns

<NR1>

Examples

```
SOURce1:4FSKey:STATe ON  
enables the CH1 4FSK modulation.
```

[SOURce[1|2]]:FUNCTion:EFILe

This command sets or queries an EFILe name used as an output waveform. A file name must be specified in the mass storage system. This command returns “ ” if there is no file in the mass storage.

Syntax

```
[SOURce[1|2]]:FUNCTion:EFILe <file_name>  
[SOURce[1|2]]:FUNCTion:EFILe?
```

Arguments

<file_name>::=<string> specifies a file name in the mass storage system. The <file_name> includes path. Path separators are forward slashes (/).

NOTE: The <file_name> argument is case sensitive.

Returns

<file_name>

Examples

```
SOURce1:FUNCTion:EFILe "TEST"  
sets a file named "TEST" in the mass storage.
```

[SOURce[1|2]]:FUNCTION:RAMP:SYMMetry

This command sets or queries the symmetry of ramp waveform for the specified channel. The setting range is 0.0% to 100.0%.

Syntax

```
[SOURce[1|2]]:FUNCTION:RAMP:SYMMetry {<symmetry>|MINimum|MAXimum}
[SOURce[1|2]]:FUNCTION:RAMP:SYMMetry?
```

Arguments

<symmetry>::=<NR2>[<units>]

where:

<NR2> is the symmetry.

<units>::=PCT

Returns

<symmetry>

Examples

```
SOURce1:FUNCTION:RAMP:SYMMetry 80.5
sets the symmetry of the CH1 ramp waveform to 80.5%.
```

[SOURce[1|2]]:FUNCTION[:SHAPE]

This command sets or queries the shape of the output waveform. When the specified user memory is deleted, this command causes an error if you select the user memory.

Syntax

```
[SOURce[1|2]]:FUNCTION[:SHAPE] {SINusoid|SQUare|PULSe|RAMP
|PRNoise|<Built_in>|USER<NR1>|EMEMory|EFILe}
[SOURce[1|2]]:FUNCTION[:SHAPE]?
```

Arguments

<Built_in>::={DC|AbsSine|AbsSineHalf|AmpALT|AttALT|GaussPulse|NegRamp|NPulse|PPulse|SineTra|SineVer|StairDn|StairUD|StairUp|Trapezia|Heart|Cardiac|LFPulse|Tens1|Tens2|Tens3|EOG|EEG|Pulseilogram|ResSpeed|Ignition|TP2A|ISP|VR|TP1|TP2B|P4|TP5A|TP5B|SCR|Surge|Airy|Besselj|Bessely|Cauchy|X^3|Erf|Erfc|Erfclnv|ErfInv|Dirichlet|ExpFall|ExpRise|Laguerre|Laplace|Legend|Gauss|HaverSine|Log|LogNormal|Lorentz|Maxwell|Rayleigh|Versiera|Weibull|Ln(x)|X^2|Round|Chirp|Rhombus|CosH|Cot|CotH|CotHCon|CotHPro|CscCon|Csc|

CscPro|CscH|CscHCon|CscHPro|RecipCon|RecipPro|SecCon|SecPro|SecH|Sinc|SinH|Sqrt|Tan|TanH|ACos|ACosH|ACot|ACotCon|ACotPro|ACotH|ACotHCon|ACotHPro|Acsc|ACscCon|ACscPro|AcscH|ACscHCon|ACscHPro|Asec|AsecCon|AsecPro|AsecH|ASin|ASinH|ATan|ATanH|Bartlett|BarthannWin|Blackman|BlackmanH|BohmanWin|Boxcar|ChebWin|FlatTopWin|Hamming|Hanning|Kaiser|NuttallWin|ParzenWin|TaylorWin|Triang|TukeyWin|Butterworth|Combin|CPulse|CWPulse|RoundHalf|BandLimited|BlaseiWave|Chebyshev1|Chebyshev2|DampedOsc|DualTone|Gamma|GateVibar|LFMPulse|MCNoise|Discharge|Quake|Radar|Ripple|RoundsPM|StepResp|SwingOsc|TV|Voice|AM|FM|PM|PWM}

NOTE: The arguments defined in <Built_in> can not be abbreviated, all the upper and lower case letters are needed.

This command selects the output waveform of the instrument when Mod, Sweep and Burst are disabled.

This command selects the carrier waveform corresponding to the function when Mod, Sweep or Burst is currently enabled.

If you specify EFILE when there is no EFILE or the EFILE is not yet defined, this command causes an error.

If you change the type of output waveform, it might change the output frequency because changing waveform types impacts the setting range of output frequency.

USER<NR1>|EMEMory

<NR1> specifies the user waveform memory location, can be any number from 0 to 31.

A user defined waveform saved in the user waveform memory or the EMEMory can be selected as an output waveform.

EFILE

EFILE is specified as an output waveform.

Returns

SIN|SQU|PULS|RAMP|PRN|<Built_in>|USER<NR1>|EMEMory|EFILE

Examples

SOURce1:FUNCtion:SHAPE SQUare

selects the shape of CH1 output waveform to square waveform.

[SOURce[1|2]]:HARMonic:AMPL

This command sets or queries the amplitude of the specified order of harmonic.

Syntax

```
[SOURce[1|2]]:HARMonic:AMPL <sn>,<amplitude>|MINimum|MAXimum  
[SOURce[1|2]]:HARMonic:AMPL? <sn>[,MINimum|MAXimum]
```

Arguments

<sn>::=<NR1>

where:

<NR1> is the specified order of harmonic (2 to 16).

<amplitude>::=<NR3>[<units>]

where:

<NR3> is the output amplitude.

<units>::=[mVpp|Vpp]

Returns

<amplitude>

Example

```
:HARMonic:AMPL 2,2.5
```

sets the amplitude of the second order of harmonic to 2.5 Vpp.

```
:HARMonic:AMPL? 2
```

returns 2.500000E+00.

[SOURce[1|2]]:HARMonic:ORDER

This command sets or queries the order of the harmonic.

Syntax

```
[SOURce[1|2]]:HARMonic:ORDER <value>|MINimum|MAXimum  
[SOURce[1|2]]:HARMonic:ORDER? [MINimum|MAXimum]
```

Arguments

<value>::=<NR1>

where:

<NR1> is the order of harmonic (2 to 16).

Returns

<value>

Example

:HARMonic:ORDEr 7

sets the order of the harmonic to 7.

[SOURce[1|2]]:HARMonic:PHASe

This command sets or queries the phase of the specified order of harmonic.

Syntax

[SOURce[1|2]]:HARMonic:PHASe <sn>,<phase>|MINimum|MAXimum

[SOURce[1|2]]:HARMonic:PHASe? <sn>[,MINimum|MAXimum]

Arguments

<sn>::=<NR1>

where:

<NR1> is the specified order of harmonic (2 to 16).

<phase>::=<NR3>[<units>]

where:

<NR3> is the phase of the specified order of harmonic.

<units>::=[RAD|DEG]

If <units> are omitted, RAD is specified automatically. The setting ranges are:

RAD: 0 to +2 PI, relative to phase value

DEG: 0 to +360, relative to phase value

Returns

<phase>

Example

:HARMonic:PHASe 2,90

sets the phase of the second order of harmonic to 90°.

[SOURce[1|2]]:HARMonic:TYPE

This command sets or queries the harmonic type (EVEN, ODD, ALL or USER).

Syntax

[SOURce[1|2]]:HARMonic:TYPe EVEN|ODD|ALL|USER
[SOURce[1|2]]:HARMonic:TYPe?

Arguments

EVEN specifies the harmonic type as even.

ODD specifies the harmonic type as odd.

ALL specifies the harmonic type as all.

USER specifies the harmonic type as user.

Returns

EVEN|ODD|ALL|USER

Example

:HARMonic:TYPe ODD

sets the harmonic type to ODD.

[SOURce[1|2]]:MOD:STATe

This command enables or disables the modulation function for the specified channel. The query returns the state of modulation function.

Syntax

[SOURce[1|2]]:MOD:STATe {ON|OFF|<NR1>}

[SOURce[1|2]]:MOD:STATe?

Arguments

ON or <NR1>≠0 enables the modulation function.

OFF or <NR1>=0 disables the modulation function.

Returns

<NR1>

Examples

SOURce1:MOD:STATe ON

enables the modulation function for the CH1.

[SOURce[1|2]]:OSKey:INTernal:RATE

This command sets or queries the internal modulation rate of OSK modulation for the specified channel.

Syntax

[SOURce[1|2]]:OSKey:INTernal:RATE {<rate>|MINimum|MAXimum}
[SOURce[1|2]]:OSKey:INTernal:RATE? {MINimum|MAXimum}

Arguments

<rate>::=<NRf>[<units>]

where:

<NRf> is the modulation rate.

<units>::=[Hz|kHz|MHz]

Returns

<rate>

Examples

SOURce1:OSKey:INTernal:RATE 50Hz

sets the CH1 internal OSK modulation rate to 50 Hz.

[SOURce[1|2]]:OSKey:STATe

This command enables or disables OSK modulation. The query returns the state of OSK modulation. The carrier waveform can only be a sine wave.

Syntax

[SOURce[1|2]]:OSKey:STATe {ON|OFF|<NR1>}
[SOURce[1|2]]:OSKey:STATe?

Arguments

ON or <NR1>≠0 enables OSK modulation.

OFF or <NR1>=0 disables OSK modulation.

Returns

<NR1>

Examples

SOURce1:OSKey:STATe ON

enables the CH1 OSK modulation.

[SOURCE[1|2]]:OSKey:TIME

This command sets or queries the oscillate period for the OSK modulation for the specified channel.

Syntax

```
[SOURCE[1|2]]:OSKey:TIME {<seconds>|MINimum|MAXimum}  
[SOURCE[1|2]]:OSKey:TIME?
```

Arguments

<seconds>::=<NRf>[<units>]

where:

<NRf> is the oscillate period in seconds.

<units>::=[ns|us|ms|s]

Returns

<seconds>

Examples

```
SOURCE1:OSKey:TIME 100us
```

sets the CH1 OSK oscillate period to 100 us.

[SOURCE[1|2]]:PHASe[:ADJust]

This command sets or queries the phase of output waveform for the specified channel. Set the value in radians or degrees. If no units are specified, the default is RAD. The query returns the value in RAD.

This command is supported when you select a waveform other than DC and Noise.

Syntax

```
[SOURCE[1|2]]:PHASe[:ADJust] {<phase>|MINimum|MAXimum}  
[SOURCE[1|2]]:PHASe[:ADJust]? {MINimum|MAXimum}
```

Arguments

<phase>::=<NR3>[<units>]

where:

<NR3> is the phase of output waveform.

<units>::=[RAD|DEG]

If <units> are omitted, RAD is specified automatically. The setting ranges are:

RAD: 0 to +2 PI, relative to phase value

DEG: 0 to +360, relative to phase value

Returns

<phase>

Examples

SOURce1:PHASe:ADJJust MAXimum

sets the maximum value for the phase of CH1 output waveform.

[SOURce[1|2]]:PHASe:INITiate (No Query Form)

This command synchronizes the phase of CH1 and CH2 output waveforms. The arbitrary generator performs the same operation if you specify either SOURce1 or SOURce2.

Syntax

[SOURce[1|2]]:PHASe:INITiate

Arguments

None

Examples

SOURce1:PHASe:INITiate

synchronizes the phase of CH1 and CH2 output signals.

[SOURce[1|2]]:PM[:DEViation]

This command sets or queries the phase deviation of PM modulation for the specified channel.

Syntax

[SOURce[1|2]]:PM[:DEViation] {<deviation>|MINimum|MAXimum}

[SOURce[1|2]]:PM[:DEViation]? [MINimum|MAXimum]

Arguments

<deviation>::=<NR3>[<units>]

where:

<NR3> is the phase deviation.

<units>::=[RAD|DEG]

If <units> are omitted, RAD is specified automatically. The setting ranges are:

RAD: 0 PI to +1 PI, relative to phase value

DEG: 0 to +180, in 1 degree steps, relative to phase value

Returns

<deviation>

Examples

SOURce1:PM:DEViation MAXimum

sets the maximum value for the CH1 phase deviation of PM modulation.

[SOURce[1|2]]:PM:INTernal:FREQuency

This command sets or queries the internal modulation frequency of PM modulation for the specified channel. Use this command when the internal modulation source is selected.

Set the internal modulation frequency from 2 mHz to 100.00 kHz with resolution of 1 mHz.

Syntax

[SOURce[1|2]]:PM:INTernal:FREQuency {<frequency>|MINimum|MAXimum}

[SOURce[1|2]]:PM:INTernal:FREQuency? [MINimum|MAXimum]

Arguments

<frequency>::=<NRf>[<units>]

where:

<NRf> is the modulation frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

SOURce1:PM:INTernal:FREQuency 10kHz

sets the CH1 internal modulation frequency to 10 kHz.

[SOURce[1|2]]:PM:INTernal:FUNCTion

This command sets or queries the modulating waveform of PM modulation for the specified channel. Use this command when the internal modulation source is selected.

If you specify EFILE when there is no EFILE or the EFILE is not yet defined, this command causes an error.

Syntax

[SOURce[1|2]]:PM:INTernal:FUNCTion {SINusoid|SQUare|RAMP|PRNoise

|USER<NR1>|EMEMory|EFILe}
[SOURce[1|2]]:PM:INTernal:FUNcTion?

Arguments

USER<NR1>|EMEMory

<NR1> specifies the user waveform memory location, can be any number from 0 to 15. A user defined waveform saved in the user waveform memory or the EMEMory can be selected as a modulating signal.

EFILe

EFILe is used as a modulating signal.

Returns

SIN|SQU|RAMP|PRN|USER<NR1>|EMEMory|EFILe

Examples

SOURce1:PM:INTernal:FUNcTion SQUare

selects Square as the shape of modulating waveform for the CH1 output.

[SOURce[1|2]]:PM:INTernal:FUNcTion:EFILe

This command sets or queries an EFILe name used as a modulating waveform for PM modulation. A file name must be specified in the mass storage system. This command returns “ ” if there is no file in the mass storage.

Syntax

[SOURce[1|2]]:PM:INTernal:FUNcTion:EFILe <file_name>

[SOURce[1|2]]:PM:INTernal:FUNcTion:EFILe?

Arguments

<file_name>::=<string> specifies a file name in the mass storage system. The <file_name> includes path. Path separators are forward slashes (/).

Returns

<file_name>

Examples

SOURce1:PM:INTernal:FUNcTion:EFILe “TEST”

sets a file named “TEST” in the mass storage.

[SOURce[1|2]]:PM:SOURce

This command sets or queries the source of modulation signal of PM modulation for the specified channel.

Syntax

```
[SOURce[1|2]]:PM:SOURce [INTernal|EXTernal]  
[SOURce[1|2]]:PM:SOURce?
```

Arguments

INTernal means that the carrier waveform is modulated with an internal source.

EXTernal means that the carrier waveform is modulated with an external source.

Returns

INT|EXT

Examples

```
SOURce1:PM:SOURce INTernal  
sets the CH1 source of modulating signal to internal.
```

[SOURce[1|2]]:PM:STATe

This command enables or disables PM modulation. The query returns the state of PM modulation. Select a sine, square, ramp, or arbitrary waveform as the carrier waveform.

Syntax

```
[SOURce[1|2]]:PM:STATe {ON|OFF|<NR1>}  
[SOURce[1|2]]:PM:STATe?
```

Arguments

ON or <NR1>≠0 enables PM modulation.

OFF or <NR1>=0 disables PM modulation.

Returns

<NR1>

Examples

```
SOURce1:PM:STATe ON  
enables the CH1 PM modulation.
```

[SOURce[1|2]]:PSKey[:DEViation]

This command sets or queries the phase deviation of PSK modulation for the specified channel.

Syntax

```
[SOURce[1|2]]:PSKey[:DEViation] {<deviation>|MINimum|MAXimum}  
[SOURce[1|2]]:PSKey[:DEViation]? [MINimum|MAXimum]
```

Arguments

<deviation>::=<NR3>[<units>]

where:

<NR3> is the phase deviation.

<units>::=[RAD|DEG]

If <units> are omitted, RAD is specified automatically. The setting ranges are:

RAD: 0 PI to +1 PI, relative to phase value

DEG: 0 to +180, in 1 degree steps, relative to phase value

Returns

<deviation>

Examples

```
SOURce1:PSKey:DEViation MAXimum
```

sets the maximum value for the CH1 phase deviation of PSK modulation.

[SOURce[1|2]]:PSKey:INTernal:RATE

This command sets or queries the internal modulation rate of PSK modulation for the specified channel. Use this command when the internal modulation source is selected.

Syntax

```
[SOURce[1|2]]:PSKey:INTernal:RATE {<rate>|MINimum|MAXimum}  
[SOURce[1|2]]:PSKey:INTernal:RATE? {MINimum|MAXimum}
```

Arguments

<rate>::=<NRf>[<units>]

where:

<NRf> is the modulation rate.

<units>::=[Hz|kHz|MHz]

Returns

<rate>

Examples

SOURce1:PSKey:INTernal:RATE 50Hz
sets the CH1 internal modulation rate to 50 Hz.

[SOURce[1|2]]:PSKey:SOURce

This command sets or queries the source of modulation signal of PSK modulation for the specified channel.

Syntax

[SOURce[1|2]]:PSKey:SOURce [INTernal|EXTernal]
[SOURce[1|2]]:PSKey:SOURce?

Arguments

INTernal means that the carrier waveform is modulated with an internal source.
EXTernal means that the carrier waveform is modulated with an external source.

Returns

INT|EXT

Examples

SOURce1:PSKey:SOURce INTernal
sets the CH1 source of modulating signal to internal.

[SOURce[1|2]]:PSKey:STATe

This command enables or disables PSK modulation. The query returns the state of PSK modulation. Select a sine, square, ramp, or arbitrary waveform as the carrier waveform.

Syntax

[SOURce[1|2]]:PSKey:STATe {ON|OFF|<NR1>}
[SOURce[1|2]]:PSKey:STATe?

Arguments

ON or <NR1>≠0 enables PSK modulation.
OFF or <NR1>=0 disables PSK modulation.

Returns

<NR1>

Examples

SOURce1:PSKey:STATe ON
enables the CH1 PSK modulation.

[SOURce[1|2]]:PULSe:DCYCLE

This command sets or queries the duty cycle of the pulse waveform for the specified channel.

This parameter is related to the pulse width and when any of them is changed, the other will be modified automatically.

The pulse duty cycle is limited by the minimum pulse width and pulse period.

pulse duty cycle $\geq 100\% \times \text{minimum pulse width} \div \text{pulse period}$

pulse duty cycle $\leq 100\% \times (1 - 2 \times \text{minimum pulse width} \div \text{pulse period})$

Syntax

[SOURce[1|2]]:PULSe:DCYCLE {<percent>|MINimum|MAXimum}

[SOURce[1|2]]:PULSe:DCYCLE? [MINimum|MAXimum]

Arguments

<percent>::=<NR2>[<units>]

where:

<NR2> is the duty cycle.

<units>::=PCT

Returns

<percent>

Examples

SOURce1:PULSe:DCYCLE 80.5
sets the duty cycle of the pulse waveform on CH1 to 80.5%.

[SOURce[1|2]]:PULSe:TRANSition[:LEADing]

This command sets or queries the leading edge time of pulse waveform.

Syntax

[SOURce[1|2]]:PULSe:TRANSition[:LEADing] {<seconds>|MINimum|MAXimum}

[SOURce[1|2]]:PULSe:TRANSition[:LEADing]?[MINimum|MAXimum]

Arguments

<seconds>::=<NRf>[<units>]

where

<NRf> is the leading edge time of pulse waveform.

<units>::=[ns|us|ms|s]

Returns

<seconds>

Examples

SOURce1:PULSe:TRANSition:LEADing 200ns

sets the CH 1 leading edge time to 200 ns.

[SOURce[1|2]]:PULSe:TRANSition:TRAILing

This command sets or queries the trailing edge time of pulse waveform.

Syntax

[SOURce[1|2]]:PULSe:TRANSition:TRAILing {<seconds>|MINimum|MAXimum}

[SOURce[1|2]]:PULSe:TRANSition:TRAILing?[MINimum|MAXimum]

Arguments

<seconds>::=<NRf>[<units>]

where

<NRf> is the trailing edge of pulse waveform.

<units>::=[ns|us|ms|s]

Returns

<seconds>

Examples

SOURce1:PULSe:TRANSition:TRAILing 200ns

sets the trailing edge time to 200 ns.

[SOURce[1|2]]:PULSe:WIDTh

This command sets or queries the pulse width for the specified channel.

Syntax

[SOURce[1|2]]:PULSe:WIDTh {<seconds>|MINimum|MAXimum}
[SOURce[1|2]]:PULSe:WIDTh?[MINimum|MAXimum]

Arguments

<seconds>::=<NRf>[<units>]

where

<NRf> is the pulse width.

<units>::=[ns|us|ms|s]

Returns

<seconds>

Examples

SOURce1:PULSe:WIDTh 200ns

sets the CH 1 pulse width to 200 ns.

[SOURce[1|2]]:PWM:INTernal:FREQuency

This command sets or queries the internal modulation frequency of PWM modulation for the specified channel. Use this command when the internal modulation source is selected. Set the internal modulation frequency from 2 mHz to 100.00 kHz with resolution of 1 mHz. Select the source of modulating signal by using the [SOURce[1|2]]:PWM:SOURce [INTernal|EXTernal] command.

Syntax

[SOURce[1|2]]:PWM:INTernal:FREQuency {<frequency>|MINimum|MAXimum}
[SOURce[1|2]]:PWM:INTernal:FREQuency?

Arguments

<frequency>::=<NRf>[<units>]

where <NRf> is the modulation frequency.

<units>::=[Hz|kHz|MHz]

Returns

<frequency>

Examples

SOURce1:PWM:INTernal:FREQuency 10kHz

sets the CH1 internal modulation frequency of PWM modulation to 10 kHz.

[SOURce[1|2]]:PWM:INTernal:FUNCTion

This command sets or queries the modulating waveform of PWM modulation for the specified channel. Use this command when the internal modulation source is selected. If you specify EFILE when there is no EFILE or the EFILE is not yet defined, this command causes an error.

Syntax

```
[SOURce[1|2]]:PWM:INTernal:FUNCTion {SINusoid|SQUare|RAMP|PRNoise  
|USER<NR1>|EMEMory|EFILE}  
[SOURce[1|2]]:PWM:INTernal:FUNCTion?
```

Arguments

SINusoid|SQUare|RAMP|PRNoise

One of four types of function waveform can be selected as a modulating signal.

USER<NR1>|EMEMory

<NR1> specifies the user waveform memory location, can be any number from 0 to 31.

A user defined waveform saved in the user waveform memory or the EMEMory can be selected as a modulating signal.

EFILE

EFILE is used as a modulating signal.

Returns

SIN|SQU|RAMP|PRN|USER<NR1>|EMEMory|EFILE

Examples

```
SOURce1:PWM:INTernal:FUNCTion SQUare
```

selects Square as the shape of modulating waveform of PWM modulation for the CH1 output.

[SOURce[1|2]]:PWM:INTernal:FUNCTion:EFILE

This command sets or queries an EFILE name used as a modulating waveform for PWM modulation. A file name must be specified in the mass storage system. This command returns “ ” if there is no file in the mass storage.

Syntax

```
[SOURce[1|2]]:PWM:INTernal:FUNCTion:EFILE <file_name>  
[SOURce[1|2]]:PWM:INTernal:FUNCTion:EFILE?
```

Arguments

<file_name>::=<string> specifies a file name in the mass storage system. The <file_name> includes path. Path separators are forward slashes (/).

Returns

<file_name>

Examples

SOURce1:PWM:INTernal:FUNctIon:EFILe "TEST"
creates a file named "TEST" in the mass storage.

[SOURce[1|2]]:PWM:SOURce

This command sets or queries the source of modulating signal of PWM modulation for the specified channel.

Syntax

[SOURce[1|2]]:PWM:SOURce [INTernal|EXTernal]
[SOURce[1|2]]:PWM:SOURce?

Arguments

INTernal means that the carrier waveform is modulated with the internal source.
EXTernal means that the carrier waveform is modulated with an external source.

Returns

INT|EXT

Examples

SOURce1:PWM:SOURce INTernal
sets the source of modulating signal on CH1 to internal.

[SOURce[1|2]]:PWM:STATe

This command enables or disables PWM modulation. The query returns the state of PWM modulation. Select only pulse waveform as a carrier waveform for PWM.

Syntax

[SOURce[1|2]]:PWM:STATe {ON|OFF|<NR1>}
[SOURce[1|2]]:PWM:STATe?

Arguments

ON or <NR1>≠0 enables PWM modulation.
OFF or <NR1>=0 disables PWM modulation.

Returns

<NR1>

Examples

SOURce1:PWM:STATe ON
enables the CH1 PWM modulation.

[SOURce[1|2]]:PWM[:DEViation]:DCYCLE

This command sets or queries the PWM deviation in percent for the specified channel.

Syntax

[SOURce[1|2]]:PWM[:DEViation]:DCYCLE {<percent>|MINimum|MAXimum}
[SOURce[1|2]]:PWM[:DEViation]:DCYCLE?

Arguments

<percent>::=<NR2>[<units>]

where:

<NR2> is the PWM deviation.

<units>::=PCT

Returns

<percent>

Examples

SOURce1:PWM:DEViation:DCYCLE 5.0
sets the CH1 PWM deviation to 5.0%.

[SOURce[1|2]]:SWEep:SOURce

This command sets or queries the trigger source in the sweep mode for the specified channel.

Syntax

[SOURce[1|2]]:SWEep:SOURce [TIMER|MANual|EXTernal]

[SOURce[1|2]]:SWEep:SOURce?

Arguments

TIMer specifies an internal clock as the trigger source.

MANual specifies a manual trigger input as the trigger source.

EXTernal specifies an external trigger input as the trigger source.

Returns

TIM|MAN|EXT

Examples

SOURce1:SWEep:SOURce EXTernal

sets an external trigger input as the trigger source in the sweep mode.

[SOURce[1|2]]:SWEep:SPACing

This command selects linear or logarithmic spacing for the sweep for the specified channel.

The query returns the type for the sweep spacing for the specified channel.

Syntax

[SOURce[1|2]]:SWEep:SPACing {LINear|LOGarithmic}

[SOURce[1|2]]:SWEep:SPACing?

Arguments

LINear sets the sweep spacing to linear.

LOGarithmic sets the sweep spacing to logarithmic.

Returns

LIN|LOG

Examples

SOURce1:SWEep:SPACing LINear

sets the CH1 sweep spacing to linear.

[SOURce[1|2]]:SWEep:STATe

This command enables or disables the sweep mode for the specified channel. The query returns the state of sweep mode.

Syntax

[SOURce[1|2]]:SWEep:STATe {ON|OFF|<NR1>}
[SOURce[1|2]]:SWEep:STATe?

Arguments

ON or <NR1>≠0 enables the sweep mode.
OFF or <NR1>=0 disables the sweep mode.

Returns

<NR1>

Examples

SOURce1:SWEep:STATe ON
enables the sweep mode for the CH1.

[SOURce[1|2]]:SWEep:TIME

This command sets or queries the sweep time for the sweep for the specified channel. The sweep time does not include hold time and return time. The setting range is 1 ms to 500 s.

Syntax

[SOURce[1|2]]:SWEep:TIME {<seconds>|MINimum|MAXimum}
[SOURce[1|2]]:SWEep:TIME?

Arguments

<seconds>::=<NRf>[<units>]

where:

<NRf> is the sweep time in seconds.

<units>::=[ns|us|ms|s]

Returns

<seconds>

Examples

SOURce1:SWEep:TIME 100ms
sets the CH1 sweep time to 100 ms.

[SOURce[1|2]]:VOLTage[:LEVel][:IMMediate]:OFFSet

This command sets or queries the offset level for the specified channel.

Syntax

```
[SOURce[1|2]]:VOLTage[:LEVel][:IMMediate]:OFFSet {<voltage>|MINimum|MAXimum}  
[SOURce[1|2]]:VOLTage[:LEVel][:IMMediate]:OFFSet? {MINimum|MAXimum}
```

Arguments

<voltage>::=<NR3>[<units>]

where:

<NR3> is the offset voltage level.

<units>::=[mV|V]

Returns

<voltage>

Examples

SOURce1:VOLTage:LEVel:IMMediate:OFFSet 500mV
sets the CH1 offset level to 500 mV.

[SOURce[1|2]]:VOLTage[:LEVel][:IMMediate][:AMPLitude]

This command sets or queries the output amplitude for the specified channel. The amplitude resolution is 1 mVpp or four digits.

Syntax

```
[SOURce[1|2]]:VOLTage[:LEVel][:IMMediate][:AMPLitude]  
{<amplitude>|MINimum|MAXimum}  
[SOURce[1|2]]:VOLTage[:LEVel][:IMMediate][:AMPLitude]? {MINimum|MAXimum}
```

Arguments

<amplitude>::=<NR3>[<units>]

where:

<NR3> is the output amplitude.

<units>::=[mVpp|Vpp]

Returns

<amplitude>

Examples

SOURce1:VOLTage:LEVel:IMMediate:AMPLitude 1Vpp
sets the CH1 output amplitude to 1 Vpp.

SYSTem:BEEPer[:IMMediate] (No Query Form)

This command causes the instrument to beep immediately. This command is only available when the beeper is enabled.

Syntax

SYSTem:BEEPer[:IMMediate]

Arguments

None

Examples

SYSTEM:BEEPER
causes a beep.

SYSTem:BEEPer:STATe

The SYSTem:BEEPer:STATe command sets the beeper ON or OFF.
The SYSTem:BEEPer:STATe? command returns "0" (OFF) or "1" (ON).
When the beeper is set to ON, the instrument will beep when an error message or a warning message is displayed on the screen. The instrument does not beep when an error or warning caused by remote command execution.

Syntax

SYSTem:BEEPer:STATe {ON|OFF|<NR1>}
SYSTem:BEEPer:STATe?

Arguments

ON or <NR1>≠0 enables the beeper.
OFF or <NR1>=0 disables the beeper.

Returns

<NR1>

Examples

SYSTEM:BEEPER:STATE ON

enables the beeper function.

SYSTem:ERRor[:NEXT]? (Query Only)

This query-only command returns the contents of the Error/Event queue.

Syntax

SYSTem:ERRor[:NEXT]?

Arguments

None

Returns

<Error/event number>::=<NR1>

<Error/event description>::=<string>

Examples

SYSTEM:ERROR:NEXT?

might return the following response:

-201,"Invalid while in local"

If the instrument detects an error or an event occurs, the event number and event message will be returned.

SYSTem:KLOCK[:STATe]

This command locks or unlocks the instrument front panel controls. The query command returns "0" (OFF) or "1" (ON).

Syntax

SYSTem:KLOCK[:STATe] {ON|OFF|<NR1>}

SYSTem:KLOCK[:STATe]?

Arguments

ON or <NR1>≠0 locks front panel controls.

OFF or <NR1>=0 unlocks front panel controls.

Returns

<NR1>

Examples

SYSTEM:KLOCK ON
locks front panel controls.

SYSTem:LANguage

This command sets or queries the language that the instrument uses to display information on the screen.

Different languages may support different types of languages.

Syntax

SYSTem:LANguage
{SCHinese|TCHinese|ENGLish|PORTuguese|GERMan|POLish|KORean|JAPAnese}
SYSTem:LANguage?

Arguments

SCHinese|TCHinese|ENGLish|PORTuguese|GERMan|POLish|KORean|JAPAnese
specifies which language will be used to display instrument information on the screen.

Returns

SCH|TCH|ENGL|PORT|GERM|POL|KOR|JAPA

Examples

SYSTEM:LANGUAGE ENGLish
specifies that the instrument displays information in English.

SYSTem:POWeron

Set the configuration to be used by the instrument at power-on to DEFault or LAsT.

Query the configuration to be used by the instrument at power-on.

Syntax

SYSTem:POWeron [DEFault|LAsT]
SYSTem:POWeron?

Arguments

DEFault means that set the configuration to be used by the instrument at power-on to default setup.

LAsT means that set the configuration to be used by the instrument at power-on to last setup.

Returns

DEF|LAS

Examples

SYSTem:POWeron LAsT

sets the configuration to be used by the instrument at power-on to LAsT.

SYSTem:POWeron?

returns LAS.

SYSTem:RESTART

This command restarts the instrument.

Syntax

SYSTem:RESTART

Arguments

None

Examples

SYSTem:RESTART

restarts the instrument.

SYSTem:VERSion? (Query Only)

This query-only command returns the software version of the instrument.

Syntax

SYSTem:VERSion?

Arguments

None

Returns

<Software Version>::=Vx.x.x

where:

x – indicates the version number.

Examples

SYSTEM:VERSION?
might return V1.2.4.

TRACe|DATA:CATalog? (Query Only)

This query-only command returns the names of user waveform memory and edit memory.

Syntax

TRACe|DATA:CATalog?

Arguments

None

Returns

<string>

A series of strings separated by commas is returned. Each string is enclosed within quotation marks.

Examples

DATA:CATALOG?

might return "USER0","USER2","EMEM"

TRACe|DATA:COPY (No Query Form)

This command copies the contents of edit memory (or user waveform memory) to a specified user waveform memory (or edit memory).

Syntax

TRACe|DATA:COPY <trace_name>,EMEMory

TRACe|DATA:COPY EMEMory,{USER<NR1>}

Arguments

<trace_name>::={USER<NR1>}

<NR1> specifies the user waveform memory location, can be any number from 0 to 31.

Examples

DATA:COPY USER0,EMEMory

copies the waveform data in the edit memory to the user waveform memory USER0.

DATA:COPY EMEMory,USER0

copies the waveform data in the user waveform memory USER0 to the edit memory.

TRACe|DATA[:DATA]

This command transfers the waveform data from the external controller to the edit memory in the instrument. The query returns the binary block data.

Syntax

```
TRACe|DATA[:DATA] EMEMory,<binary_block_data>  
TRACe|DATA[:DATA]? EMEMory
```

Arguments

<binary_block_data>

where <binary_block_data> is the waveform data in binary format.

Returns

<binary_block_data>

Examples

```
DATA:DATA EMEMory,#42000<DAB><DAB>...<DAB>
```

transmits a waveform to the edit memory in the instrument. The block data element #21000 indicates that 2 is the number of digits in 1000 (byte count) and the 1000 bytes of binary data are to be transmitted.

TRACe|DATA[:DATA]:VALue

This command sets or queries the data value at the specified point in the edit memory.

Syntax

```
TRACe|DATA[:DATA]:VALue EMEMory,<point>,<data>  
TRACe|DATA[:DATA]:VALue? EMEMory,<point>
```

Arguments

<point>::=<NR1>

where:

<NR1> is the specified point number in the edit memory.

<data>::=<NRf>

where:

<NRf> is the voltage value for the specified point number.

<units>::=[mV|V]

Returns

<NRf>

Examples

DATA:DATA:VALue EMEMory,200,1.5V

sets the voltage value to 1.5V for the point number 200 in the edit memory.

DATA:DATA:VALue? EMEMory,200

might return "1.5000000+e0".

This example indicates that the voltage value of point number 200 is set to 1.5V.

TRACe|DATA:POINts

This command sets or queries the number of data points for the waveform created in the edit memory.

Syntax

TRACe|DATA:POINts EMEMory[,<points>|MINimum|MAXimum]

TRACe|DATA:POINts? EMEMory{,MIN|MAX}

Arguments

<points>::=<NR1>

where

<NR1> sets the number of points for the waveform created in the edit memory, can be any number from 2 to 100,000.

Returns

<NR1>

Examples

DATA:POINts EMEMory, 500

sets the waveform data points to 500 in the edit memory.

***TRG (No Query Form)**

This command generates a trigger event for both CH1 and CH2.

Syntax

*TRG

Arguments

None

Examples

*TRG

generates a trigger event for both CH1 and CH2.

3. Command Errors

The following table shows the error messages generated by improper command syntax. Check that the command is properly formed and that it follows the rules in the Syntax and Commands.

Command messages

Code	Message
0 (indicates no error)	
-101	Invalid character
-102	Syntax error
-108	Parameter not allowed
-201	Invalid while in local

Error/Event Queue

The event queue is an FIFO queue, which stores events as they occur in the instrument. The event queue can store up to 64 events.

The oldest error code and text are retrieved by using the following command:

```
SYSTem:ERRor[:NEXT]?
```

4. Index

*

*CLS, 3

*IDN?, 10

*RCL, 13

*RST, 14

*SAV, 14

*TRG, 67

[

[SOURCE[1 | 2]]:3FSKey:INTERNAL:RATE, 35

[SOURCE[1 | 2]]:3FSKey:STATE, 36

[SOURCE[1 | 2]]:3FSKey[:FREQUENCY], 35

[SOURCE[1 | 2]]:4FSKey:INTERNAL:RATE, 37

[SOURCE[1 | 2]]:4FSKey:STATE, 38

[SOURCE[1 | 2]]:4FSKey[:FREQUENCY], 36

[SOURCE[1 | 2]]:AM:INTERNAL:FREQUENCY,
15

[SOURCE[1 | 2]]:AM:INTERNAL:FUNCTION, 16

[SOURCE[1 | 2]]:AM:INTERNAL:FUNCTION:EFIL
Le, 16

[SOURCE[1 | 2]]:AM:SOURCE, 17

[SOURCE[1 | 2]]:AM:STATE, 17

[SOURCE[1 | 2]]:AM[:DEPTH], 15

[SOURCE[1 | 2]]:ASKey:INTERNAL:RATE, 19

[SOURCE[1 | 2]]:ASKey:SOURCE, 19

[SOURCE[1 | 2]]:ASKey:STATE, 20

[SOURCE[1 | 2]]:ASKey[:AMPLITUDE], 18

[SOURCE[1 | 2]]:BPSKey:DATA, 20

[SOURCE[1 | 2]]:BPSKey:INTERNAL:RATE, 21

[SOURCE[1 | 2]]:BPSKey:PHASE, 21

[SOURCE[1 | 2]]:BPSKey:STATE, 22

[SOURCE[1 | 2]]:BURSt:GATE:POLarity, 22

[SOURCE[1 | 2]]:BURSt:INTERNAL:PERiod, 23

[SOURCE[1 | 2]]:BURSt:MODE, 23

[SOURCE[1 | 2]]:BURSt:NCYCles, 24

[SOURCE[1 | 2]]:BURSt:SOURCE, 25

[SOURCE[1 | 2]]:BURSt:STATE, 25

[SOURCE[1 | 2]]:FM:INTERNAL:FREQUENCY,
26

[SOURCE[1 | 2]]:FM:INTERNAL:FUNCTION, 27

[SOURCE[1 | 2]]:FM:INTERNAL:FUNCTION:EFIL
e, 27

[SOURCE[1 | 2]]:FM:SOURCE, 28

[SOURCE[1 | 2]]:FM:STATE, 28

[SOURCE[1 | 2]]:FM[:DEVIation], 26

[SOURCE[1 | 2]]:FREQUENCY:CENTer, 29

[SOURCE[1 | 2]]:FREQUENCY:CONCurent,
30

[SOURCE[1 | 2]]:FREQUENCY:SPAN, 31

[SOURCE[1 | 2]]:FREQUENCY:START, 31

[SOURCE[1 | 2]]:FREQUENCY:STOP, 32

[SOURCE[1 | 2]]:FREQUENCY[:FIXed], 30

[SOURCE[1 | 2]]:FSKey:INTERNAL:RATE, 33

[SOURCE[1 | 2]]:FSKey:SOURCE, 34

[SOURCE[1 | 2]]:FSKey:STATE, 34

[SOURCE[1 | 2]]:FSKey[:FREQUENCY], 33

[SOURCE[1 | 2]]:FUNCTION:EFILe, 38

[SOURCE[1 | 2]]:FUNCTION:RAMP:SYMMetr
y, 39

[SOURCE[1 | 2]]:FUNCTION[:SHAPE], 39

[SOURCE[1 | 2]]:HARMonic:AMPL, 41

[SOURCE[1 | 2]]:HARMonic:ORDER, 41

[SOURCE[1 | 2]]:HARMonic:PHASe, 42

[SOURCE[1 | 2]]:HARMonic:TYPE, 42

[SOURCE[1 | 2]]:MOD:STATE, 43

[SOURCE[1 | 2]]:OSKey:INTERNAL:RATE, 43

[SOURCE[1 | 2]]:OSKey:STATE, 44

[SOURCE[1 | 2]]:OSKey:TIME, 45
 [SOURCE[1 | 2]]:PHASe:INITiate, 46
 [SOURCE[1 | 2]]:PHASe[:ADJust], 45
 [SOURCE[1 | 2]]:PM:INTernal:FREQUency,
 47
 [SOURCE[1 | 2]]:PM:INTernal:FUNcTion, 47
 [SOURCE[1 | 2]]:PM:INTernal:FUNcTion:EFILe, 48
 [SOURCE[1 | 2]]:PM:SOURce, 49
 [SOURCE[1 | 2]]:PM:STATe, 49
 [SOURCE[1 | 2]]:PM[:DEViation], 46
 [SOURCE[1 | 2]]:PSKey:INTernal:RATE, 50
 [SOURCE[1 | 2]]:PSKey:SOURce, 51
 [SOURCE[1 | 2]]:PSKey:STATe, 51
 [SOURCE[1 | 2]]:PSKey[:DEViation], 50
 [SOURCE[1 | 2]]:PULSe:DCYCLe, 52
 [SOURCE[1 | 2]]:PULSe:TRANSition:TRAILing,
 53
 [SOURCE[1 | 2]]:PULSe:TRANSition[:LEADin
 g], 52
 [SOURCE[1 | 2]]:PULSe:WIDTh, 53
 [SOURCE[1 | 2]]:PWM:INTernal:FREQUency,
 54
 [SOURCE[1 | 2]]:PWM:INTernal:FUNcTion,
 55
 [SOURCE[1 | 2]]:PWM:INTernal:FUNcTion:EFILe, 55
 [SOURCE[1 | 2]]:PWM:SOURce, 56
 [SOURCE[1 | 2]]:PWM:STATe, 56
 [SOURCE[1 | 2]]:PWM[:DEViation]:DCYCLe,
 57
 [SOURCE[1 | 2]]:SWEep:SOURce, 57
 [SOURCE[1 | 2]]:SWEep:SPACing, 58
 [SOURCE[1 | 2]]:SWEep:STATe, 58
 [SOURCE[1 | 2]]:SWEep:TIME, 59
 [SOURCE[1 | 2]]:VOLTage[:LEVel][:IMMediate]:OFFSet, 60

[SOURCE[1 | 2]]:VOLTage[:LEVel][:IMMediate]:AMPLitude], 60

A

AFGControl:CSCopy, 3

C

COUNter:COUPing, 3

COUNter:DUTYcycle?, 4

COUNter:FREQ?, 4

COUNter:HFR, 5

COUNter:PERiod?, 5

COUNter:PULSewidth?, 6

COUNter:SENSitivity, 6

COUNter:TRIGger, 7

D

DISPlay:BRIGhtness, 7

DISPlay:SAVer:DELay, 8

DISPlay:SAVer:IMMediate, 8

DISPlay:SAVer[:STATe], 9

H

HCOPy:SDUMp:DATA?, 9

HCOPy:SDUMp[:IMMediate], 10

M

MMEMory:CATalog?, 11

MMEMory:CDIRectory, 11

MMEMory:DELeTe, 12

O

OUTPut[1|2]:IMPedance, 12

OUTPut[1|2][:STATe], 13

S

SYSTem:BEEPer:STATe, 61

SYSTem:BEEPer[:IMMEDIATE], 61

SYSTem:ERRor[:NEXT]?, 62

SYSTem:KLOCK[:STATe], 62

SYSTem:LANguage, 63

SYSTem:POWeron, 63

SYSTem:RESTART, 64

SYSTem:VERSion?, 64

T

TRACe|DATA:CATalog?, 65

TRACe|DATA:COPI, 65

TRACe|DATA:POINts, 67

TRACe|DATA[:DATA], 66

TRACe|DATA[:DATA]:VALue, 66