

P 70.19



GPIB Installation Guide


インストールガイド
安裝指南
安裝指南
설치 안내서

ni.com

 NATIONAL
INSTRUMENTS™


Internal Controllers (PCI, PXI, PCI Express, PMC, ISA)

1. Insert the NI-488.2 CD and choose **Install NI-488.2**.

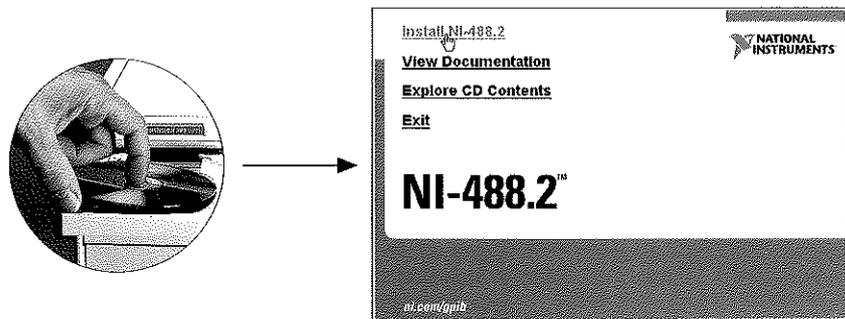


Tip The **View Documentation** link provides access to NI-488.2 documentation, including detailed hardware installation instructions.

2. When you have completed the software installation, **shut down** the computer. Make certain it is powered off before proceeding.

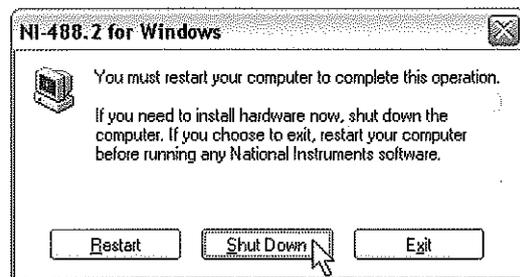


3. Install your GPIB hardware and then power on the computer.


PCI, PCI Express, ISA

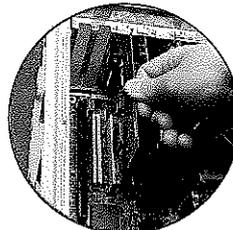

PXI


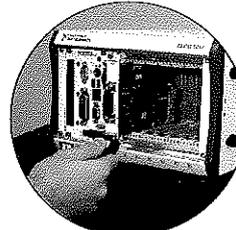


PMC

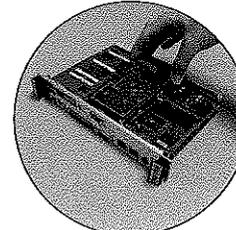


External Controllers (Ethernet, USB, ExpressCard™, PCMCIA)

1. Insert the NI-488.2 CD and choose **Install NI-488.2**.

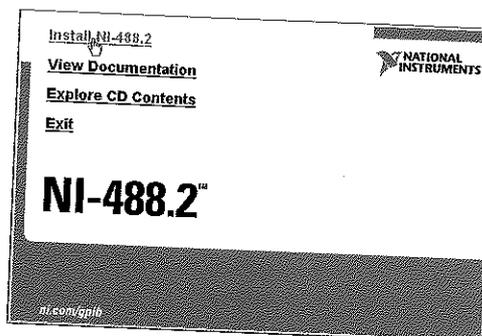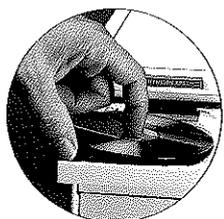


Tip The **View Documentation** link provides access to NI-488.2 documentation, including detailed hardware installation instructions.

2. When you have completed the software installation, **restart** the computer.

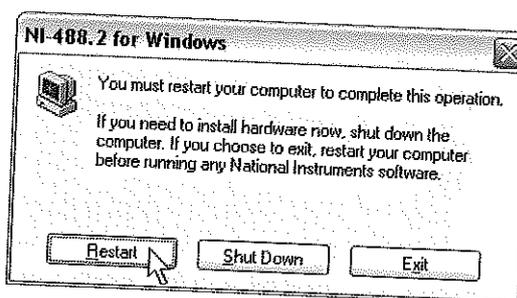


3. Install your GPIB hardware.


Ethernet

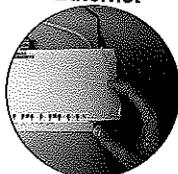

USB

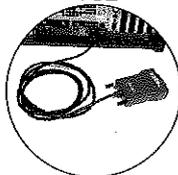


ExpressCard™, PCMCIA

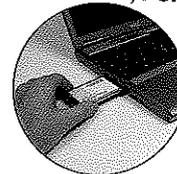

Caution The GPIB devices and the computer must share the same ground potential.

4. **Ethernet Only**

After the computer has restarted, run the Add GPIB-ENET/100 Wizard from the NI-488.2 Hardware Installation program.

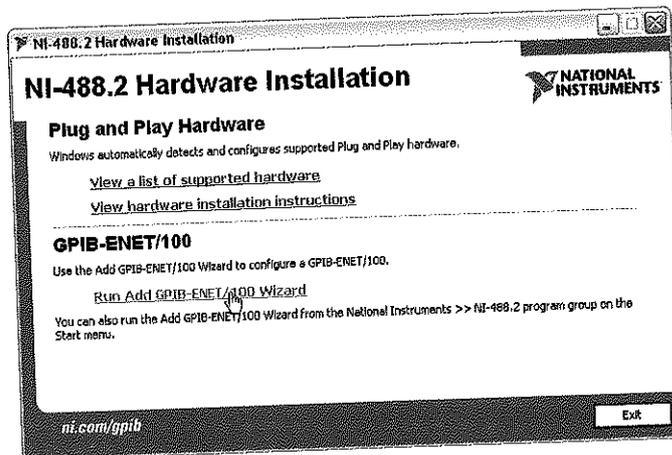

You can also run the Add GPIB-ENET/100 Wizard from the **National Instruments»NI-488.2** program group in the **Start** menu.

5. **Ethernet Only**

Complete the Add GPIB-ENET/100 Wizard to configure your Ethernet interface.

